


8065842

Labeling

FESTO

CP Factory/CP Lab

Original operating
instructions

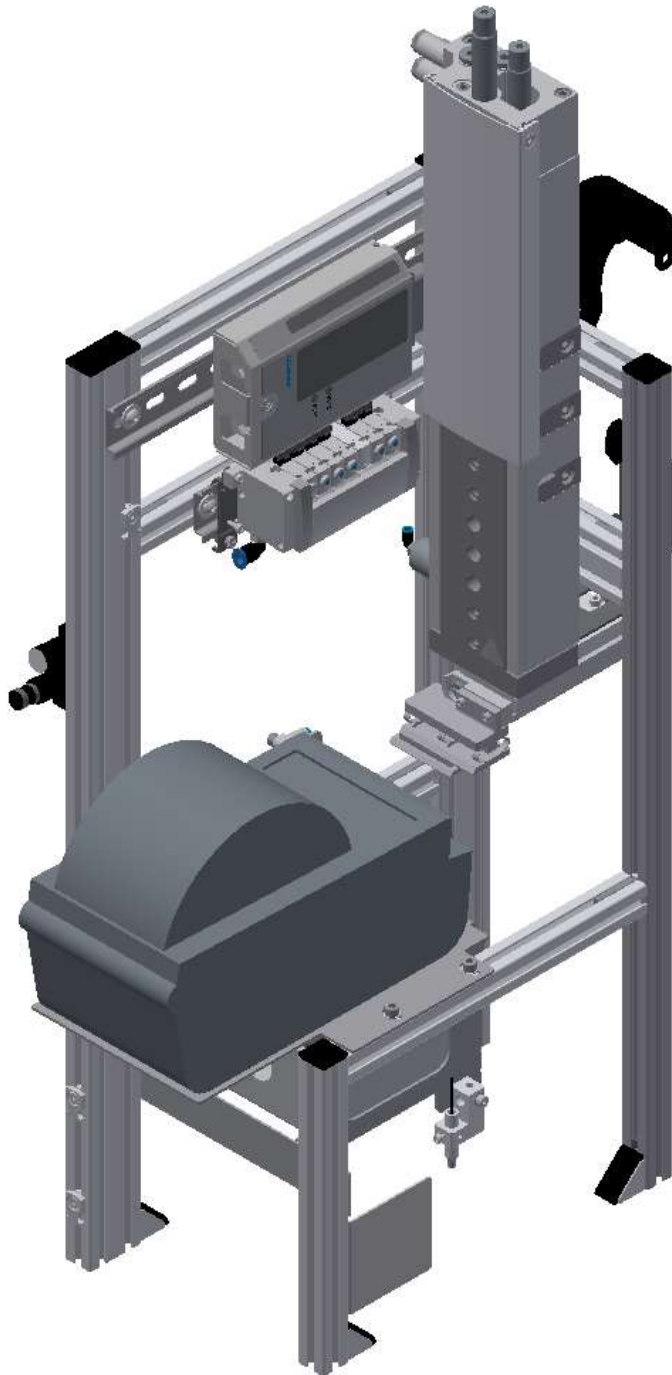

Festo Didactic
8065842 en
03/2022

Order number: 8065842
Revision Level: 03/2022
Authors: Schober, Weiss
Layout: Frank Ebel
File Name: CP-AM-LABEL-GB-8065842-A001.doc

© Festo Didactic SE, Rechbergstr. 3, 73770 Denkendorf, Germany, 2022



+49 711 3467-0



www.festo-didactic.com



+49 711 34754-88500



did@festo.com

Original operating instructions

© 2022 all rights reserved to Festo Didactic SE.



Where only pronouns such as he and him are used in these operating instructions, these pronouns are of course intended to refer to both male and female persons. The use of a single gender (e.g. he, him) should not be construed as gender discrimination; it is intended solely to make the manual easier to read and the formulations easier to understand.

	CAUTION
	<p>These operating instructions must be available to the user at all times. The operating instructions must be read before commissioning. The safety instructions must be observed. Non-observance may result in severe personal injury or damage to property.</p>

Main document

Associated documents attached:

Safety instructions concerning transport (print/electronic)

Component datasheets (print/electronic)

Circuit diagram (print/electronic)

Contents

1	Safety instructions	5
1.1	Warning notice system	5
1.2	Pictograms	6
1.3	General prerequisites for installing the product.....	7
1.4	General prerequisites for operating the devices	7
2	Intended use	8
3	For your safety	9
3.1	Important information	9
3.2	Qualified persons	10
3.3	Obligations of the operating company	10
3.4	Obligations of the trainees	10
4	Basic safety instructions	11
4.1	General information	11
4.2	Mechanical components	11
4.3	Electrical components	12
4.4	Pneumatic components.....	14
4.5	Guarantee and liability for application examples	16
4.6	Cyber security	16
4.7	Additional safety instructions	17
4.8	Guarantee and liability	18
4.9	Transport.....	19
4.10	Name plates	20
4.11	CE Declaration of Conformity	21
4.12	General product safety	24
4.13	Protective devices	25
4.13.1	Emergency stop.....	25
4.13.2	Additional protective devices	25
5	Technical Data	26
6	Design and Function	28
6.1	Transport.....	28
6.2	Overview of the System.....	30
6.3	The application module labeling	31
6.3.1	Electrics	32
6.3.2	Pneumatic	35
6.4	Function	38
6.5	Sequence description.....	38
6.6	Electrical Connections	40
6.6.1	Overview	40
6.6.2	I/O Box XD1	41
7	Commissioning	42
7.1	Workplace	42
7.2	Visual Inspection	43
7.3	Safety Regulations	43
7.4	Assembly.....	44

7.4.1 Assembly of an CP application module to basic module CP Lab Conveyor	45
7.4.2 Connecting the CP application module electrically to basic module CP Lab Conveyor	48
7.4.3 Pneumatic connection from application modules to basic module CP Lab Conveyor (option – not available at all application modules)	50
7.4.4 Assembly of an CP application module to a CP Factory basic module	51
7.4.5 Connecting the CP application module electrically to the CP Factory basic module	54
7.4.6 Pneumatic connection from application modules to CP Factory basic module	55
7.5 Adjusting the sensors.....	56
7.5.1 Through-beam sensor (Workpiece detection)	56
7.5.2 Proximity Switch (X-axis cylinder).....	58
7.5.3 Proximity Switch (Z-axis)	60
7.5.4 Vacuum suction nozzle.....	62
7.6 Adjusting the one-way flow control valves	64
7.7 Adjusting the pressure regulator.....	66
8 Operation	68
8.1 Setting the application module labeling at HMI	68
8.2 Transitions of the application module	74
8.3 Process of the application module	75
8.4 Flow chart.....	76
8.5 Parameter (LABEL)	82
9 Message texts and interactive error messages at the HMI.....	84
9.1 Message texts	85
9.1.1 Message texts of the application module labeling	85
9.2 Interactive error messages	86
9.2.1 Default operation	86
9.2.2 MES Operation	87
9.2.3 General.....	87
9.2.4 Application module labeling.....	87
10 Spare part list	88
10.1 Electric parts	88
10.2 Pneumatic parts	88
11 Service and cleaning	89
12 Further information and updating	90
13 Disposal.....	91








1 Safety instructions

1.1 Warning notice system

These operating instructions contain notes that must be observed for your personal safety and in order to prevent property damage. The notes concerning your personal safety are indicated by a safety symbol.

Notes that only concern property damage are not indicated by a safety symbol.

The notes below are listed in order of hazard level.

	<div style="background-color: #800000; color: white; padding: 5px; text-align: center;">  DANGER </div> <p>... indicates an imminently hazardous situation that will result in fatal or severe personal injury if not avoided.</p>
	<div style="background-color: #D2691E; color: white; padding: 5px; text-align: center;">  WARNING </div> <p>... indicates a potentially hazardous situation which may result in fatal or severe personal injury if not avoided.</p>
	<div style="background-color: #FFD700; color: black; padding: 5px; text-align: center;">  CAUTION </div> <p>... indicates a potentially hazardous situation that may result in moderate or slight personal injury or severe property damage if not avoided.</p>
	<div style="background-color: #0056B3; color: white; padding: 5px; text-align: center;"> NOTE </div> <p>... indicates a potentially hazardous situation that may result in property damage or loss of function if not avoided.</p>

In cases where more than one hazard level applies, the safety note with the highest hazard level will be shown. A safety note may concern both personal injury and property damage.

Hazards that will only result in property damage are indicated with the word "Note".

1.2 Pictograms

This document and the hardware described in it include warnings concerning possible hazards which may arise if the system is used incorrectly.

The following pictograms are used:



Hazard warning



Warning - dangerous electric voltage



Read and observe the operating and safety instructions prior to commissioning.



Switch off the device and unplug the connection for power supply from the plug socket before commencing installation, repair, maintenance or cleaning work.



Warning – hand injuries



Warning – lifting heavy loads



Information and/or references to other documentation

1.3 General prerequisites for installing the product

- Festo Didactic products must only be used for the applications specified in their respective operating instructions. Products or components supplied by other manufacturers must only be used if recommended or approved by Festo.
- The products must be transported, stored, installed, assembled, commissioned, operated and maintained properly in order to ensure their safe operation.
- The approved ambient conditions must be observed. The specifications in the relevant operating instructions must be observed.
- The safety equipment must be tested every working day.
- Connecting cables must be checked for damage before each use. In case of damage, they must be replaced.

Connecting cables must correspond to the minimum specifications.

1.4 General prerequisites for operating the devices

General requirements for safe operation of the system:

- In industrial facilities, the national accident prevention regulations must be observed.
- The laboratory or classroom must be overseen by a supervisor.
 - A supervisor is a qualified electrician or a person who has been trained in electrical engineering, knows the respective safety requirements and safety regulations, and whose training has been documented accordingly.

The laboratory or the classroom must be equipped with the following devices:

- An emergency-off device must be provided.
 - At least one emergency-off device must be located inside the laboratory or the classroom, and at least one outside it.
- The laboratory or classroom must be secured so that the operating voltage and compressed air supply cannot be activated by any unauthorized persons, for example by means of:
 - e.g. a keyswitch
 - e.g. lockable shut off valves
- The laboratory or classroom must be protected by residual current devices (RCDs).
 - RCDs with a differential current of ≤ 30 mA, Type B. When operating machinery with unavoidable leakage current, suitable measures must be implemented and documented in the corresponding workplace risk assessment.
- The laboratory or classroom must be protected by overcurrent protection devices.
 - Fuses or circuit breakers
- Devices must not be used if they are damaged or defective.
 - Damaged devices must be barred from further use and removed from the laboratory or classroom.
 - Damaged connecting cables, pneumatic tubing and hydraulic hoses represent a safety risk and must be removed from the laboratory or classroom.
- Safety devices must be checked every working day to ensure that they are fully functional.
- Connecting cables and accessories must be checked for damage before each use.

2 Intended use

Festo Didactic systems and components must only be used:

- For their intended use in teaching and training applications
- When their safety functions are in perfect condition

The components and systems are designed in accordance with the latest technology and recognized safety rules. However, life and limb of the user and third parties may be endangered and the components may be impaired if they are used incorrectly.

The Festo Didactic learning system has been developed and produced exclusively for education and training in the field of automation technology. The training company and/or trainers must ensure that all trainees observe the safety precautions described in these operating instructions.

Training with complex machinery is a highly hazardous activity. The operating company must draw up and document a workplace risk assessment. The trainees must be briefed on all the relevant safety aspects before work commences.

Festo Didactic hereby excludes any and all liability for damages suffered by apprentices, the training company and/or any third parties, which occur during use of the device in situations which serve any purpose other than training and/or vocational education, unless such damages have been caused by Festo Didactic due to malicious intent or gross negligence.

All extensions and accessories must be approved by Festo Didactic, and are only permitted for use for their intended purpose.

The machine fulfils the requirements of the European directives that applied when it was commissioned. Any modification to the machine shall render the manufacturer's CE Declaration of Conformity null and void. The CE Declaration of Conformity must be renewed following each major modification.



3 For your safety

3.1 Important information

Knowledge of the basic safety instructions and safety regulations is a fundamental prerequisite for safe handling and trouble-free operation of Festo Didactic components and systems.

These operating instructions include the most important instructions for safe use of the components and systems. In particular, the safety instructions must be adhered to by all persons who work with these components and systems. Furthermore, all pertinent accident prevention rules and regulations that are applicable at the respective place of use must be adhered to.

	 WARNING
	<ul style="list-style-type: none">• Malfunctions which could impair safety must be eliminated immediately!

	 CAUTION
	<ul style="list-style-type: none">• Improper repairs or modifications may result in unforeseeable operating statuses. Do not carry out any repair or alternation work on components or systems that is not described in these operating instructions.

3.2 Qualified persons

- The product described in these operating instructions is only permitted for operation by persons who are qualified for the task in question in accordance with the operating instructions, especially the safety instructions.
- Qualified persons are defined as persons whose training and experience enables them to recognize risks and avoid potential dangers when working with this product.

3.3 Obligations of the operating company

It is the responsibility of the operating company to ensure that the station is operated safely.

The operating company undertakes to allow only those persons to work with the components and systems who:

- Are familiar with the basic regulations regarding occupational safety, with the safety instructions, and with the accident prevention regulations, and who have been instructed in the use of the components and systems
- Have read and understood the safety chapter and warnings in these operating instructions
- Are qualified to operate the components and systems in question
- Are governed by and trained in suitable organizational measures to ensure safe training

Personnel should be tested at regular intervals to ensure that they are safety-conscious in their work habits.



3.4 Obligations of the trainees

All persons who have been entrusted to work with the components and systems undertake to complete the following steps before beginning work:



- Read the chapter concerning safety and the warnings in these operating instructions
- Familiarize themselves with the basic regulations regarding occupational safety and accident prevention



4 Basic safety instructions

4.1 General information



	 CAUTION
	<ul style="list-style-type: none"> • Trainees must be supervised by an instructor at all times when working with the components and systems. • Observe the specifications included in the technical data for the individual components, and in particular all the safety instructions! • Wear your personal protective equipment (safety goggles, safety shoes). • Never leave objects lying on the top of protective enclosures. Vibrations could cause such objects to fall off.



4.2 Mechanical components

	 WARNING
	<ul style="list-style-type: none"> • Switch off the power supply! <ul style="list-style-type: none"> – Switch off both the operating power and the control power before commencing work on the circuit. – Never reach into the setup unless it is at a complete standstill. – Be aware of potential overtravel times for the actuators. • Risk of injury during troubleshooting! <ul style="list-style-type: none"> – Use a tool such as a screwdriver for actuating sensors.

	 CAUTION
	<ul style="list-style-type: none"> • Risk of burns due to hot surfaces <ul style="list-style-type: none"> – Devices can reach high temperatures during operation, as a result of which they can cause burns if touched. • Measures to take when maintenance is required. <ul style="list-style-type: none"> – Allow the device to cool off before commencing work. – Use suitable personal protective clothing, e.g. safety safety gloves.

4.3 Electrical components



	 WARNING
	<ul style="list-style-type: none"> • Disconnect from all sources of electrical power! <ul style="list-style-type: none"> – Switch off the power supply before working on the circuit. – Please note that electrical energy may be stored in individual components. Further information on this issue is available in the datasheets and operating instructions included with the components. – Warning! Capacitors inside the device may still be charged even after being disconnected from all sources of voltage. • Danger due to malfunction <ul style="list-style-type: none"> – Never place or leave liquids (e.g. drinks) on the station in open containers. – The machine must not be switched on if there is condensation (moisture) on its surface. – Never lay pipes/hoses designed to carry liquid media near the machine. • Electric shock due to connection to unsuitable power supply! <ul style="list-style-type: none"> – When devices are connected to an unsuitable power supply, exposed components can cause dangerous electrical voltage that can lead to severe or fatal injury. – Always use power supplies that provide SELV (safety extra-low voltage) or PELV (protective extra-low voltage) output voltages for all the connections and terminals on the electronics modules. • Electric shock when there is no protective grounding in place <ul style="list-style-type: none"> – If there is no protective grounding terminal in place for a Protection Class I device, or if the protective grounding terminal has not been installed correctly, exposed, conductive parts may carry high voltages, thus causing severe or fatal injury if touched. – Ground the device in accordance with the applicable regulations.



	 WARNING
	<ul style="list-style-type: none"> • Risk of fire due to use of unsuitable power supply <ul style="list-style-type: none"> – If a device is connected to an unsuitable power supply, this can cause components to overheat, leading to a breakout of fire. – Always use limited power supplies (LPSs) for all the connections and terminals on the electronics modules.

**CAUTION**

- **Always ensure that your connecting cables are designed for use with the electrical connections in question.**
- **When laying connecting cables, make sure they are not kinked, sheared or pinched. Cables laid on the floor must be covered with a cable bridge to protect them.**
- **Do not lay cables over hot surfaces.**
 - Hot surfaces are identified with a corresponding warning symbol.
- **Make sure that connecting cables are not subjected to continuous tensile loads.**
- **Devices with a grounding terminal must always be grounded.**
 - If a ground connection (green-yellow laboratory socket) is available, it must always be connected to the protective grounding. The protective grounding must always be connected first (before voltage) and disconnected last (after disconnecting the voltage).
 - Some devices have high leakage current. These devices must be fitted with a grounding conductor for additional grounding.
- **When replacing fuses, always use specified fuses with the correct current rating and tripping characteristics.**
- **The device is not equipped with a built-in fuse unless otherwise specified in the technical data.**
- **Safe operation of the device is not possible in the event of any of the following circumstances:**
 - Visible damage
 - Malfunction
 - Inappropriate storage
 - Incorrect transportSwitch off the power supply immediately.
- **Protect the device to prevent it from being restarted accidentally.**

4.4 Pneumatic components

	 WARNING
	<ul style="list-style-type: none">• Depressurize the system!<ul style="list-style-type: none">– Switch off the compressed air supply before working on the circuit.– Check the system using pressure gauges to make sure that the entire circuit is fully depressurized.– Please note that energy may be stored in reservoirs. Further information on this issue is available in the datasheets and operating instructions included with the components.• Risk of injury when switching on compressed air!<p>Cylinders may advance and retract automatically.</p>• Risk of accident due to advancing cylinders!<ul style="list-style-type: none">– Always position pneumatic cylinders so that the piston rod's working space is unobstructed along its entire stroke range.– Make sure that the piston rod cannot collide with any of the rigid components in the setup.• Risk of accident due to pneumatic tubing slipping off!<ul style="list-style-type: none">– Use shortest barbed tubing connectors possible.– If pneumatic tubing slips off, switch off the compressed air supply immediately.• Do not exceed the maximum permissible pressure of 600 kPa (6 bar).• Do not switch on the compressed air until all the barbed tubing connectors have been connected and secured.• Do not disconnect pneumatic tubing while it is under pressure.<ul style="list-style-type: none">– Do not attempt to seal or plug pneumatic tubing or plug connectors with your hands or fingers.• Check the condition of the condensate in the service unit regularly. If necessary, drain the condensate and dispose of it properly.

	 CAUTION
	<ul style="list-style-type: none">• Setting up pneumatic circuits<ul style="list-style-type: none">– Connect the devices with plastic tubing with an outside diameter of 4 or 6 mm.– Push the pneumatic tubing into the push-in connector as far as it will go.• Dismantling pneumatic circuits<ul style="list-style-type: none">– Switch off the compressed air supply before dismantling the circuit.– Press the blue release ring down so that the tubing can be pulled out.• Noise due to escaping compressed air<ul style="list-style-type: none">– Noise caused by escaping compressed air may damage your hearing. Reduce noise by using mufflers, or wear hearing protection if the noise cannot be avoided.– All of the exhaust ports on the components included in the equipment set are equipped with mufflers. Do not remove these mufflers.

4.5 Guarantee and liability for application examples



The application examples are not legally binding, and we cannot guarantee their completeness in terms of their configuration, their equipment or any events that may occur. The application examples are not representations of any specific customer solution; they are merely intended to illustrate typical tasks for which the product in question could be used. You bear the responsibility for ensuring that the products described here are operated properly. These application examples do not in any way relieve you of your responsibility to ensure that the system is handled safely when it is being used, installed, operated or maintained.

4.6 Cyber security

Note

Festo Didactic offers products with industrial security functions that aid the safe operation of plants, systems, machines and networks. In order to protect plants, systems, machines and networks from cyber threats, a comprehensive industrial security concept must be implemented and continuously updated. Festo's products and services only constitute one part of such a concept.

The customer is responsible for preventing unauthorized access to their plants, systems, machines and networks. Systems, machines and components should only be connected to a company's network or the Internet if and as necessary, and only when the suitable security measures (e.g. firewalls and network segmentation) are in place. Furthermore, Festo's guidelines on suitable security measures should be observed. Festo products and solutions are constantly being developed further in order to make them more secure. Festo strongly recommends that customers install product updates as soon as they become available and always use the latest versions of its products. Any use of product versions that are no longer supported or any failure to install the latest updates may render the customer vulnerable to cyber attacks.

	 WARNING
	<ul style="list-style-type: none"> • Unsecure operating conditions due to software tampering <ul style="list-style-type: none"> – Forms of software tampering (e.g. viruses, Trojans, malware and worms) can lead to unsecure operating conditions in your system, which may in turn lead to severe or fatal injury or property damage. – Keep your software up to date. – Integrate the automation and actuator components into an overarching and comprehensive industrial security concept for the installation or machine in question that is in line with the latest technological developments. – Make sure that all the products you have installed are incorporated into your overarching industrial security concept. – Use suitable measures, such as a virus scanner, to protect files save on exchangeable storage media from malware.

4.7 Additional safety instructions

General requirements for safe operation of the devices:

- Do not lay cables over hot surfaces.
 - Hot surfaces are identified with a corresponding warning symbol.
- Maximum permissible current loads for connector cables and devices must not be exceeded.
 - Always compare the current ratings of the device, the cable and the fuse to ensure that they match.
 - If they do not match, use a separate upstream fuse in order to provide appropriate overcurrent protection.
- Devices with a grounding terminal must always be grounded.
 - If a ground terminal (green-yellow laboratory socket) is available, it must always be connected to protective ground. The protective grounding must always be connected first (before voltage) and disconnected last (after disconnecting the voltage).
- The device is not equipped with a built-in circuit unless otherwise specified in the technical data.



	<p data-bbox="756 797 1027 853" style="text-align: center;"> WARNING</p> <ul style="list-style-type: none">• This product is designed for use in industrial environments, and may cause malfunctions if used in domestic or small commercial environments.
---	---


4.8 Guarantee and liability

Our General Terms and Conditions of Sale and Delivery shall apply at all times. These shall be made available to the operating company no later than upon conclusion of the sales contract. Guarantee and liability claims resulting from personal injury and/or property damage are excluded if they can be traced back to one or more of the following causes:

- Use of the equipment for purposes other than its intended use
- Improper installation, commissioning, operation or maintenance of the system
- Operation of the system with defective safety equipment, or with improperly attached or non-functional safety equipment and protective guards
- Non-compliance with directions included in the operating instructions with regard to transport, storage, installation, commissioning, operation, maintenance and setup of the system
- Unauthorized modifications to the system
- Improperly executed repairs
- Disasters resulting from the influence of foreign bodies and acts of God
- Dust generated during construction work must be kept away from the system (use coverings).
See the Environmental Requirements section (contamination level) for more details.

4.9 Transport

	 WARNING
	<ul style="list-style-type: none">• Danger due to tipping over<ul style="list-style-type: none">– Suitable packaging and transport equipment must be used when transporting the station. The station can be lifted from underneath using a forklift truck. Please note that eccentric centers of gravity can cause the station to tip over.– Stations with attachments at height will have a high center of gravity.– Take care to avoid tipping over during transportation.

	NOTE
	<ul style="list-style-type: none">• Station contains delicate components!<ul style="list-style-type: none">– Take care not to shake during transportation• The station is only permitted for installation on solid, non-vibrating surfaces.<ul style="list-style-type: none">– Make sure that the ground underneath the station has sufficient load-bearing capacity.

4.10 Name plates



Name plate example

Position	Description
1	Type code
2	Material number
3	Production code
4	Technical data
5	Technical data
6	Technical data
7	Safety note
8	Manufacturer address
9	UK importer address
10	Country of origin
11	Internet address service portal
12	CE Mark
13	UKCA mark
14	Warning mark
15	Symbol read manual
16	WEEE Marking
17	QR Code (Type-and serial number)

4.11 CE Declaration of Conformity



(DE) Die alleinige Verantwortung für die Ausstellung dieser Konformitätserklärung trägt der Hersteller. Der beschriebene Gegenstand der Erklärung erfüllt die einschlägigen Harmonisierungsrechtsvorschriften der Union.

(EN) This declaration of conformity is issued under the sole responsibility of the manufacturer. The object of the declaration described is in conformity with the relevant Union harmonisation legislation.

(BG) Настоящата декларация за съответствие е издадена на отговорността на производителя. Предметът на описаната декларация отговаря на съответното законодателство на Съюза за хармонизация.

(CS) Toto prohlášení o shodě se vydává na výhradní odpovědnost výrobce. Popsaný předmět prohlášení je ve shodě s příslušnými harmonizačními právními předpisy Unie.

(DA) Denne overensstemmelseserklæring udstedes på fabrikanterns ansvar. Genstanden for erklæringen, som beskrives, er i overensstemmelse med den relevante EU-harmoniseringslovgivning.

(EL) Η παρούσα δήλωση συμμόρφωσης εκδίδεται με αποκλειστική ευθύνη του κατασκευαστή. Ο περιγραφόμενος αντικείμενο της δήλωσης είναι σύμφωνα με τη σχετική νομοθεσία αρμόδια της Ένωσης.

(ES) La presente declaración de conformidad se expide bajo la exclusiva responsabilidad del fabricante. El objeto de la declaración descrita es conforme con la legislación de armonización pertinente de la Unión.

(ET) Käesolev vastavusdeklaratsioon on välja antud tootja ainuvastutuseel. Kirjeldataud deklareeritav toode on kooskõlas asjaomaste liidu ühtlustamisaktidega.

(FI) Tämä vaatimustenmukaisuusvakuutus on annettu valmistajan yksinomaisella vastuulla. Käytetty vakuutuksen kohde on asiaa koskevan unionin yhdenmukaistamisäätöjä noudatta vaatimusten mukainen.

(FR) La présente déclaration de conformité est établie sous la seule responsabilité du fabricant. L'objet décrit de la déclaration est conforme à la législation d'harmonisation de l'Union applicable.

(HU) Ezt a megfelelőségi nyilatkozatot a gyártó kizárólagos felelőssége mellett adja ki. Az ismertetett nyilatkozat tárgya megfelel a vonatkozó uniós harmonizációs jogszabályoknak.

(IT) La presente dichiarazione di conformità è rilasciata sotto la responsabilità esclusiva del fabbricante. L'oggetto della dichiarazione descritto è conforme alla pertinente normativa di armonizzazione dell'Unione.

(LT) Ši atitikties deklaracija išduota tik gamintojo atsakomybe. Aprašytas deklaracijos objektas atitinka susijusius derinamuosius Sąjungos teisės aktus.

(LV) Šī atbilstības deklarācija ir izdota vienīgi uz ražotāja atbildību. Aprakstītais deklarācijas objekts atbilst attiecīgajam Savienības saskaņošanas tiesību aktam.

(NL) Deze conformiteitsverklaring wordt verstrekt onder volledige verantwoordelijkheid van de fabrikant. Het beschreven voorwerp is in overeenstemming de desbetreffende harmonisatiewetgeving van de Unie.

(PL) Niniejsza deklaracja zgodności wydana zostaje na wyłączną odpowiedzialność producenta. Wymieniony przedmiot niniejszej deklaracji jest zgodny z odpowiednimi wymaganiami unijnego prawaodawstwa harmonizacyjnego.

(PT) A presente declaração de conformidade é emitida sob a exclusiva responsabilidade do fabricante. O objeto da declaração descrito está em conformidade com a legislação aplicável de harmonização da União.

(RO) Prezenta declarație de conformitate este emisă pe răspunderea exclusivă a producătorului. Obiectul descris al declarației este în conformitate cu legislația relevantă de armonizare a Uniunii.

(SK) Toto vyhlásenie o zhode sa vydáva na vlastnú zodpovednosť výrobcu. Uvedený predmet vyhlásenia je v zhode s príslušnými harmonizačnými právnymi predpismi Unie.

(SL) Za ledajo te izjavo o skladnosti je odgovoren izključno proizvajalec. Opisani predmet izjave je v skladu z ustreznimi zakonodajno Unije o harmonizaciji.

(SV) Denna försäkran om överensstämmelse utfärdas på tillverkarens eget ansvar. Föremålet för försäkran överensstämmer med den relevanta harmoniserade unionslagstiftningen.

(TR) Bu Uygunluk Belgesi tamamen üreticinin sorumluluğu altındadır. Belgede açıklanan obje, Birliğin ilgili uyum mevzuatına uygundur.

- EG-Konformitätserklärung
- EU Declaration of Conformity
- Декларация за съответствие на ЕС
- Prohlášení o shodě ES
- EF overensstemmelseserklæring
- Αηκλάρωση συμμόρφωσης ΕΚ
- Declaración de conformidad CE
- EÜ vastavusdeklaratsioon
- EY-vaatimustenmukaisuusvakuutus
- Déclaration CE de conformité
- EK megfelelőségi nyilatkozat
- Dichiarazione di conformità EU
- EB atitikties deklaracija
- EK atbilstības deklarācija
- EG-erklärung van
- overeenstemming
- Deklaracja zgodności WE
- Declaração de conformidade CE
- Declarație de conformitate CE
- Vyhlasenie o zhode ES
- Izjava ES o skladnosti
- EG-försäkran om Överensstämmelse

The installation instructions according to the manual have to be followed. The person authorized to compile the technical documents is Philippe Drolet, Product conformity, Festo Didactic Ltée/Ltd. Canada.

Festo Didactic Ltée/Ltd. · 675 rue du Carbone · Québec, QC G2N 2K7 · CANADA · www.festo-didactic.com

8101137 – DoC0039

FESTO

2022-03-02

8032510	CP-AM-DRILL
8032507	CP-AM-PRESS
8032508	CP-AM-MAG
8032509	CP-AM-TURNOVER
8032511	CP-AM-CAM
8038567	CP-AM-MPRESS
8043598	CP-AM-IDRILL-C21
8050101*	CP-L-LINEAR-C11-M0
8050102*	CP-L-LINEAR-C13-M0
8058667*	CP-L-BRANCH-C21
8061184	CP-AM-OUT
8068413	CP-AM-IPICK-C21
8088783	CP-AM-OVEN-230V
8091107	CP Lab HMI Panel
8092833*	SC CP LAB STD CFG 4
8092834*	SC CP LAB STD CFG 6
8092835*	SC CP LAB STD CFG 8
8092836*	SC CP LAB STD CFG 10
8108237*	CP-L-LINEAR-C11-M6
8129428	CP-Lab/MPS HMI Panel
8132970*	CP-L-LINEAR-C11-M0-V2
8146023*	CP-L-LINEAR-C13-M0-V2
8146024*	CP-L-LINEAR-C11-M6-V2
8152450	CP-AM-LABEL-V2
8154245	CP-AM-MEASURE-V2
8155207	CP-AM-CAM-V2
8167762*	CP-L-LINEAR-C11-M0 V2
8167762*	CP-L-LINEAR-C11-M0 V2
8167764*	CP-L-LINEAR-C11-M6 V2
8172797*	CP-L-LINEAR-NO-PLC-M0
2006/42/EC	EN 60204-1:2018
2014/30/EU	EN 61326-1:2013-01
2011/65/EU	EN 63000:2016-10
2014/53/EU*	See Appendix A for details



Festo Didactic Ltée/Ltd

675 rue du Carbone
 Québec, QC G2N 2K7
 Canada
 www.festo-didactic.com

Francis Larrivée
 Francis Larrivée, Ing.
 Engineering

Philippe Drolet
 Philippe Drolet, Ing.
 Product Compliance

Appendix A:

Extracted from: Siemens EU-Declaration of Conformity No. A5E50679864A; REV.: 001 /
[CE-DoC_A5E50679864A_RF200R_RF300R_RED_RoHS_2020-12-11.pdf \(siemens.com\)](#)



Anhang RED & RoHS / Annex RED & RoHS
 zur EU-Konformitätserklärung / to EU-Declaration of Conformity

Nr./No. A5E50679864A; REV.: 001

Produktgruppenbezeichnung/-modell SIMATIC RF200R / RF300R HF RFID READERS
 Product group identification/-model (13.56 MHz)

Die Übereinstimmung der bezeichneten Produkte (unter Verwendung des Zubehörs) des oben genannten Gegenstandes mit den Vorschriften der angewandten Richtlinie(n) wird nachgewiesen durch die vollständige Einhaltung folgender Normen / Vorschriften (variantenabhängig, siehe Anhang Produkte - Tabelle 1. Angewandte Normen werden durch ein „x“ gekennzeichnet, wofür nicht angewandte Normen durch ein „-“ gekennzeichnet werden.)
 The conformity of the designated products (using the accessory) of the object described above with the provisions of the applied Directive(s) is proved by full compliance with the following standards / regulations (depending on versions, see annex Products - Table 1. Applicable Standards are marked by a "x" whereas not applicable Standards are marked by a "-").

Art. 3(1) a) Schutz der Gesundheit und Sicherheit - Normen / Health and Safety - standards.

Referenznummer Reference number	Ausgabedatum Date of issue	Referenznummer Reference number	Ausgabedatum Date of issue
EN 60984 - X11	20140317	EN 60984	2018

Art. 3(1) b) EMV Normen / EMC standards:

Referenznummer Reference number	Ausgabedatum Date of issue	Referenznummer Reference number	Ausgabedatum Date of issue
ETSI EN 301 489-1	V2.2.3	EN IEC 61004-1	2018
ETSI EN 301 489-3	V2.1.1	EN IEC 61004-2	2018
EN 60711 - A1 - A11	20160217/2023	EN 61004-3 - A1	2007/2011
EN 60320 - A11 Class AB	20150326	EN IEC 61004-4	2018
EN 60320 - A11	20110326	EN IEC 61004-5	2020



Art. 3(2) Effiziente Nutzung des Frequenzspektrums Harmonisierte Normen / Efficient usage of spectrum Harmonized standards:

Referenznummer Reference number	Ausgabedatum Date of issue	Referenznummer Reference number	Ausgabedatum Date of issue
ETSI EN 300 330	V2.1.1		

Art. 3(3) a) Delegierte Rechtsakte für Funkanlagen / Delegated acts for Radio equipment



Referenznummer Reference number	Ausgabedatum Date of issue	Referenznummer Reference number	Ausgabedatum Date of issue
------------------------------------	-------------------------------	------------------------------------	-------------------------------

4.12 General product safety

 WARNING	
	<ul style="list-style-type: none">• General product safety, CE conformity<ul style="list-style-type: none">– The product fulfills the requirements of all applicable EU directives. We confirm this with the CE mark.– As a consequence of Changes (hardware / software) Additions or improper use– Product safety can no longer be guaranteed by the operator.– In this case, the manufacturer's CE declaration of conformity expires. The operator must re-evaluate the safety and determine the CE conformity.

4.13 Protective devices

In order to reduce risks, this machine contains guards to prevent access to dangerous areas. These guards must not be removed or tampered with.

	 WARNING
	<ul style="list-style-type: none">• Damage to the safety window<ul style="list-style-type: none">– Windows must not be cleaned using aggressive or alcoholic cleaning agents. Risk of brittleness and breakage!– This protective device must be replaced if it shows any signs of damage. Please contact our Service department to arrange this.

4.13.1 Emergency stop

If a station has an emergency stop button, the emergency stop signal switches off all actuators. An acknowledgment by the operator is required for a restart, there is no automatic restart.

4.13.2 Additional protective devices

The individual components, such as the power supplies and the controllers, possess built-in safety functions such as short-circuit protection, overcurrent protection, overvoltage protection and thermal monitoring. If necessary, consult the instruction manual for the device in question for more information.

5 Technical Data

Parameter	Value
Electrics	
Power supply	24 V DC, 0,2 A safe low voltage (PELV) / Application module 1 AC 100-240 V, 2 A / Printer
Digital inputs	6
Digital outputs	7
Compressed air	
Supply pressure	6 bar, 90 psi
Supply rate	≥ 40 l/min
Compressed air quality	EN ISO 8573-1
Pressure dew point (Class 4)	≤ +3°C
Ambient conditions	
Operating environment	Use inside building only
Ambient temperature	5°C ... 40°C
Rel. air humidity	80% up to 31°C
Pollution degree	2, Dry, non-conductive contamination
Operating height	Up to 2000 m above NN (sea level)
Noise emission level	L _{pA} < 70 dB
Certification	
CE marking in accordance with:	Machinery Directive EMC Directive RoHS Directive
EMC environment	Industrial environment, Class A (in acc. with EN 55011)
Measurements	
Length	434 mm
Width	198 mm
Height	766 mm
Weight	Approx 11 kg
Subject to change	

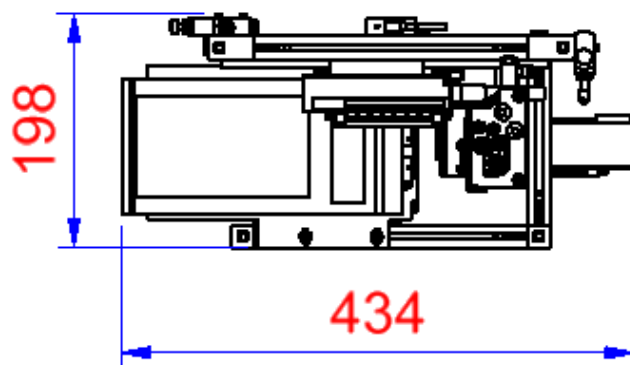
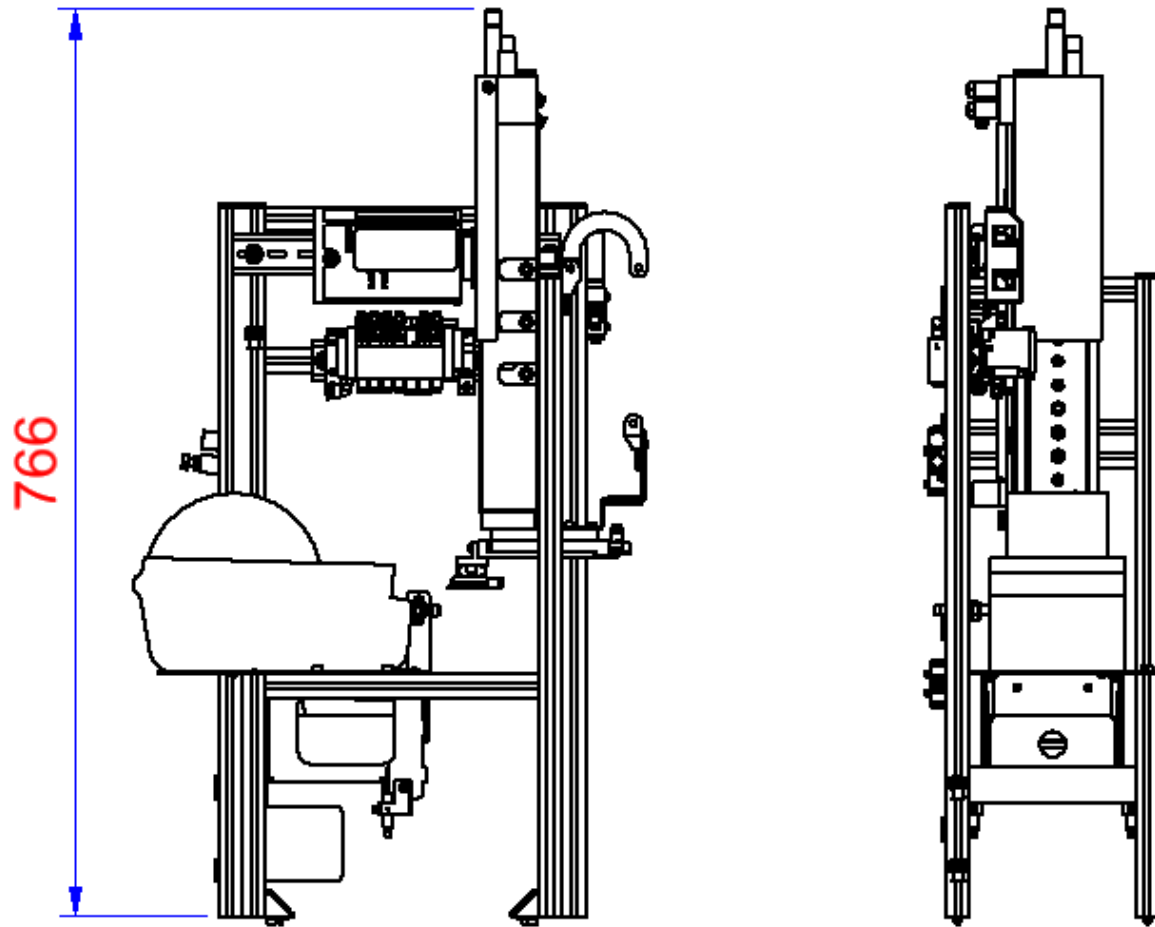








Illustration similar

6 Design and Function

6.1 Transport

	 WARNING
	<ul style="list-style-type: none"> • Damage to transport equipment when moving heavy machines/machine sections <ul style="list-style-type: none"> – When the stations are shipped out, extra care must be taken to ensure that heavy machines/machine sections are always transported using a suitable forklift truck. A single station can weigh up to 50 kg. – Always use suitable transport equipment. – Always use the lifting points provided to move the machine/machine sections. – Always use the designated load take-up point.

	 WARNING
	<ul style="list-style-type: none"> • Securing transit routes <ul style="list-style-type: none"> – The supply routes must be cleared prior to transport, and must be suitable for the forklift truck to pass through. If necessary, warning signs or barrier tape must be set up to keep the routes clear. • Caution <ul style="list-style-type: none"> – When opening transport boxes, care must be taken to ensure that any additional components delivered in the same box, such as computers, do not fall out.

	 WARNING
	<ul style="list-style-type: none"> • Danger of crushing for hands/feet <ul style="list-style-type: none"> – It is not permitted to grip onto or under the feet when handling the machine, as there is an increased risk of hands or feet getting crushed or trapped in these areas. – When setting down the station, make sure no persons have their feet under the machine's feet.


**NOTE**

- When opening the transport box, any additional components must be secured to prevent them from falling out, and removed first.
- Once this is done, the transport box can be removed/opened up fully, and the station can be taken out and moved to its intended location.
- Care must be taken with all components projecting from the machine, as sensors and similar small parts can easily be damaged if the machine is not transported correctly.
- Check that all the profile connectors are seated correctly using a size 4 – 6 Allen key. Unavoidable vibrations can loosen the connectors during transport.

6.2 Overview of the System

CP Lab Conveyor, CP Factory Linear, CP Factory Shunt and CP Factory Bypass are called basic modules. If an application module, e.g. the CP Application Module muscle press is attached to a basic module, it becomes a station.

Example

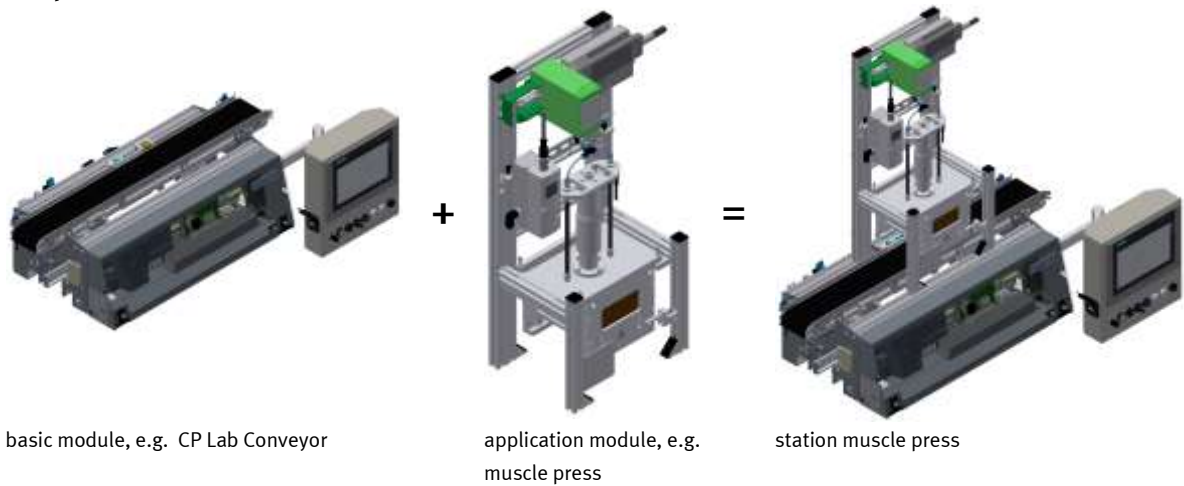


If several stations are put in a row one behind the other, this will form a production line.



Carriers are transported on the conveyors of the basic modules. And on the carriers, there are pallets with a fixed workpiece reception placed. The workpieces are placed on the workpiece reception or taken from it. Pallets can also be placed on a carrier in some stations or gripped from there.

The typical workpiece of a CP Factory/Lab System is the roughly simplified version of a mobile phone. The workpiece consists of a front cover, of a back cover, of a board and of a maximum of two fuses.

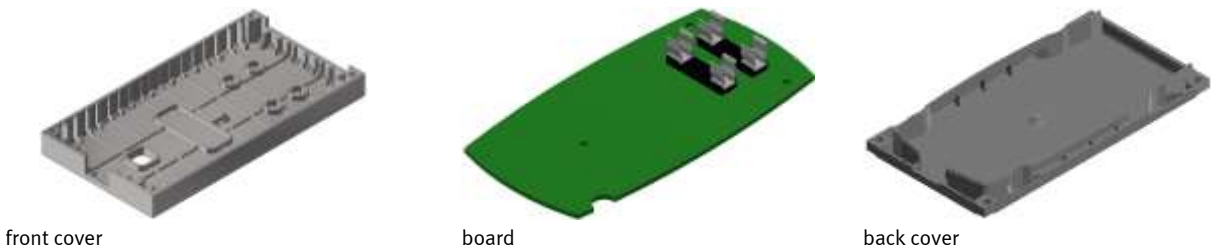

6.3 The application module labeling

The application module labeling is designed for

- Make a label on a workpiece.

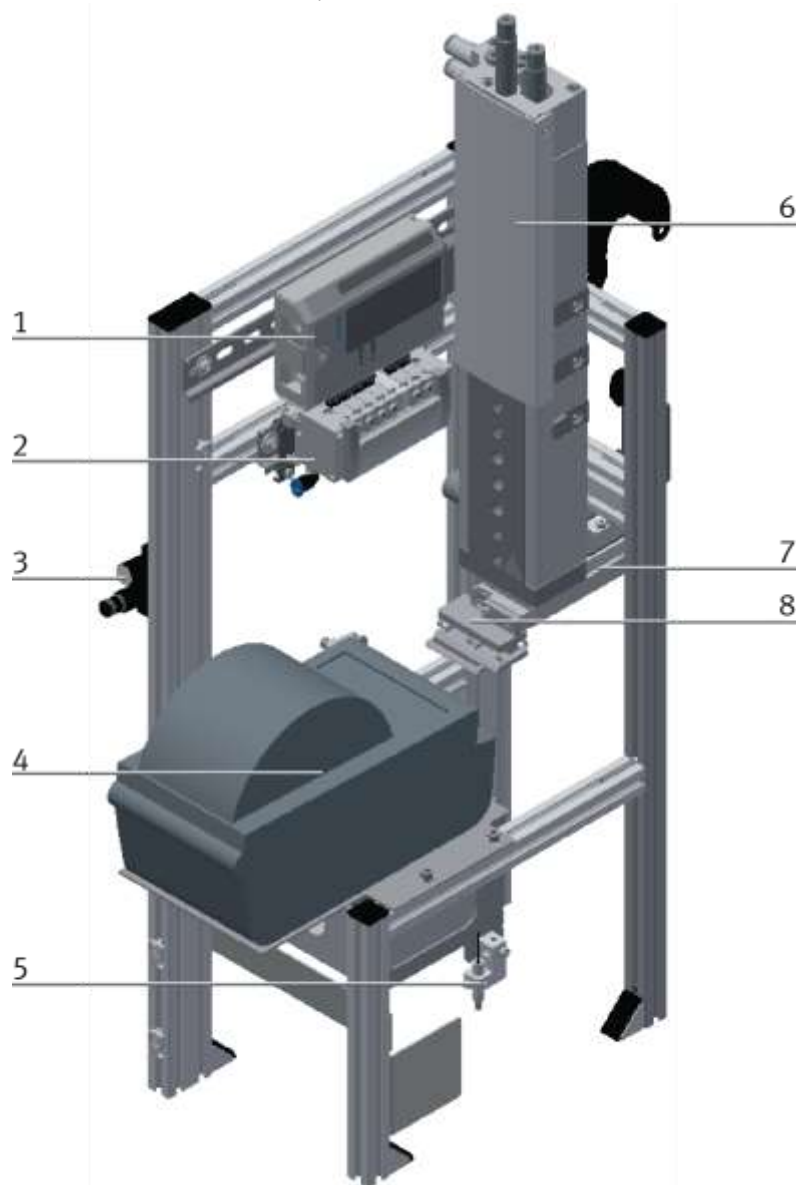


Illustration similar

Position	Designation
1	I/O module
2	Valve terminal
3	Pressure control valve for vacuum
4	Label printer
5	Sensor workpiece detection front side
6	Cylinder Z-axis
7	Mini slide X-axis
8	Connection plate / Vacuum nozzle

6.3.1 Electrics

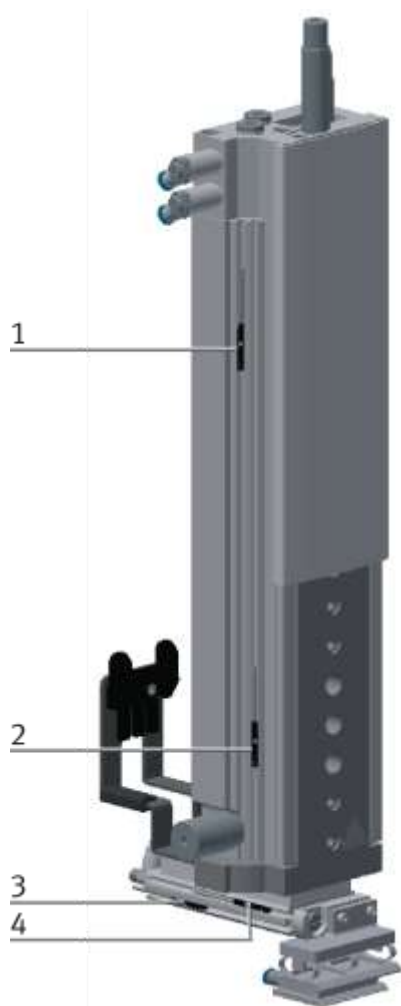


Illustration similar

Position	Description	Part number	Res.Ident	Use
1	Proximity sensor SMT-10M-PS-24V-E-2,5-L-OE	551373	BG3	Z-axis upper end position
2	Proximity sensor SMT-10M-PS-24V-E-2,5-L-OE	551373	BG4	Z-axis lower end position
3	Proximity sensor SMT-10M-PS-24V-E-2,5-L-OE	551373	BG3	X-axis back end position
4	Proximity sensor SMT-10M-PS-24V-E-2,5-L-OE	551373	BG4	X-axis pick up label position


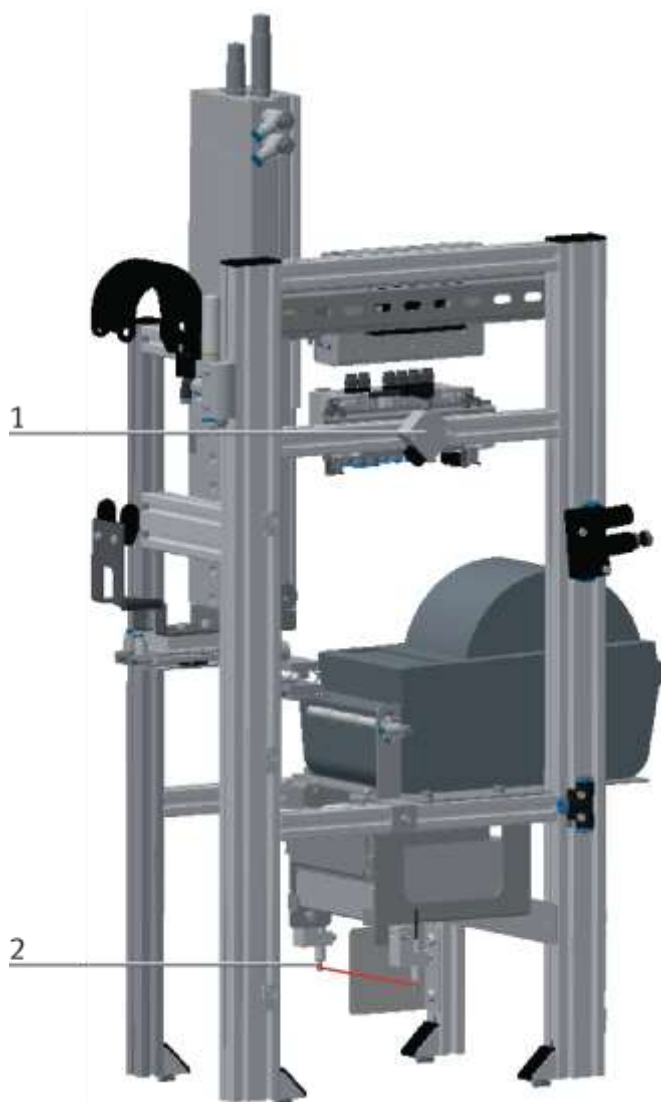


Illustration similar

Position	Description	Part number	Res.Ident	Use
1	Light guide unit D: SOEG-L-Q30-P-A-S-2L	8127556	BG5	Workpiece available
2	Light guide SOOC-TB-M4-2-R25	552812	BG5	Workpiece available




I/O module XD1 part number 8027412 – illustration similar

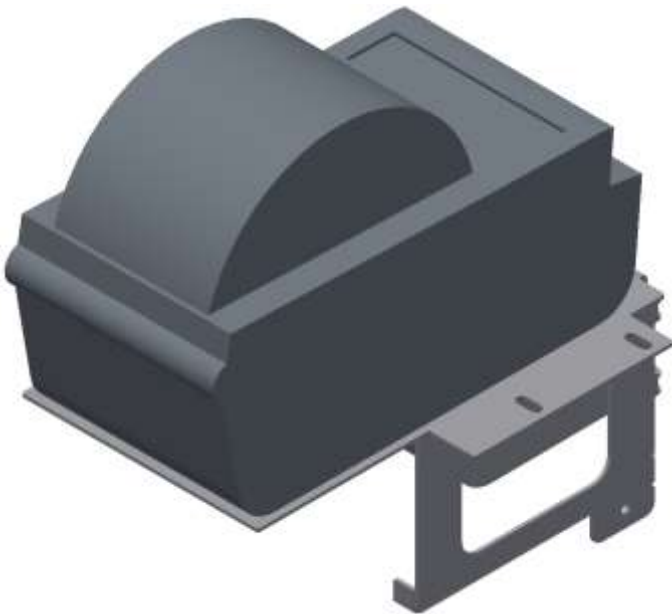

Zebra label printer ZD410 - PH1 / part number ZEB.ZD410 – illustration similar

6.3.2 Pneumatic

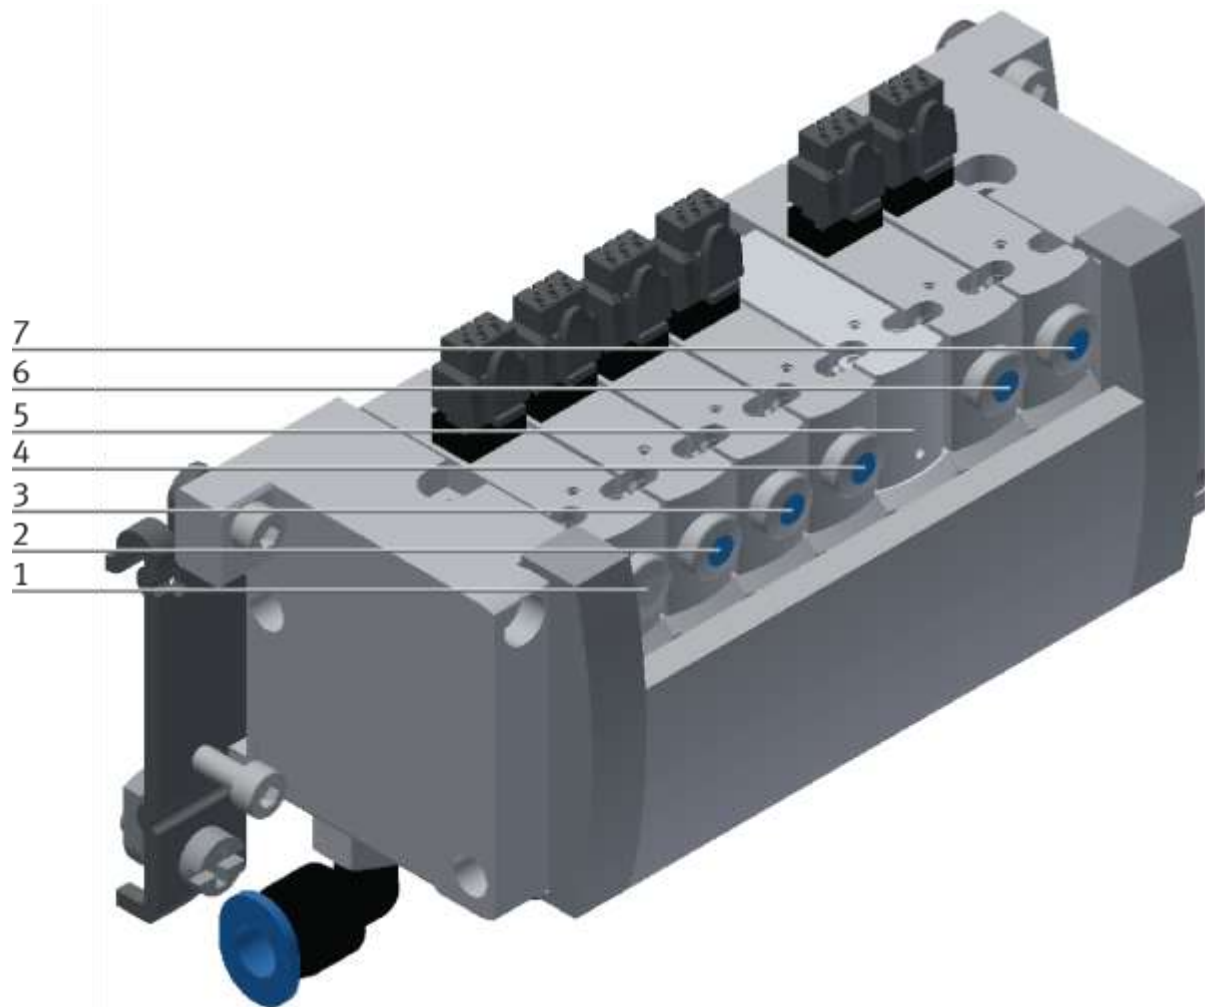

Valve terminal CPVSC1 / part number 525675 – illustration similar

Position	Description	Part number	Res.Ident	Use
1	Valve CPVSC1-M-M5	548901	MB 1	Move out X-axis
2	Valve CPVSC1-K-M5C	548899	MB 3	Move Z-axis upwards
3	Valve CPVSC1-K-M5C	548899	MB 4	Move Z-axis downwards
4	Valve CPVSC1-K-M5C	548899	MB 5	Open cylinder clamping unit
5	Plate CPVSC1-SP-M5	527532	XL10	
6	Valve CPVSC1-K-M5C	548899	MB 6	Switch on vacuum
7	Valve CPVSC1-K-M5C	548899	MB 7	Blow

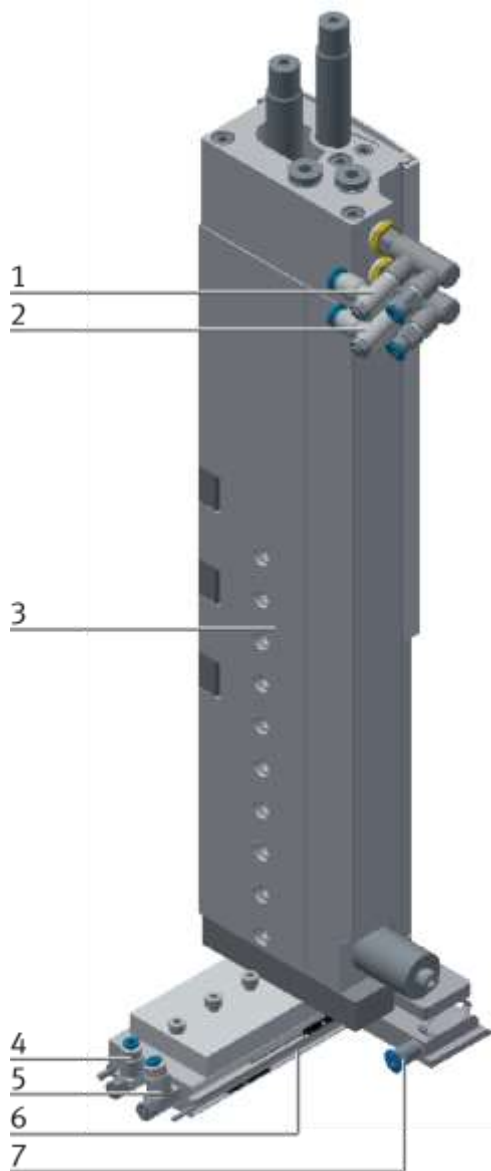


Illustration similar

Position	Description	Part number
1	one-way flow control valve GRLA-M5-QS-4-D with HGL-M5-B	193143 / 530029
2	one-way flow control valve GRLA-M5-QS-4-D with HGL-M5-B	193143 / 530029
3	Cylinder Z-axis DGSL-20-200-C-Y3A	543908
4	one-way flow control valve GRLA-M5-QS-3-LF-C	175053
5	one-way flow control valve GRLA-M5-QS-3-LF-C	175053
6	Mini slide X-axis SLF-10-50-P-A	170510
7	QS-connection plate / vacuum nozzle QSM-M5-3-I	153313

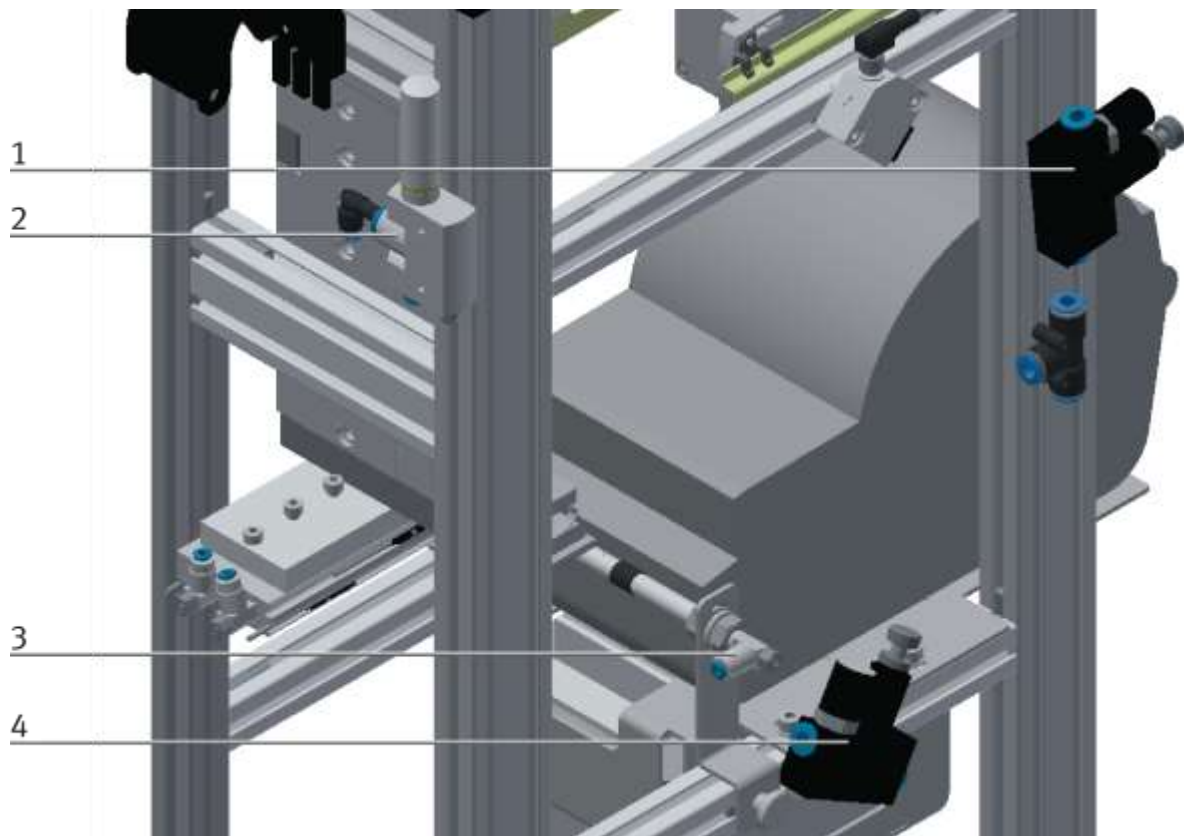


Illustration similar

Position	Description	Part number
1	Pressure control valve for vacuum LRMA-QS-6	153496
2	vacuum generator VN-05-H-T4-PQ2-VQ2-01-P	536796
3	Pressure control valve for blow pipe GRLZ-M5-QS-3-LF-C	175055
4	Pressure control valve for axis (upstream of the valve terminal / part for axes) LRMA-QS-6	153496

6.4 Function

The application module places a label on a workpiece. The workpieces are recognized by the light barrier when the module is fed into the application module and the carrier is stopped. If the carrier is stopped, the X-axis moves to the pick-up position. A label is printed by the printer. There are 3 files for the print data in the printer. The files contain 2 parameters which can be customized by the customer. The selection of the file is accepted by the PLC, the PLC receives its information from the MES system (MES mode selected) or from the transition table (default mode selected)

If the label is pushed out by the printer, compressed air is applied to the blowpipe, and the label is blown upwards to the vacuum suction / connection plate. The vacuum is switched on and the label is sucked onto the connection plate. The X axis is then retracted. The Z-axis moves downwards and applies the label to the workpiece. Once the label is applied, the Z-axis moves up again and the clamping is clamped. The carrier is then released again from the application module.

6.5 Sequence description

Start conditions

- All connections have been established properly.

Starting position

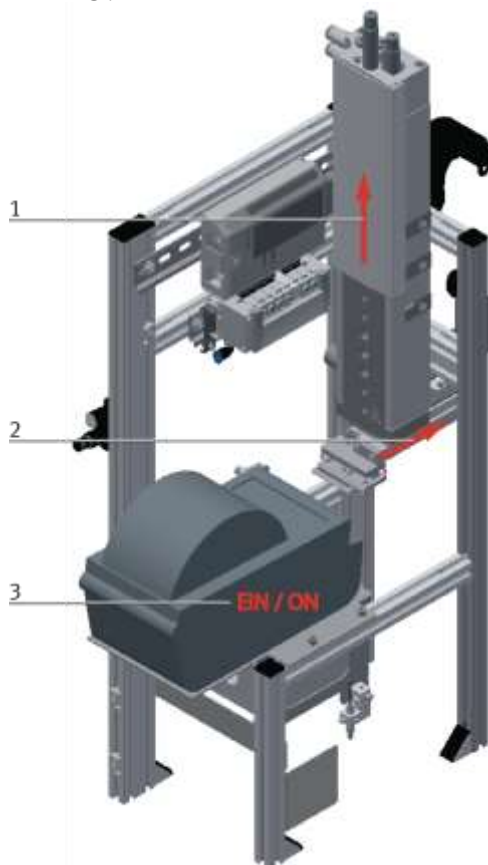


Illustration similar

1. The Z-axis must be in its upper end position
2. The X-axis must be in its rear end position
3. The label printer must be switched on

Process

4. If a carrier with a workpiece is transported through the light barrier of the application module, the carrier is stopped and an automatic sequence is started
5. The X axis goes out and the vacuum is switched on
6. A label is printed
7. The blowpipe is switched on and air flows out
8. The label is ejected from the printer
9. The label is sucked to the connector plate
10. The X axis returns
11. Z-axis moves downwards
12. The label is applied to the workpiece
13. The Z-axis moves up again and is clamped
14. The carrier is released again and leaves the application module

6.6 Electrical Connections

6.6.1 Overview

Connection with syslink connectors

The application module is connected to the electrical board of the module via I/O. The I/O module (1) of the application module is connected to the I/O terminal (2) on the electrical board of the module.

The example refers to the connection to a basic module linear, it is possible that the terminal names of the I/O terminal deviate when connected to another module.

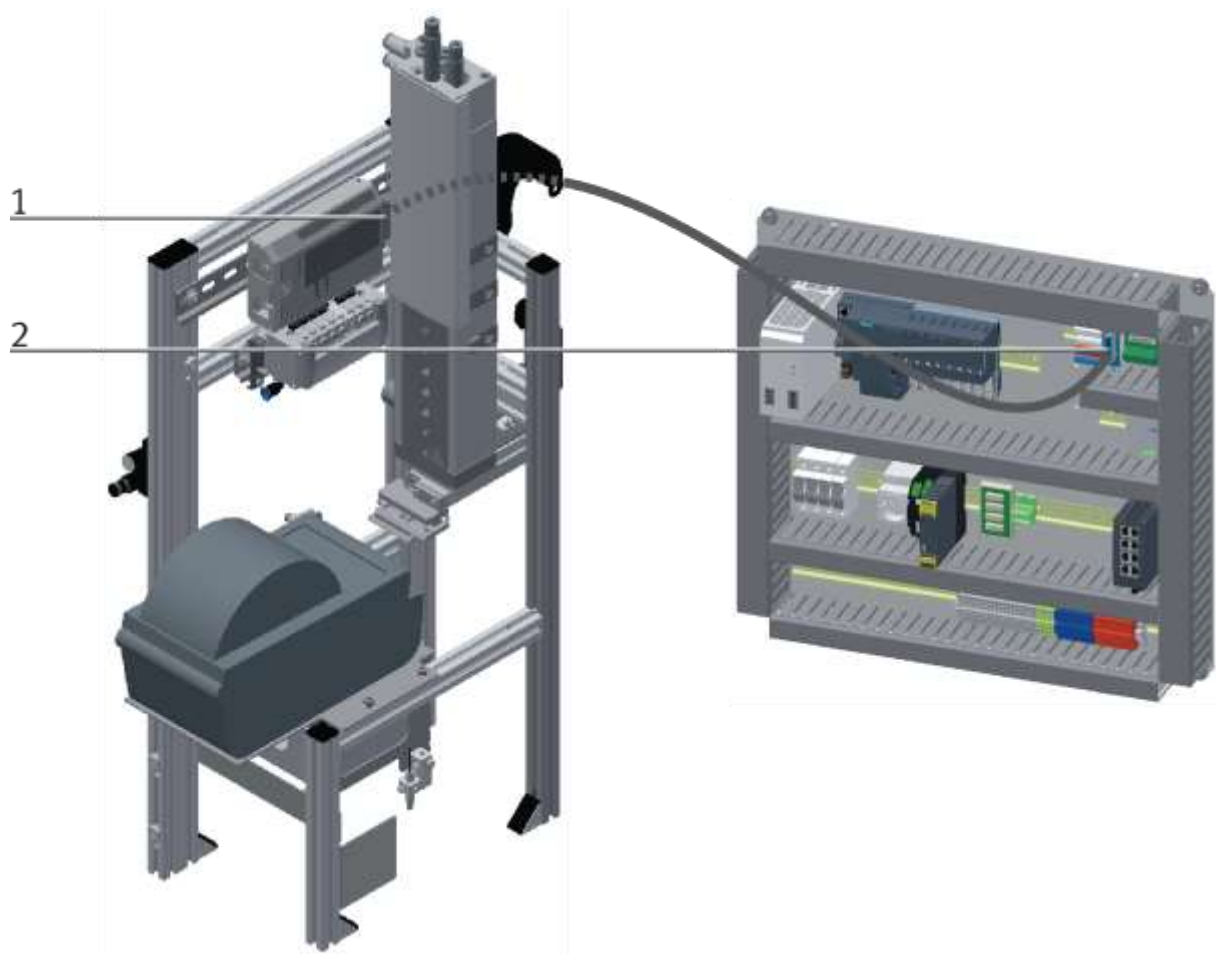


Illustration similar

6.6.2 I/O Box XD1



Illustration similar


Inputs

Designation	Equipment identifier	Application	Application SysLink
X-axis label pick position	BG1	XD1 / XK: I0	XD1:XS13
X-axis in back position	BG2	XD1 / XK: I1	XD1:XS14
Z-axis top	BG3	XD1 / XK: I2	XD1:XS15
Z-axis down	BG4	XD1 / XK: I3	XD1:XS16
Workpiece available	BG5	XD1 / XK: I4	XD1:XS17
Vacuum available	BP6	XD1 / XK: I5	XD1:XS18
Reserve		XD1 / XK: I6	XD1:XS19
Reserve		XD1 / XK: I7	XD1:XS20


Outputs

Designation	Equipment identifier	Application	Application SysLink
Expend X-axis	MB1	XMA2 / XK: O0	XMA2:XS1
		XMA2 / XK: O1	XMA2:XS2
Z-axis upwards	MB2	XMA2 / XK: O2	XMA2:XS3
Z-axis downwards	MB3	XMA2 / XK: O3	XMA2:XS4
Open cylinder clamp unit	MB4	XMA2 / XK: O4	XMA2:XS5
Vacuum switch on	MB5	XMA2 / XK: O5	XMA2:XS6
Blow	MB6	XMA2 / XK: O6	XMA2:XS7
Switch cutter motor on	TM8	XMA2 / XK: O7	XMA2:XS8

7 Commissioning

	NOTE
	<ul style="list-style-type: none"> – The following applies to the start-up as well as to the restart.

- The CP Application Module is delivered pre-assembled.
- All attachment parts are individually packaged.
- All components, tubings and cabling have been clearly marked in order to guarantee a problem-free retrieving of all connections.
- For the operation within a CP Factory/Lab System, the CP Application Module has to be put on and attached to a basic module.

	NOTE
	<ul style="list-style-type: none"> – You can read the general installation instructions in the manual of your basic module. The following instructions apply particularly to the CP Application Module.

7.1 Workplace

The commissioning of the CP Application Module requires:

- a CP Application Module
- a basic module CP Factory or a basic module CP Lab Conveyor for the installation of the CP Application Module
- a SysLink cable for the connection between the I/O terminal of the CP Application Module and the basic module CP Factory
- an Ethernet cable for the connection of the motor controller (option)
- an on-site electrical connection in the room, see data sheet basic module
- an on-site pneumatically connection in the room, see data sheet basic module

7.2 Visual Inspection

	 WARNING
	<ul style="list-style-type: none"> • Any damages must always be repaired instantly.

Visual inspection has to be carried out prior to every commissioning!

Before you start the CP Application Module, you must always inspect the following parts regarding visual damages and function:

- Electrical connections
- Mechanical components and connections
- Emergency Stop devices

7.3 Safety Regulations

	 WARNING
	<ul style="list-style-type: none"> • Any damages must always be repaired instantly.


The CP Application Module may only be operated on the following conditions:

- The technical condition – mechanically and electrically – of the CP Application Module is perfect.
- The CP Application Module is used in accordance with the regulations.
- The operating instructions have been read and understood.
- All safety devices are available and active.

7.4 Assembly


The application module is mounted on the basic module with the following distance (see picture): the distance between the stopper edge and the profile edge is the same with a CP-Lab conveyor as with a CP-Factory basic module.

The assembly process is explained in the following chapter as an example. The displayed dimension is an approximation, it is possible that a fine adjustment is necessary for error-free processing.

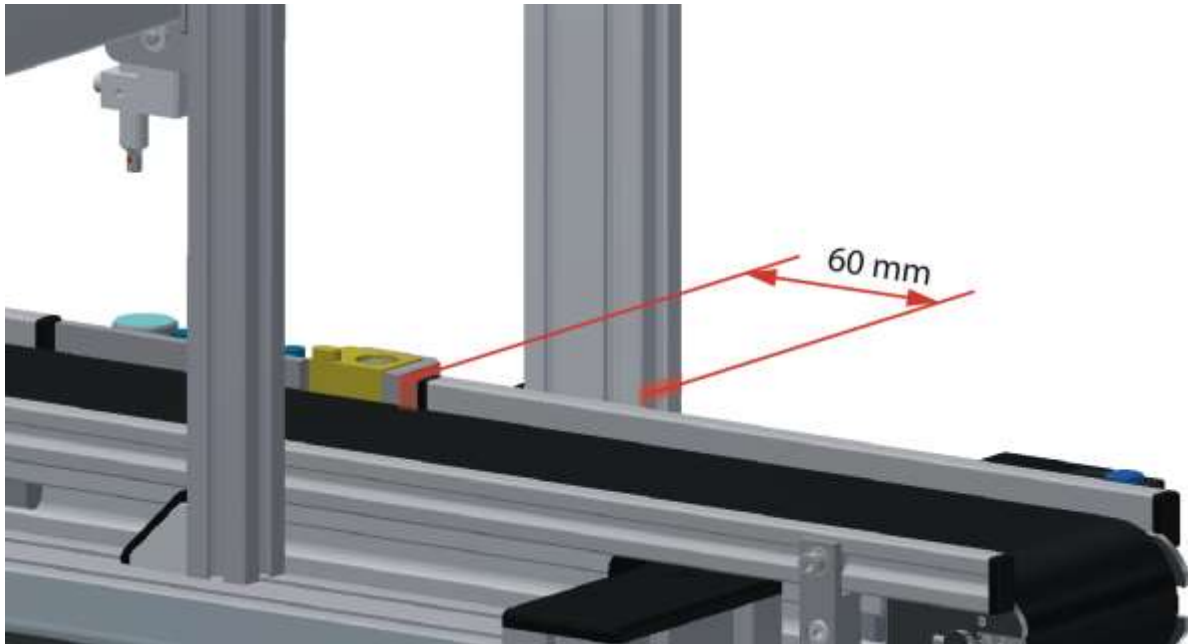

Example distance between application module and stopper / illustration similar

7.4.1 Assembly of an CP application module to basic module CP Lab Conveyor

	NOTE
<p>The procedure of attaching the CP application module to a basic module is the same as with all basic modules. The following description for the attachment to a basic module CP Lab Conveyor is an example for all basic modules and all application modules.</p>	

Positioning slot nuts in the cross profiles of the basic module CP Lab Conveyor

Mounting the CP application module is very easy:

- Two M5-slot nuts (2) have to be put into the inner front slot of the cross profile (4) of the basic module CP Lab Conveyor.
- Then put two additional M5-slot nuts (2) into the inner back slot of the cross profile (3) of the basic module CP Lab conveyor.
- Then you have to position the slot nuts (2) approximately to the distance of the vertical cross profiles of the CP application module.




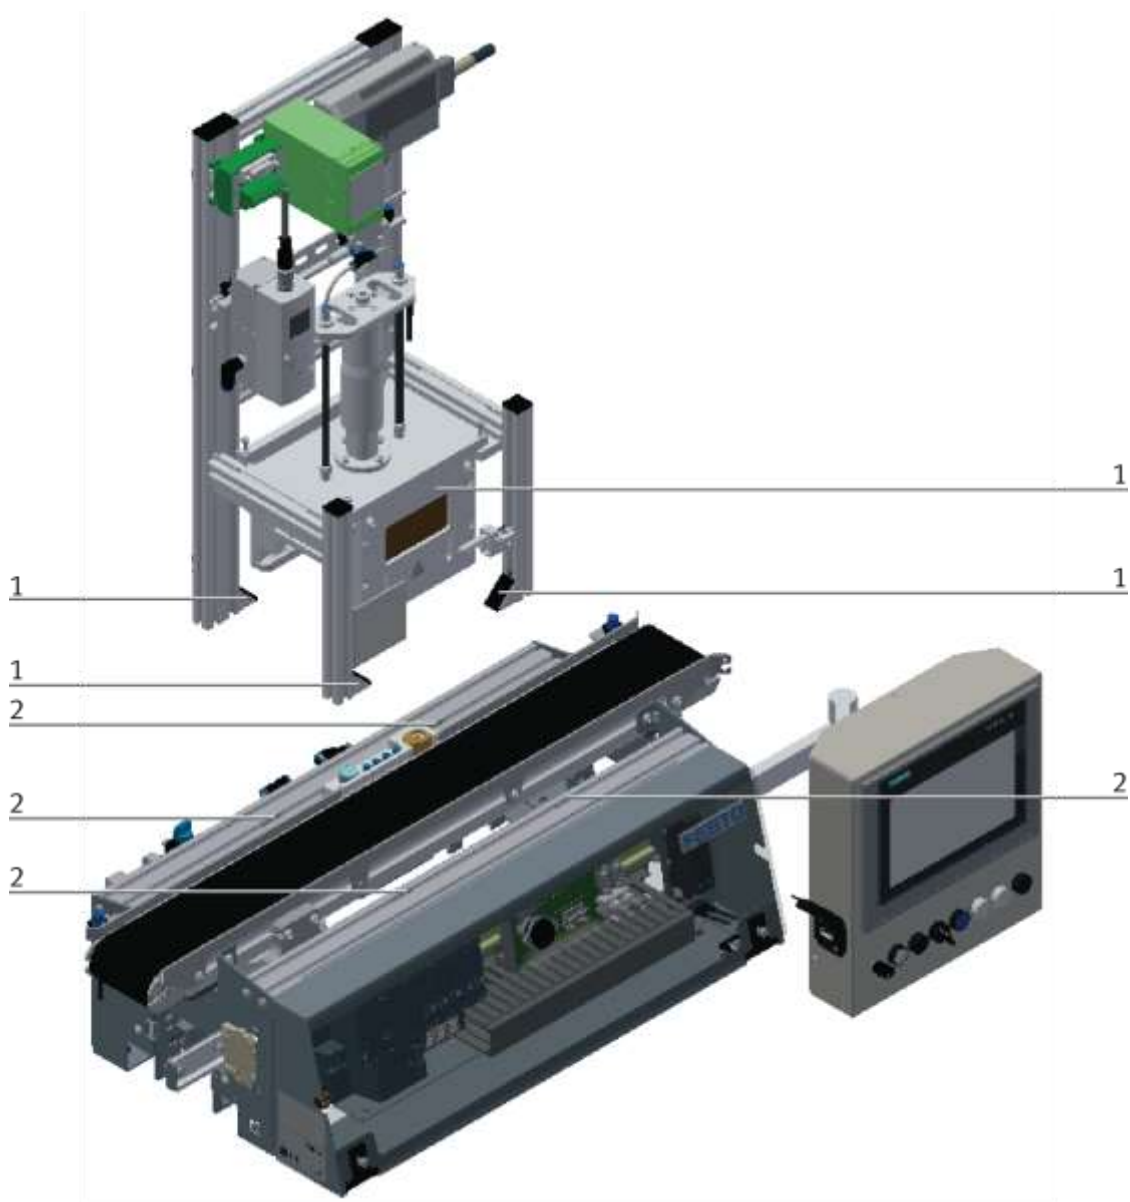
Positioning slot nuts / illustration similar

Position	Description
1	back cross profile
2	slot nut
3	Inner slot (back cross profile)
4	Inner slot (front cross profile)
5	front cross profile

Attaching the application module to the basic module CP Lab Conveyor

- Put the CP application module on the basic module CP Lab Conveyor.
- Position the slot nuts (2) underneath the mounting brackets (1) of the CP application module so that the internal threads of the slot nuts are visible underneath the elongated holes of the mounting brackets.

	NOTE
	Use Allen keys for lateral adjustment of the slot nuts.




How to put on the CP application module / illustration similar

Position	Description
1	CP application module: mounting bracket
2	slot nut

Adjusting the CP application module and fixing it on the basic module CP Lab Conveyor


- Use raised head screws M5x8, in order to connect the mounting brackets (1) of the CP application module Measuring, at first loosely, with the cross profiles (2) of the basic module CP Lab Conveyor.
- After setting all raised head screws, you can still move the CP application module to the position required.
- Push a carrier with pallet and front cover to the stopper position. The front cover points with its inside upwards. The drilled hole of the front cover is on the left side.
- Have a visual inspection to make sure that the two distance sensors are capable of registering the front cover more or less in medium range.
- Now tighten the raised head screws.
- Then put the black covers onto the mounting brackets.

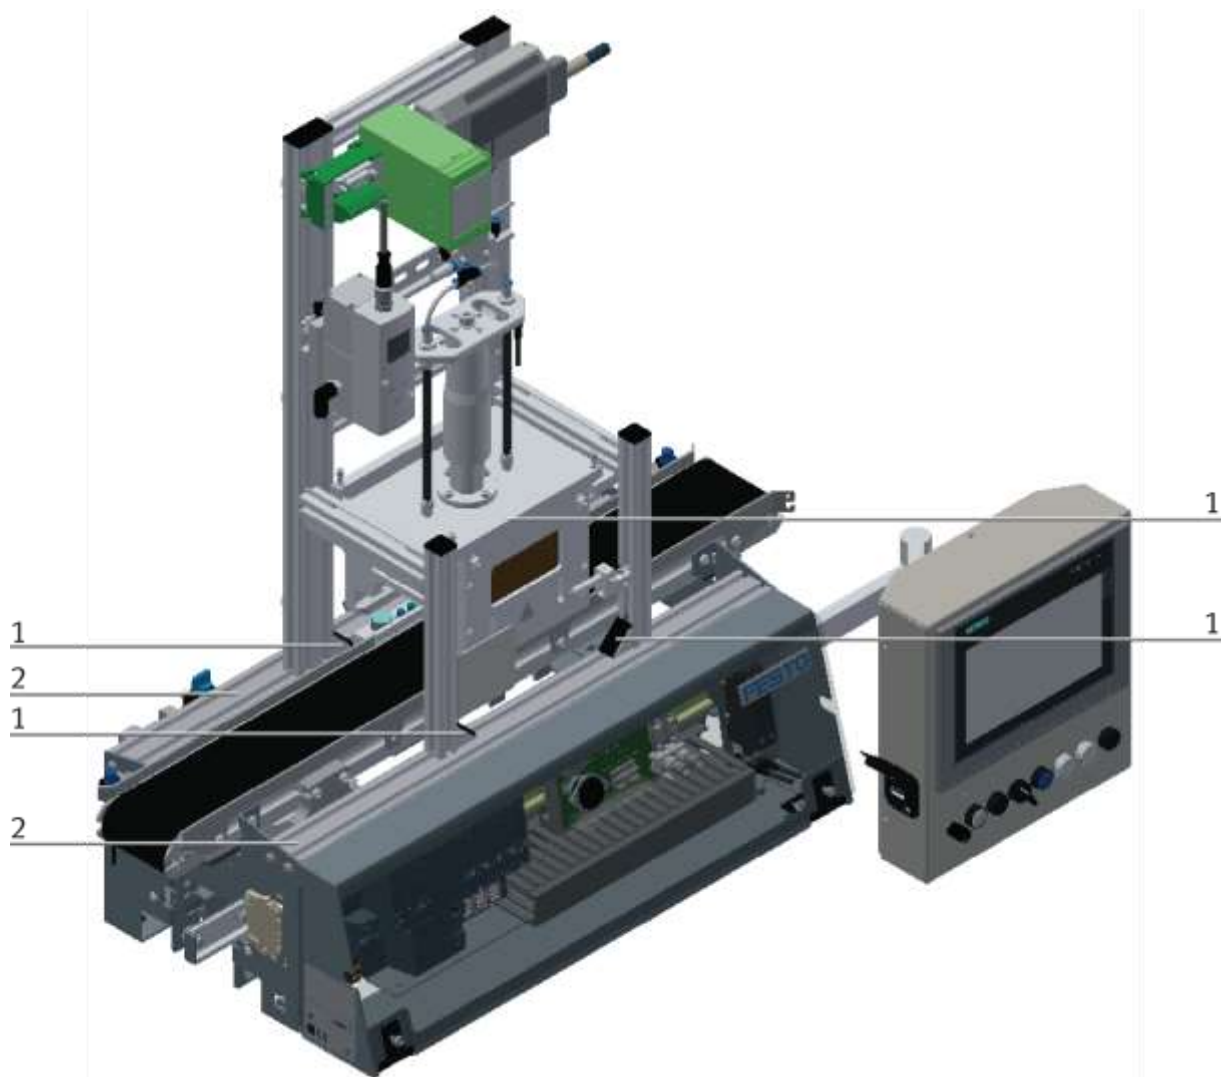

Tightening the CP application module / illustration similar


Position	Description
1	CP application module: mounting bracket with cover
2	basic module CP Lab Conveyor: cross profile

7.4.2 Connecting the CP application module electrically to basic module CP Lab Conveyor SysLink-interface for digital signals

	NOTE
<p>With special variants of the basic module CP Lab Conveyor, you absolutely have to observe the corresponding operation instructions of the basic module CP Lab Conveyor!</p>	

The CP application module exchanges digital input and output signals with the basic module via the SysLink interface:

- Connect the I/O terminal (3) of the CP application module with the control (1) of the basic module CP Lab Conveyor. Therefore use the connecting cable with SysLink plugs (5) which has already been attached to the control and is led out on the back side of the basic module CP Lab Conveyor.

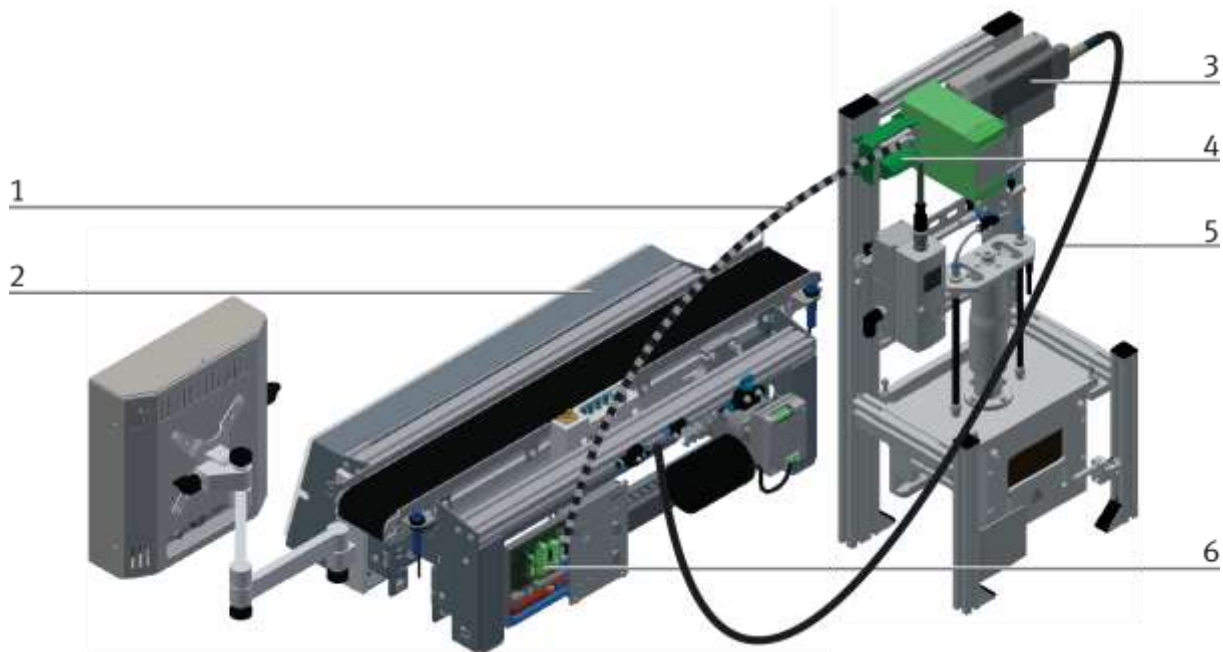


Electrical connections / illustration similar

Position	Description
1	connecting cable with 15-pin standard D-Sub-plugs
2	basic module CP Lab Conveyor: control or decentralized periphery
3	CP application module: I/O terminal (+BG-XD1)
4	CP application module: analogue terminal (+BG-XD2A)
5	connecting cable with a SysLink-plug (SysLink-cable)
6	basic module CP Lab Conveyor: board at the back (+G1-XZ2)

D-Sub-interface for analogue signals (option – not available at all application modules)

The CP application module produces an analogue output signal. This is put on the analogue terminal (4) and must be connected with the analogue inputs of the basic module:

- Connect the analogue terminal (4) of the CP application module with the D-Sub-interface for analogue signals (6) on the rear board of the basic module CP Lab Conveyor. Therefore use the provided connecting cable (1) with standard D-Sub plugs: 15-pin, two-rowed.

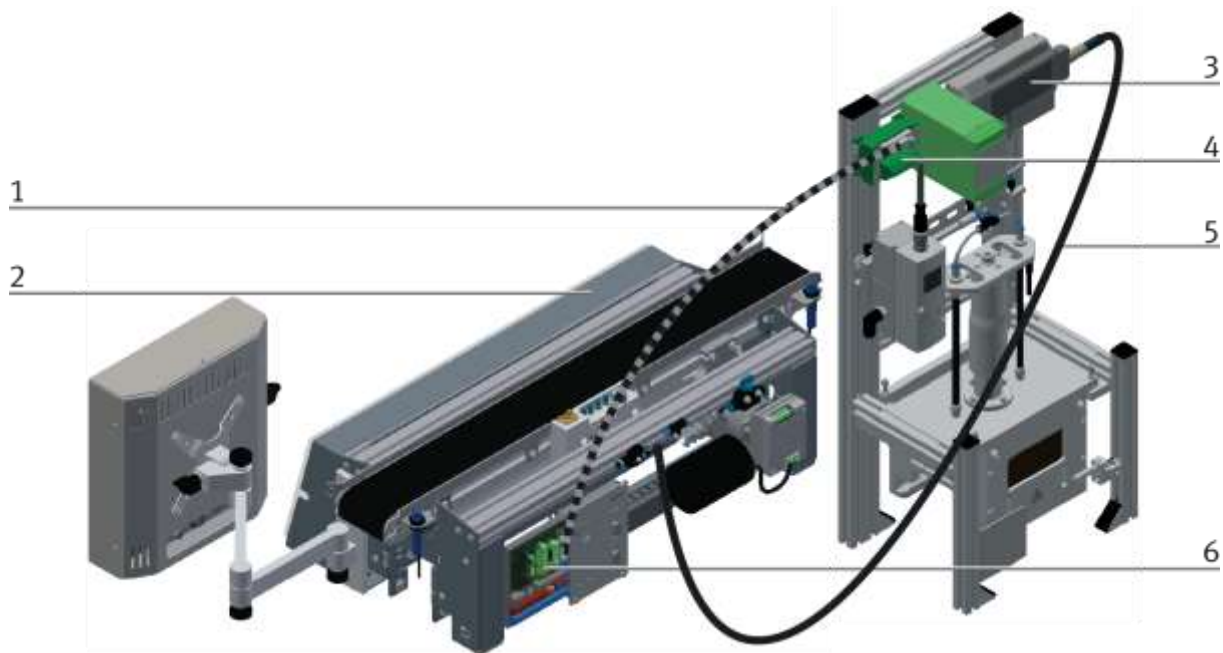


Electrical connections / illustration similar

Position	Description
1	connecting cable with 15-pin standard D-Sub-plugs
2	basic module CP Lab Conveyor: control or decentralized periphery
3	CP application module: I/O terminal (+BG-XD1)
4	CP application module: analogue terminal (+BG-XD2A)
5	connecting cable with a SysLink-plug (SysLink-cable)
6	basic module CP Lab Conveyor: board at the back (+G1-XZ2)


7.4.3 Pneumatic connection from application modules to basic module CP Lab Conveyor (option – not available at all application modules)

The pneumatic connection is based on the principle of the following sketch. The application module is connected from the valve terminal to the shut-off valve (2) on the conveyor belt. The hose (1) (nominal width 4) is simply inserted into the QS connector. The supply line (5) is plugged into the T-plug (3)
The CP Lab Band is also supplied with a T-connector (4).

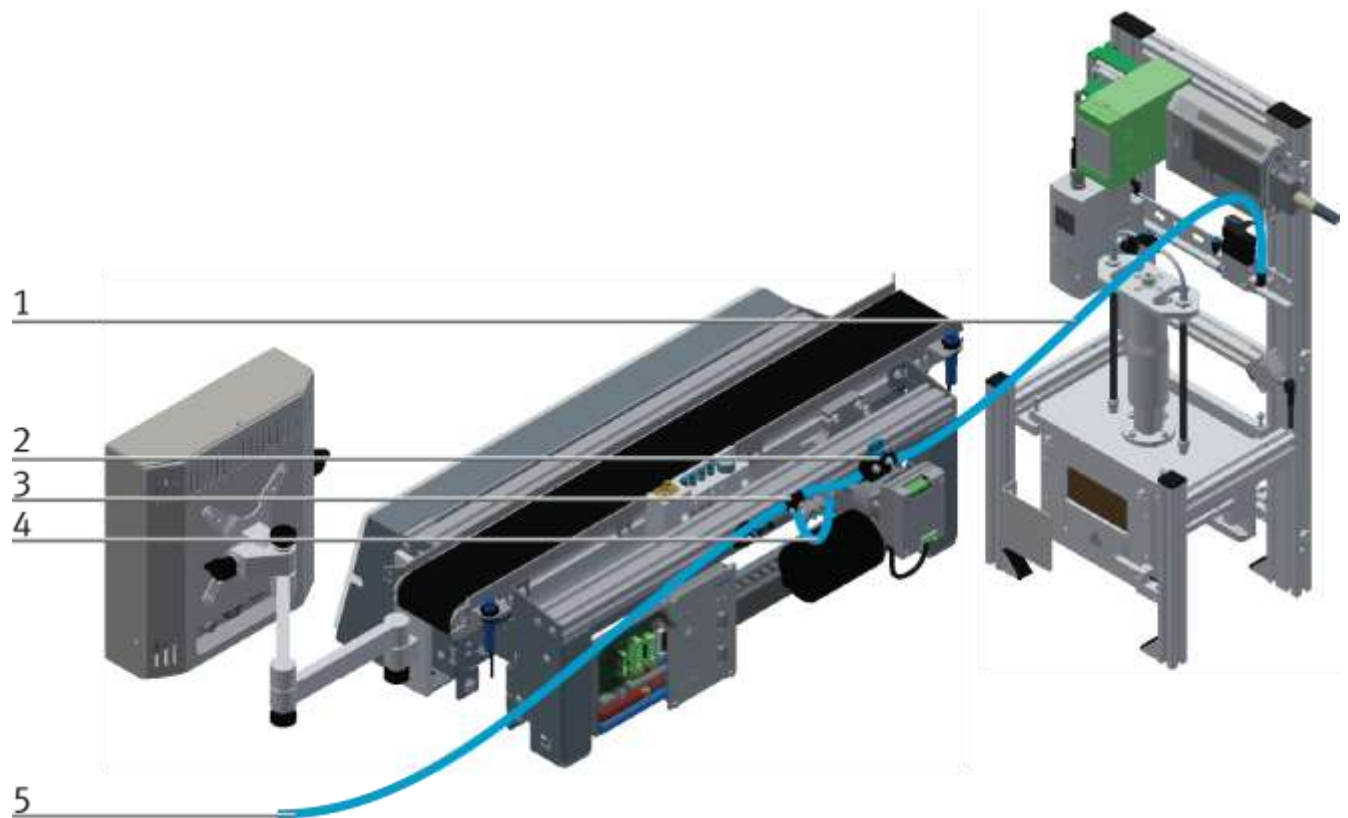

Pneumatically connect application module / illustration similar

7.4.4 Assembly of an CP application module to a CP Factory basic module

	NOTE
<p>The procedure for installing a CP application module on a basic module is identical for all basic modules. The following example is an example for all basic modules and applications.</p>	

Positioning slot nuts in the cross profiles of the CP Factory basic module

Mounting the CP application module is very easy:

- Two M5-slot nuts (1) have to be put into the inner front slot of the cross profile (4) of the CP Factory basic module.
- Then put two additional M5-slot nuts (1) into the inner back slot of the cross profile (2) of the basic module.
- Then you have to position the slot nuts (1) approximately to the distance of the vertical cross profiles of the CP application module.




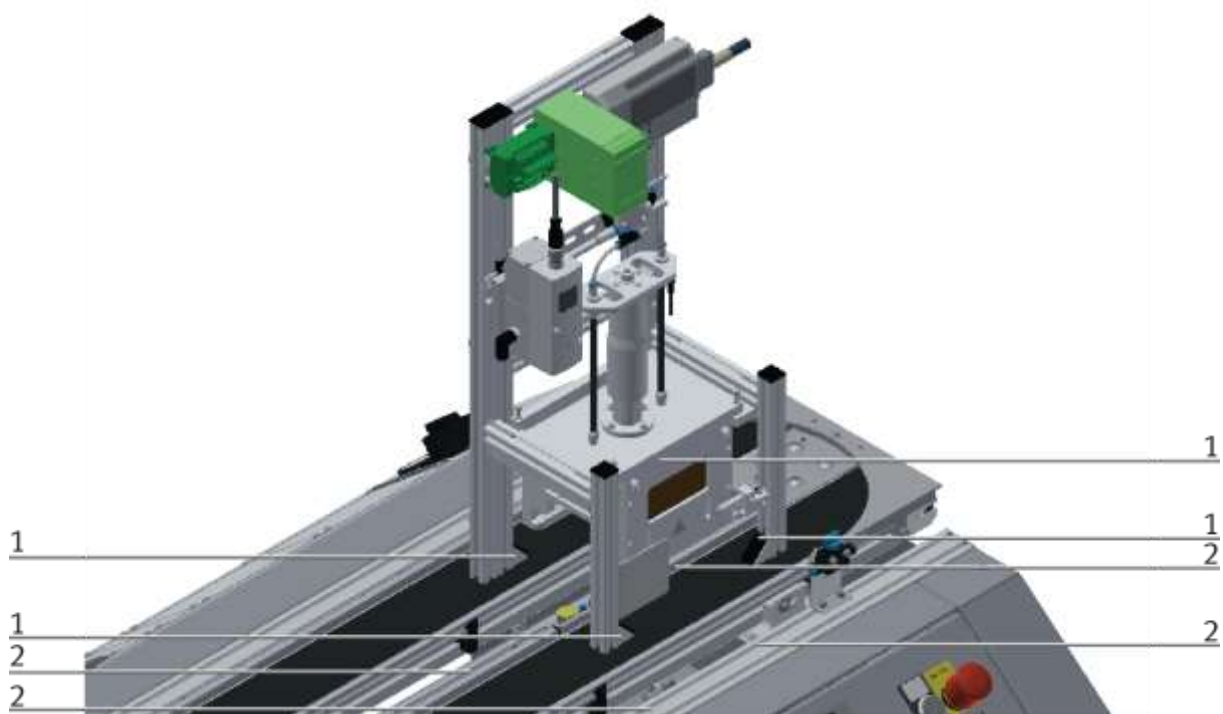
Positioning slot nuts / illustration similar

Position	Description
1	slot nut
2	back cross profile
3	Inner slot (front cross profile)
4	front cross profile

Attaching the application module to the CP Factory basic module

- Put the CP application module on the CP Factory basic module.
- Position the slot nuts (2) underneath the mounting brackets (1) of the CP application module so that the internal threads of the slot nuts are visible underneath the elongated holes of the mounting brackets.

	NOTE
	Use Allen keys for lateral adjustment of the slot nuts.




How to put on the CP application module / illustration similar

Position	Description
1	CP application module: mounting bracket
2	slot nut

Adjusting the CP application module and fixing it on the CP Factor basic module

- Use raised head screws M5x8, in order to connect the mounting brackets (1) of the CP application module Measuring, at first loosely, with the cross profiles (2) of the CP Factory basic module.
- After setting all raised head screws, you can still move the CP application module to the position required.
- Push a carrier with pallet and front cover to the stopper position. The front cover points with its inside upwards. The drilled hole of the front cover is on the left side.
- Have a visual inspection to make sure that the two distance sensors are capable of registering the front cover more or less in medium range.
- Now tighten the raised head screws.
- Then put the black covers onto the mounting brackets.

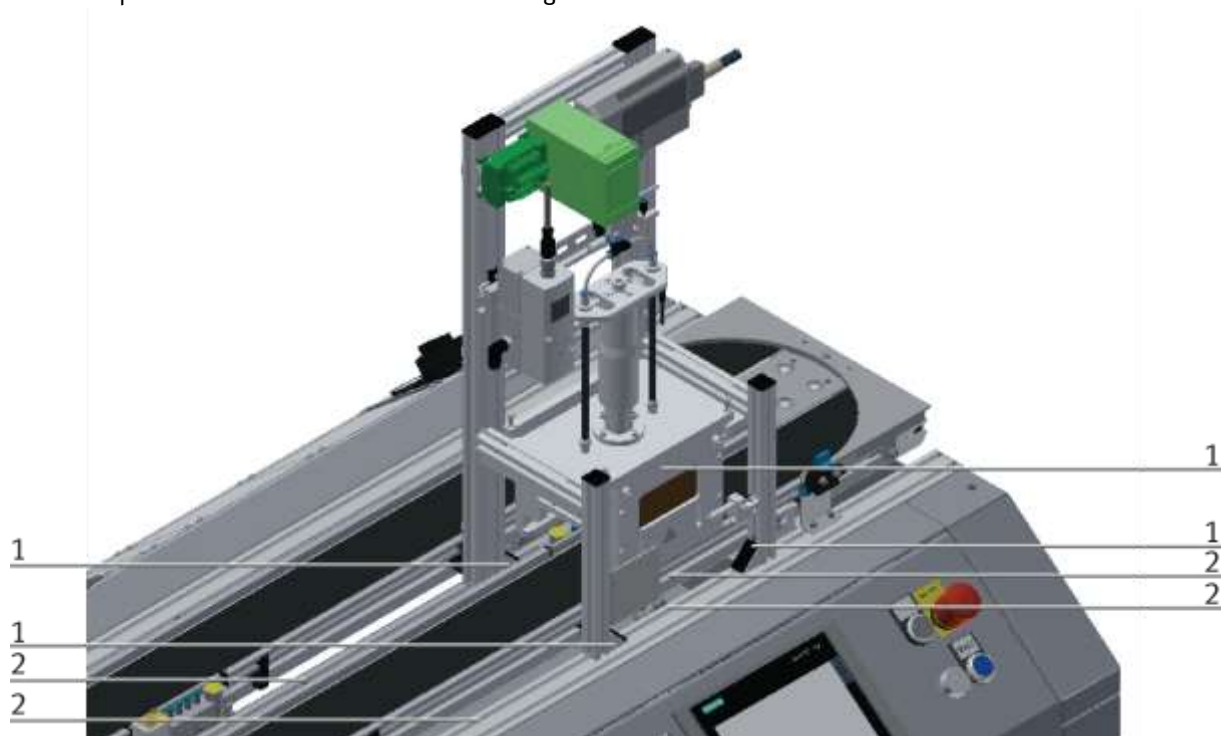

Tightening the CP application module / illustration similar

Position	Description
1	CP application module: mounting bracket with cover
2	CP Factory basic module: cross profile

7.4.5 Connecting the CP application module electrically to the CP Factory basic module

SysLink-interface for digital signals


The CP application module exchanges digital input and output signals with the basic module via the SysLink interface:

- Connect the I/O terminal (1) of the CP application module with the I/O terminal (6) on the electric board of the CP Factory basic module. Therefore use the provided connecting cable with SysLink plugs (5).

D-Sub-interface for analogue signals (option – not available at all CP application modules)

The CP application module produces two analogue output signals with the distance sensors. These are set on the analogue terminal and have to be connected with the analogue inputs of the CP Factory basic module:

- Connect the analogue terminal (2) of the CP application module with the analogue terminal (4) on the electric board of the CP Factory basic module. Therefore use the provided connecting cable (3) with standard D-Sub plugs: 15-pin, two-rowed.

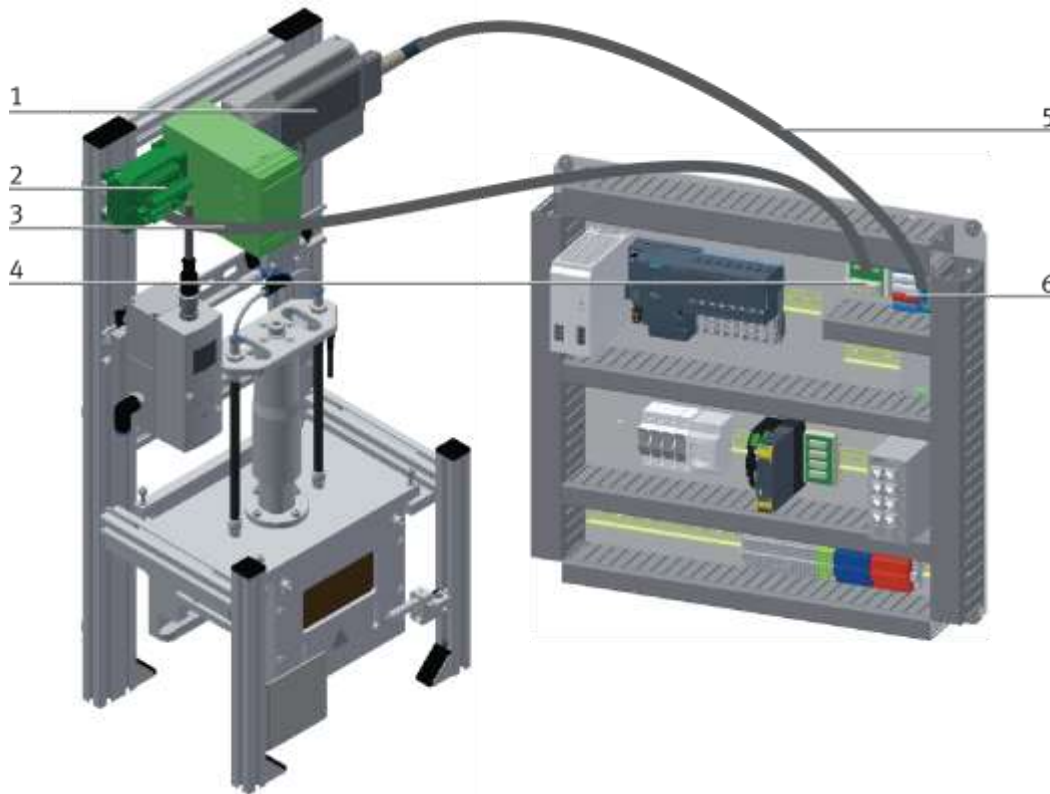

Electrical connections / illustration similar


Position	Description
1	CP application module: I/O terminal (+BG-XD1)
2	CP application module: analogue terminal (+BG-XD2A)
3	connecting cable with 15-pin D-Sub-plugs
4	electric board CP Factory basic module: analogue terminal (+K1-XD16A)
5	connecting cable with SysLink-plugs (SysLink-cable)
6	electric board CP Factory basic module: I/O terminal (+K1-XD15)

7.4.6 Pneumatic connection from application modules to CP Factory basic module

The pneumatic connection is based on the principle of the following sketch. The application module is connected from the valve (terminal) to the shut-off valve (3) on the conveyor belt.

The hose (nominal width 4) is simply inserted into the QS connector.

The supply line (2) is plugged into the shut off-valve (3).

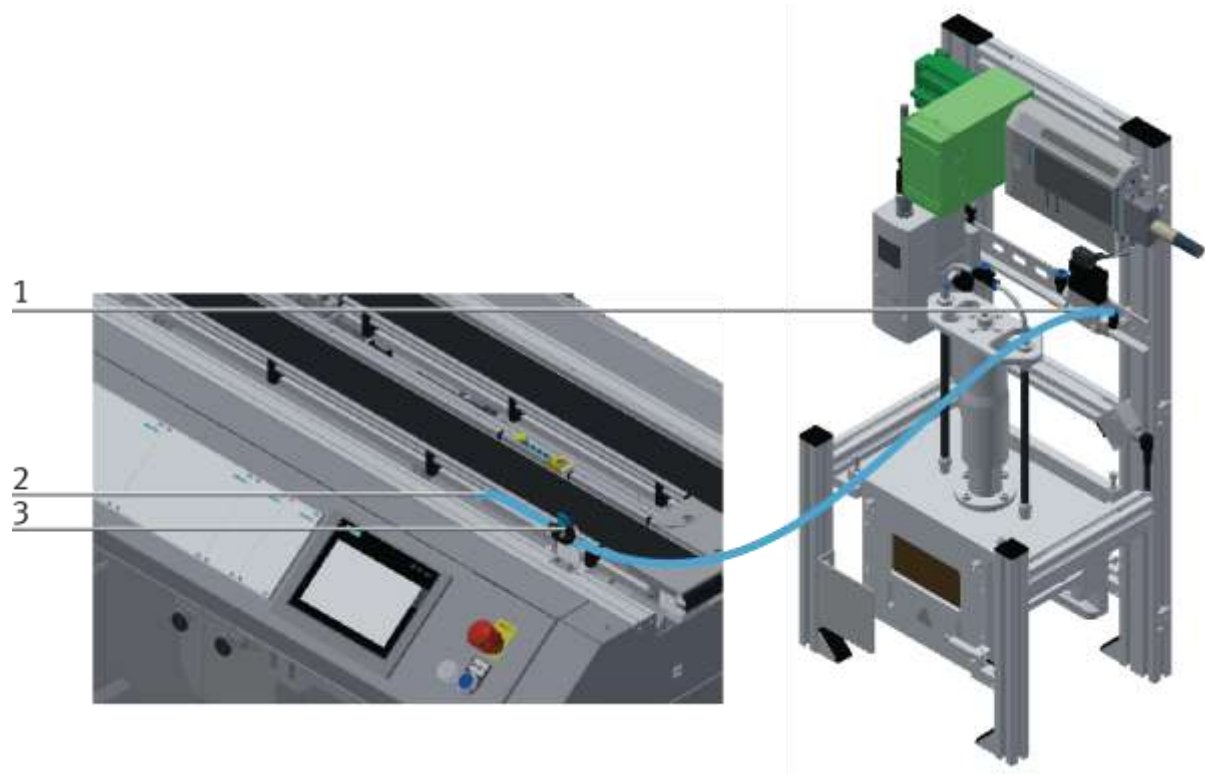

Pneumatically connect application module / illustration similar

7.5 Adjusting the sensors

7.5.1 Through-beam sensor (Workpiece detection)

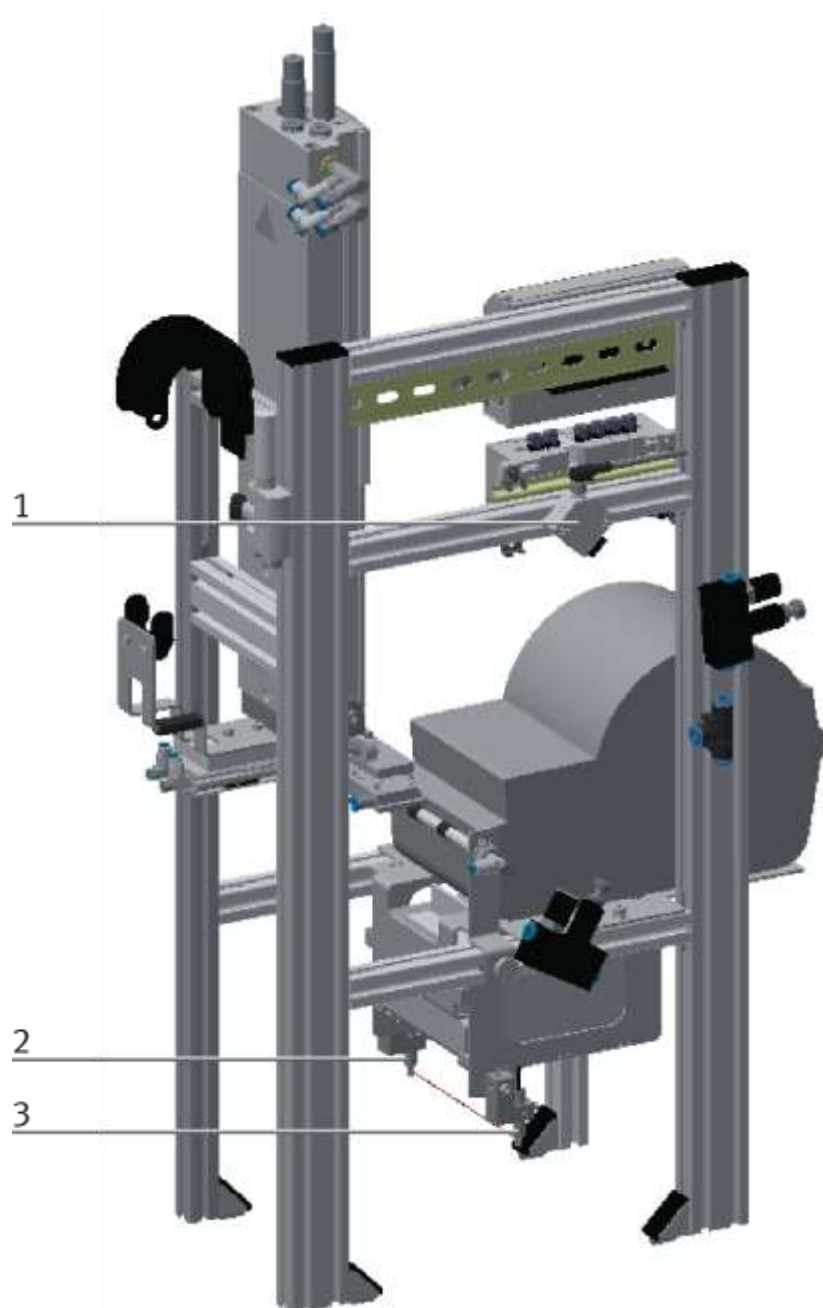


Illustration similar

Position	Designation
1	sensor and light deflection/ 8127556 (D: SOEG-L-Q30-P-A-S-2L)
2	Sensor socket with sensor 552812 (SOOC-TB-M4-2-R25) and adapter lens 552830 (SASF-L1-LA-M2)
3	Sensor socket with sensor 552812 (SOOC-TB-M4-2-R25) and adapter lens 552830 (SASF-L1-LA-M2)

The through-beam sensor is used for detecting workpieces. Flexible fibre-optics are connected to a fibre-optic unit. The fibre-optic unit works with visible infrared. The workpiece interrupts the light barrier.

Requirements

- Fibre-optic unit has been attached.
- Electrical connection of the fibre-optic unit has been made.
- Power supply is available.

Procedure

Please attach the fibre-optic heads towards each other to the application.

Align the transmitter- and receiver fibre optics.

Attach the fibre-optics to the fibre-optic unit.

You might have to turn the adjusting screw with a small screwdriver until the switching status display (LED) appears.

Remark

The maximum permissible number of turns of the adjusting screw is 12.

Please put a workpiece into the sensing range of the light barrier. The switching status display will disappear. You have to do this with all 3 light barriers. Please pay special attention to the corresponding function.

Documents

Data sheets / Operating instructions

Fibre-optic unit D: SOEG_L (8127556)

through-beam sensor SOOC-TB-M4-2-R25 (552812)

Adapter lens SASF-L1-LA-M2 (552830)

7.5.2 Proximity Switch (X-axis cylinder)

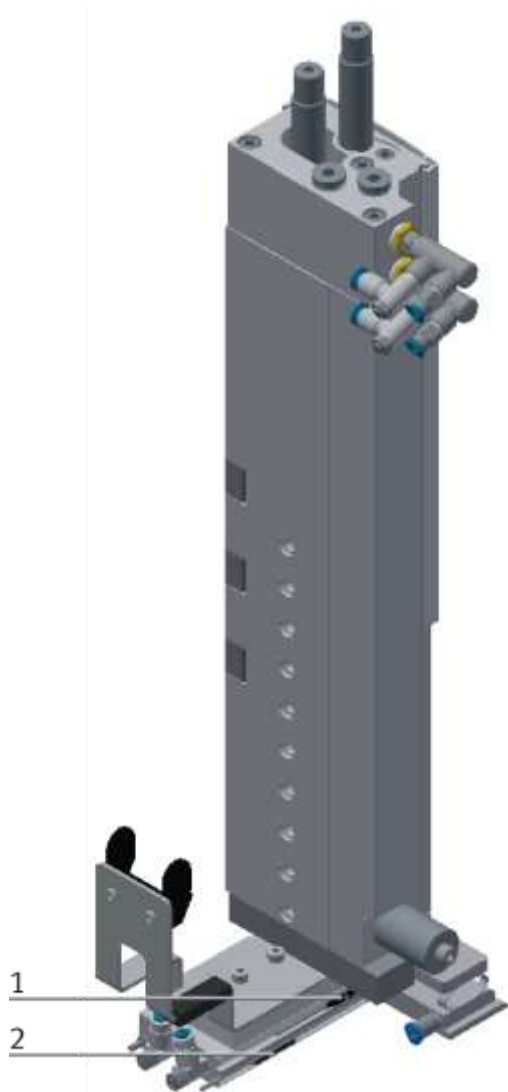


Illustration similar

Position	Description
1	X-axis in pick up position / 551373 (SMT-10M-PS-24V-E-2,5-L-OE)
2	X-axis back / 551373 (SMT-10M-PS-24V-E-2,5-L-OE)

The proximity switches are used for checking the end position of the cylinder for the X-axis. The proximity switches react to a permanent magnet on the piston of the cylinder.

Requirements

- Cylinder for X-axis has been attached.
- Pneumatic port of the cylinder has been made.
- Compressed air supply is switched on.
- Electrical connection of the proximity switches has been made.
- Power supply is available.

Procedure

1. The cylinder is in the position to be queried.
2. Move the proximity switch as far as the switching status display (LED) appears.
3. Move the proximity switch into the same direction by a few millimeters as far as the switching status display disappears.
4. Move the proximity switch halfway between the switch on and the switch off position.
5. Tighten the locking screw of the proximity switch with an Allen key SW1.3.
6. Please check the position of the proximity switch by repeated test runs of the cylinder.

Documents

- Data sheets / operating instructions
Proximity switch 551373 (SMT-10M-PS-24V-E-2,5-L-OE)

7.5.3 Proximity Switch (Z-axis)

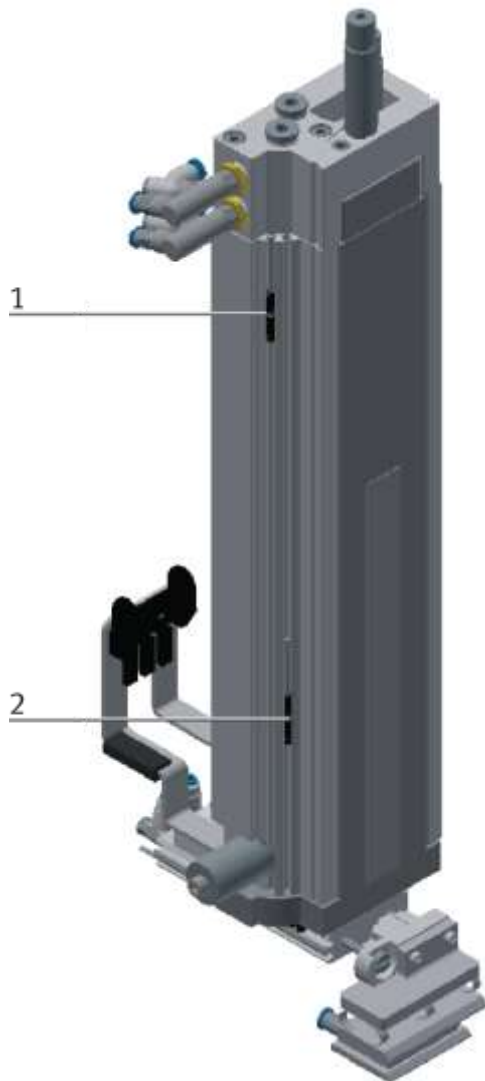


Illustration similar

Position	Description
1	Z-axis top / 551373 (SMT-10M-PS-24V-E-2,5-L-OE)
2	Z-axis down / 551373 (SMT-10M-PS-24V-E-2,5-L-OE)

The proximity switches are used for checking the end position of the cylinder for the Z-axis. The proximity switches react to a permanent magnet on the piston of the cylinder.

Requirements

- Cylinder for Z-axis has been attached.
- Pneumatic port of the cylinder has been made.
- Compressed air supply is switched on.
- Electrical connection of the proximity switches has been made.
- Power supply is available.

Procedure

1. The cylinder is in the position to be queried.
2. Move the proximity switch as far as the switching status display (LED) appears.
3. Move the proximity switch into the same direction by a few millimeters as far as the switching status display disappears.
4. Move the proximity switch halfway between the switch on and the switch off position.
5. Tighten the locking screw of the proximity switch with an Allen key SW1.3.
6. Please check the position of the proximity switch by repeated test runs of the cylinder.

Documents

- Data sheets / operating instructions
Proximity switch 551373 (SMT-10M-PS-24V-E-2,5-L-OE)

7.5.4 Vacuum suction nozzle

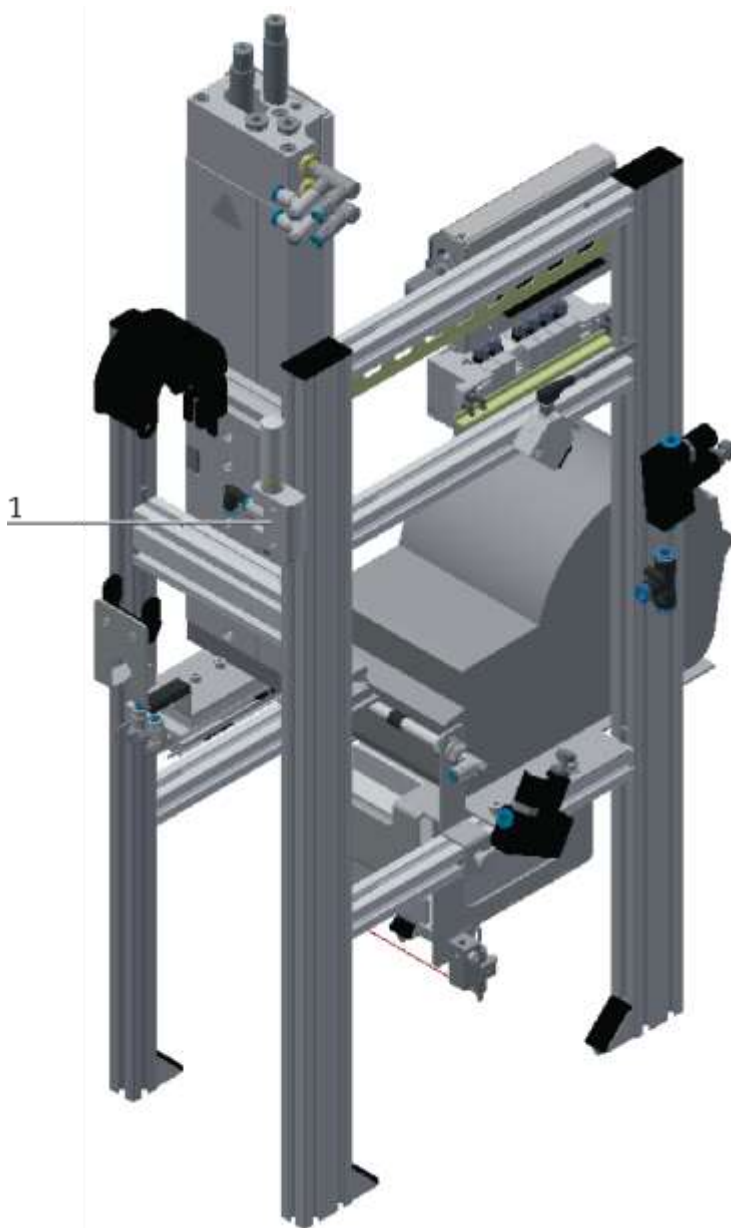


Illustration similar

Position	Description
1	Vacuum suction nozzle / 536796 (VN-05-H-T4-PQ2-VQ2-01-P)

The vacuum suction nozzle sucks the label onto the adapter plate - a safe transport of the label is thus ensured.

Requirements

- Vacuum suction nozzle mounted
- Pneumatic connection of the vacuum nozzle.
- Compressed air supply switched on.
- Electrical connection of the vacuum suction nozzle.
- Power on.

Procedure

Ensure that in the transport area of the workpiece:

- No one is under the workpiece
- there are no foreign objects (eg: through protective grilles)
- Avoid long hose lines and large volumes between suction pads and vacuum nozzle. A large volume leads to long evacuation times and possible adjustment errors on the vacuum switch.
- Consider accelerations, foreign influences etc. on the work piece when adjusting the necessary holding force.

To construct the vacuum:

- Apply pressure to the VN -...- P with an operating pressure. This creates a corresponding vacuum at the vacuum connection. By varying the operating pressure, the vacuum is adjusted. The workpiece must be held securely against the suction pad by the generated vacuum.

To adjust the vacuum switch:

- The setting of the vacuum switch for monitoring the vacuum depends on the application.
- Switch on the operating voltage. The VN -...- P is in the basic state.
- Definition

Switching pressure SP

Vacuum at which the VN -...- P switches.

Teach pressure TP


Vacuum at the time of programming

Set the switching pressure in the EDIT mode as follows:

1. Apply pressure to the VN -...- P using a teach pressure (eg: TP1). The sequence of the teach pressure is irrelevant.
2. Press the Edit button until the LED starts flashing. When released, the VN -...- P stores the first teach pressure. The LED continues to flash.
3. Apply VN -...- P to the other teach pressure (eg: TP2).
4. Press the Edit button until the LED stops flashing. When released, the VN -...- P stores the second teach pressure and terminates the EDIT mode. The relationship between teach pressure, switching pressure and hysteresis is shown in the following table. For the VN -...- O1-P, the switching pressure is formed from the mean value at the teach pressure ($SP = \frac{1}{2} (TP1 + TP2)$). With VN -...- O2-P the higher Teach pressure becomes the switching pressure.

Check the VN -...- P as desired in a test run with alternating pressure. The LED is illuminated parallel to the programmed switching behavior

7.6 Adjusting the one-way flow control valves

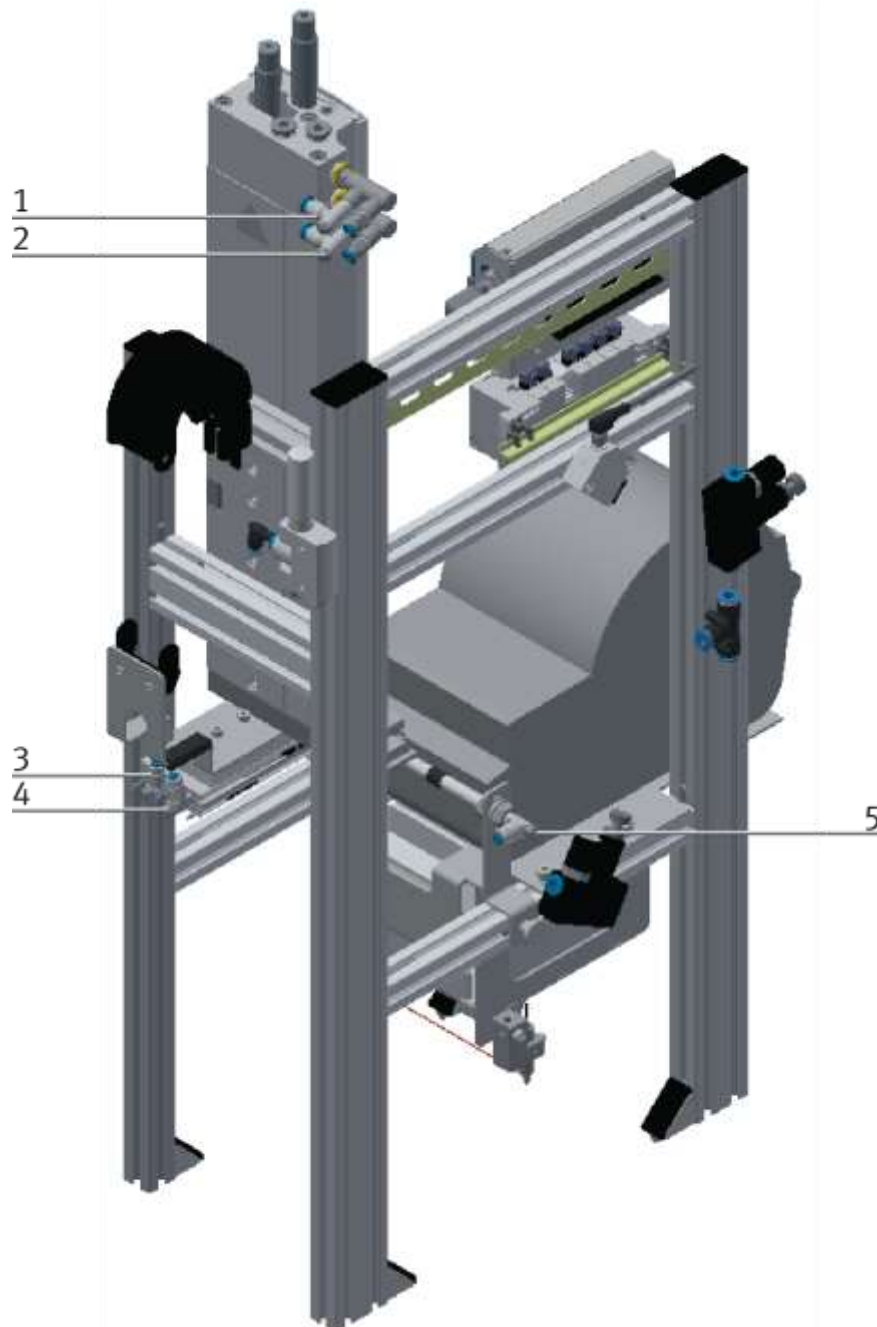

One-way flow control valves / Illustration similar

Position	Description
1	One-way flow control valve 193138 (GRLA-M5-QS-4-D) for Z-axis cylinder
2	One-way flow control valve 193138 (GRLA-M5-QS-4-D) for Z-axis cylinder
3	One-way flow control valve 175053 (GRLA-M5-QS-3-LF-C) for X-axis cylinder
4	One-way flow control valve 175053 (GRLA-M5-QS-3-LF-C) for X-axis cylinder
5	One way flow control valve (GRLZ-M5-QS-3-LF-C) for blowpipe (for determining the flow rate)

One-way flow control valves are used for regulating the exhaust air volume of double-acting drive units. In the opposite direction, the air flows through the flow control valve having a full cross-sectional flow. The piston is clamped between air cushions by free supply air and throttled exhaust air (improvement of the operating behaviour even if the load changes).

Requirements

- Pneumatic port of the cylinders has been made.
- Compressed air supply is switched on.


Procedure

1. At first, turn off the two one-way control valves completely. Then turn them on again by about one rotation.
2. Start a test run.
3. Turn on the one-way flow control valves slowly until the required piston speed has been reached.

Documents

- Data sheets
 - One-way flow control valve 193138 (GRLA-M5-QS-4-D)
 - One-way flow control valve 175053 (GRLA-M5-QS-3-LF-C)

7.7 Adjusting the pressure regulator

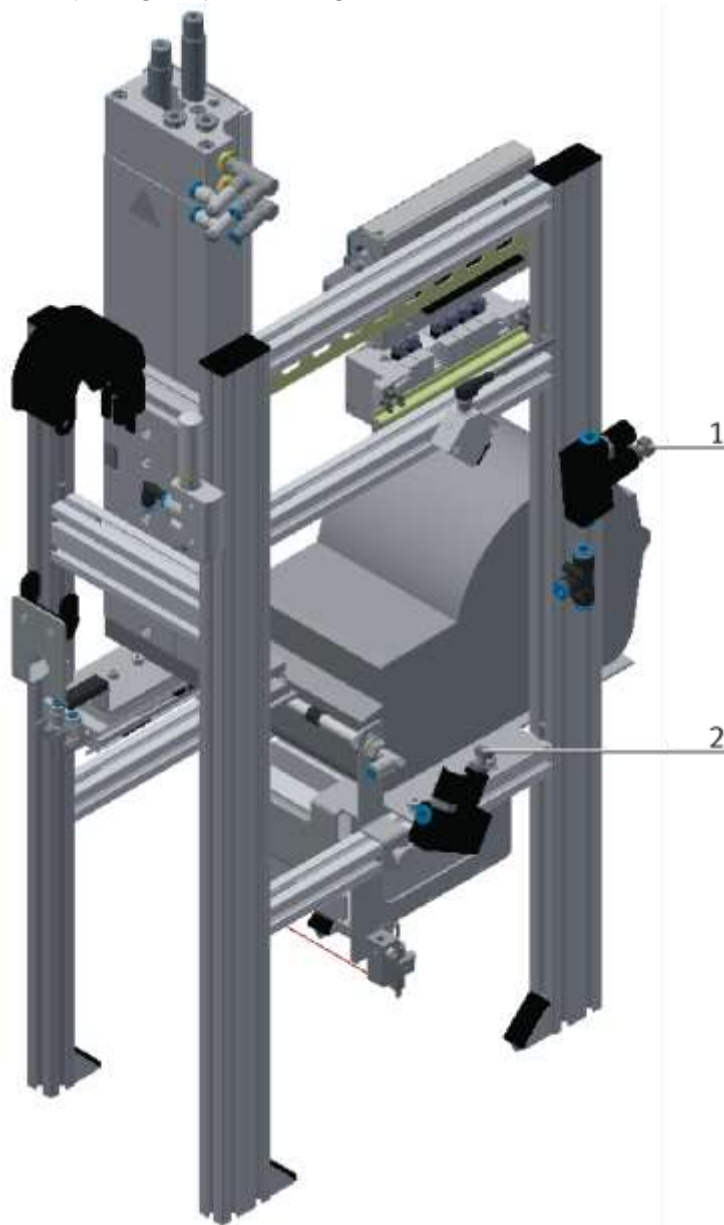

Pressure regulator / Illustration similar

Position	Description
1	Pressure regulator 153496 (LRMA-QS-6) for vacuum
2	Pressure regulator 153496 (LRMA-QS-6) for all axes (upstream to valve terminal / part for axis)

Pressure regulators are used for regulating the air pressure for the axles and the vacuum for the vacuum sucker.

Requirements

- Pneumatic port of the cylinders and vacuum has been made.
- Compressed air supply is switched on.

Procedure vacuum

1. At first, turn off the pressure regulator completely. Then turn it on again and adjust it to approx. 1 bar.
To secure the screw, tighten the knurled screw to lock it.
2. Start a test run, the workpiece shouldn't fall off.

Procedure axles

1. At first, turn off the pressure regulator completely. Then turn it on again and adjust it to approx. 2 bar.
To secure the screw, tighten the knurled screw to lock it.
2. Start a test run, it should be possible to stop the axes by hand easily.

Documents

- Data sheets
Pressure regulator 153496 (LRMA-QS-6)

8 Operation


An application module has no control elements. Operation of the application module is only possible when it is mounted on a basic module of the CP-Lab or CP-Factory system.

The operation of the application module can be realized by every customer according to his wishes, the supplied programs are only an operating suggestion with which the application module is on CP-Lab or CP-Factory System can be operated. Own operating concepts or external controls are also possible.


If the application module is mounted on a CP Lab or a CP Factory basic module, the general operation for this is described in the manuals of the CP Lab or CP Factory system. All application-specific information is described in this manual for the application module.

8.1 Setting the application module labeling at HMI


1. If the application module has not yet started, click on the Setup button under Operating mode on the home screen. The application module moves into its basic position

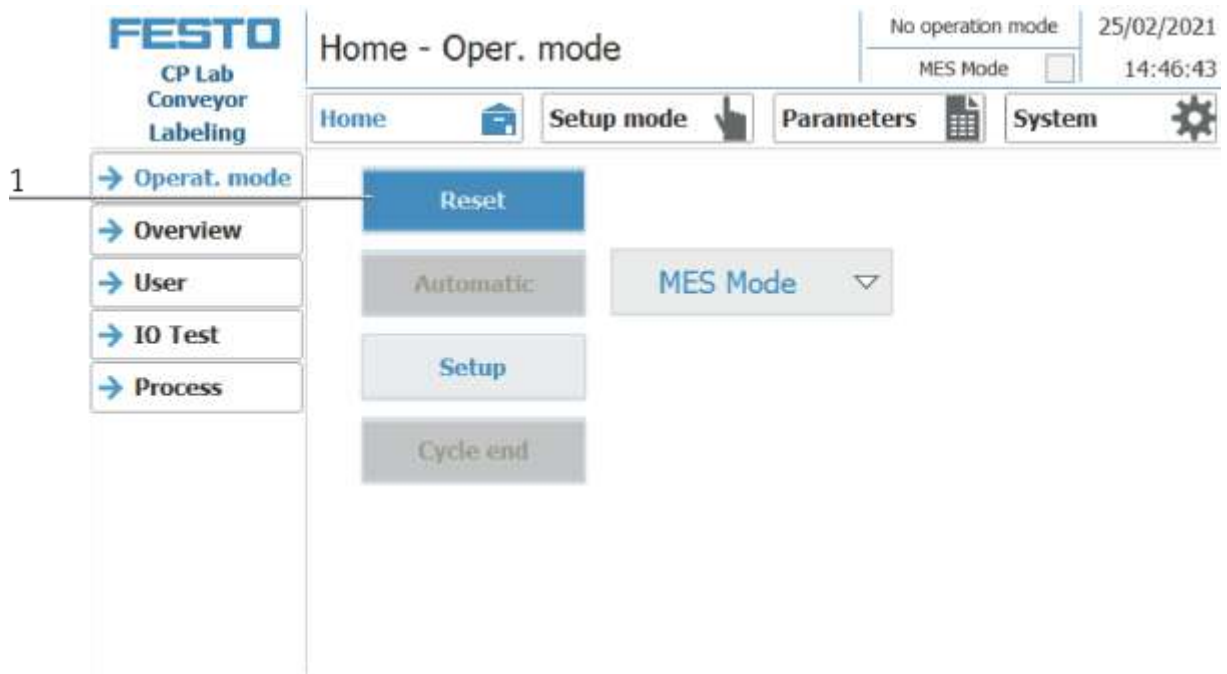


2. Then click on Setup, setup mode is active.

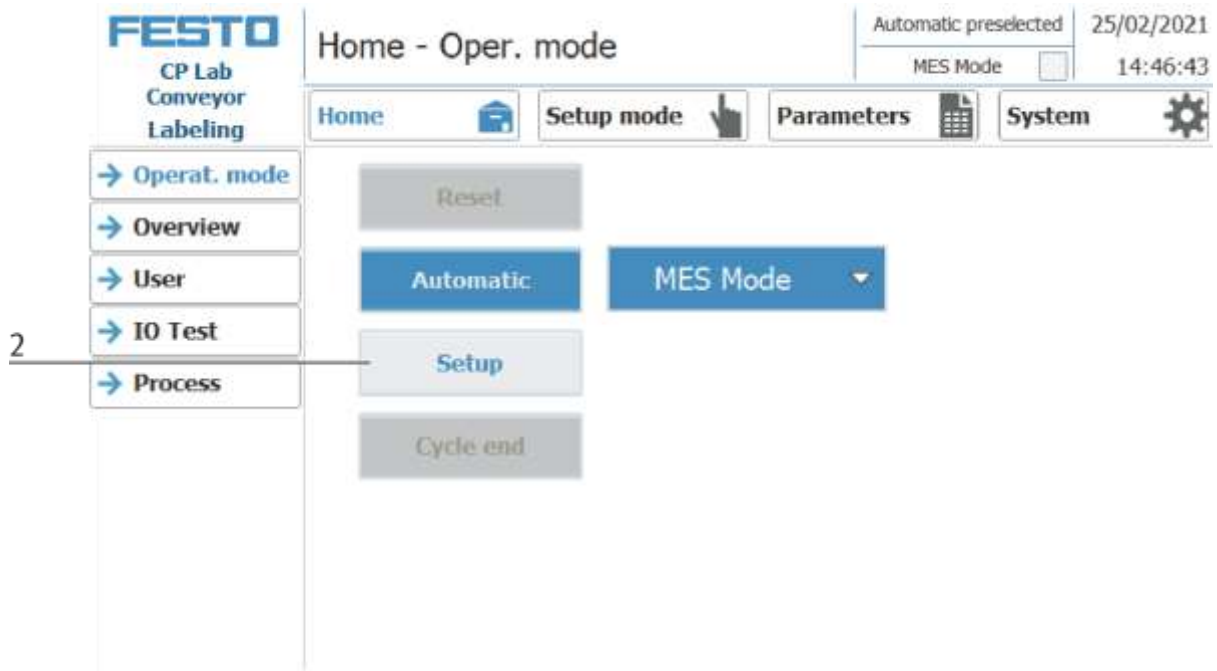

3. Change to Setup mode page.

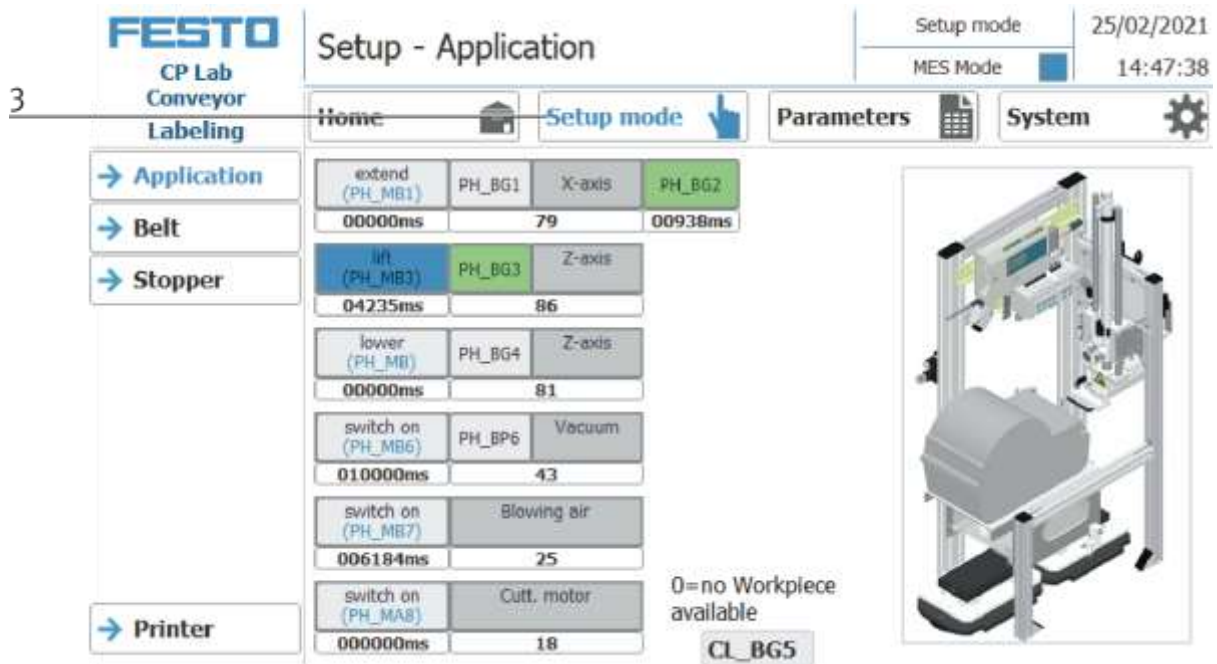

4. Choose application



Setup - Application

Setup mode 25/02/2021
MES Mode ■ 14:47:38

Home

Setup mode


Parameters

System

extend (PH_MB1)	PH_BG1	X-axis	PH_BG2
00000ms	79	00938ms	
lift (PH_MB3)	PH_BG3	Z-axis	
04235ms	86		
lower (PH_MB)	PH_BG4	Z-axis	
00000ms	81		
switch on (PH_MB6)	PH_BP6	Vacuum	
010000ms	43		
switch on (PH_MB7)	Blowing air		
006184ms	25		
switch on (PH_MA8)	Cutt. motor		
000000ms	18		

0=no Workpiece available

CL_BG5

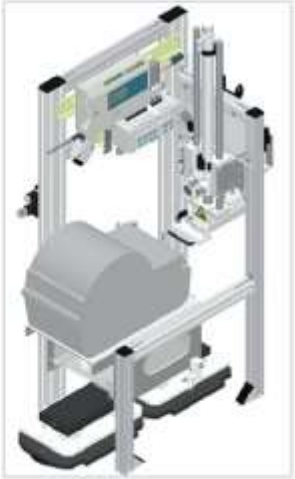

4

Application

Belt

Stopper

Printer


- Application is selected to setup the application module. The corresponding actuators can be started by pressing the buttons. The sensors are only for display and cannot be set manually

Position	Actuator/Sensor	Parameter 1	Parameter 2
1	extend (PH_MB1)	PH_BG1	X-axis PH_BG2
		00000ms	79 00938ms
2	lift (PH_MB3)	PH_BG3	Z-axis
		04235ms	86
3	lower (PH_MB)	PH_BG4	Z-axis
		00000ms	81
4	switch on (PH_MB6)	PH_BP6	Vacuum
		010000ms	43
5	switch on (PH_MB7)		Blowing air
		006184ms	25
6	switch on (PH_MB8)		Cutt. motor
		000000ms	18


0=no Workpiece available
CL_BG5

Position	Description
1	Move X-axis Button extend: move X-axis to pick up position (actor PH_MB1 is activated, lights up blue if active) PH_BG1: Sensor PH_BG1 (lights up green when X-axis in pick up position) PH_BG2: Sensor PH_BG2 (lights up green when X-axis in back position)
2	Move Z-axis Button lift: move Z-axis upwards (actor PH_MB3 is activated, lights up blue if active) PH_BG3: Sensor PH_BG3 (lights up green when Z-axis in upper end position)
3	Move Z-axis Button lower: move Z-axis downwards (actor PH_MB is activated, lights up blue if active) PH_BG4: Sensor PH_BG4 (lights up green when Z-axis in lower end position)
4	Switch on vacuum switch on button: switch on vacuum (actor PH_MB6 is activated, lights up blue if active)
5	Switch on blowing air switch on button: switch on blowing air (actor PH_MB7 is activated, lights up blue if active) PH_BG6: Switch PH_BG6 display (lights up green when vacuum is on and label is sucked)
6	Switch on cutter motor switch on button: switch on cutter motor (actor PH_MB8 is activated, lights up blue if active) Cut label (optional order at label printer)

- 6. For the labeling application, the printer can also be selected and set up in set-up mode. By pressing the start button, a printing process can be started with the corresponding variable.

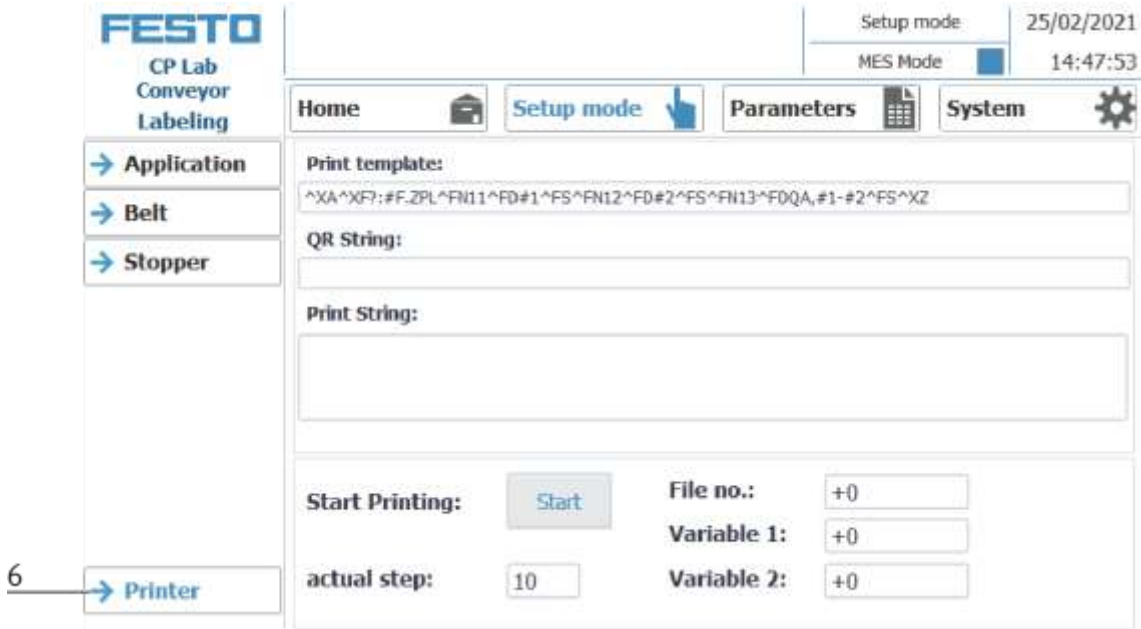


Printer code / printer template

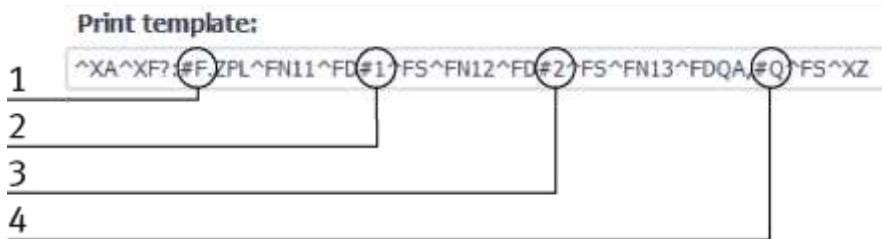

Explanation of the printing code


	Description
1	#F – Is the value for the filename - see parameter
2	#1 – Is the value for the variable 1 - see parameter
3	#2 – Is the value for the variable 2 - see parameter
4	#Q – Is the value for the QR String 1 - see parameter - only in MES Mode available

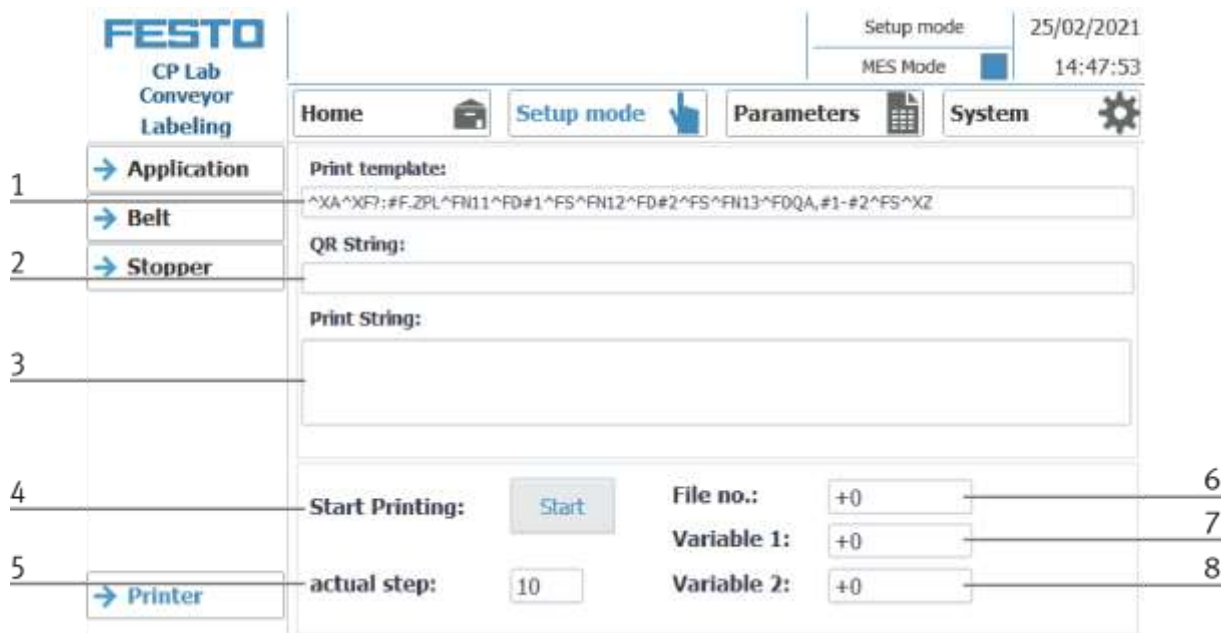

Position	Description
1	Print template The possible data for printers is displayed here
2	QR String The QR string is only available in MES mode
3	Print string Here, the data actually sent to the printer is displayed
4	Start printing Makes a print out
5	Actual step Only display / here the current step is displayed
6	File-no.: The file number can be edited in setup mode, otherwise it is used to display the current file number
7	Variable 1: In setup mode, the variable 1 can be edited, otherwise it is used to display the current variable 1
8	Variable 2: In setup mode, the variable 2 can be edited, otherwise it is used to display the current variable 2

8.2 Transitions of the application module


The transitions are located in the Parameters submenu





FESTO
CP Lab
Conveyor
Labeling


Parameters - Transitions

Automatic mode 25/02/2021
Default Mode ■ 14:48:31

Home 

Setup mode 

Parameters 

System 

→ Application


→ Transitions

→ Belt, Stopper

No.	Start condition	Application execute	Parameter				End condition	
			File No.	Variable 1	Variable 2	---	OK	NOK
Init	none	✓	0	0	0	0	0	0
1	0	✓	0	0	0	0	0	0
2	0	✓	0	0	0	0	0	0
3	0	✓	0	0	0	0	0	0
4	0	✓	0	0	0	0	0	0
5	0	✓	0	0	0	0	0	0
6	0	✓	0	0	0	0	0	0
7	0	✓	0	0	0	0	0	0
8	0	✓	0	0	0	0	0	0
9	0	✓	0	0	0	0	0	0
10	0	✓	0	0	0	0	0	0

The transitions can be displayed or changed here. How the transitions are processed is described in the CP-Lab conveyor manual.

8.3 Process of the application module

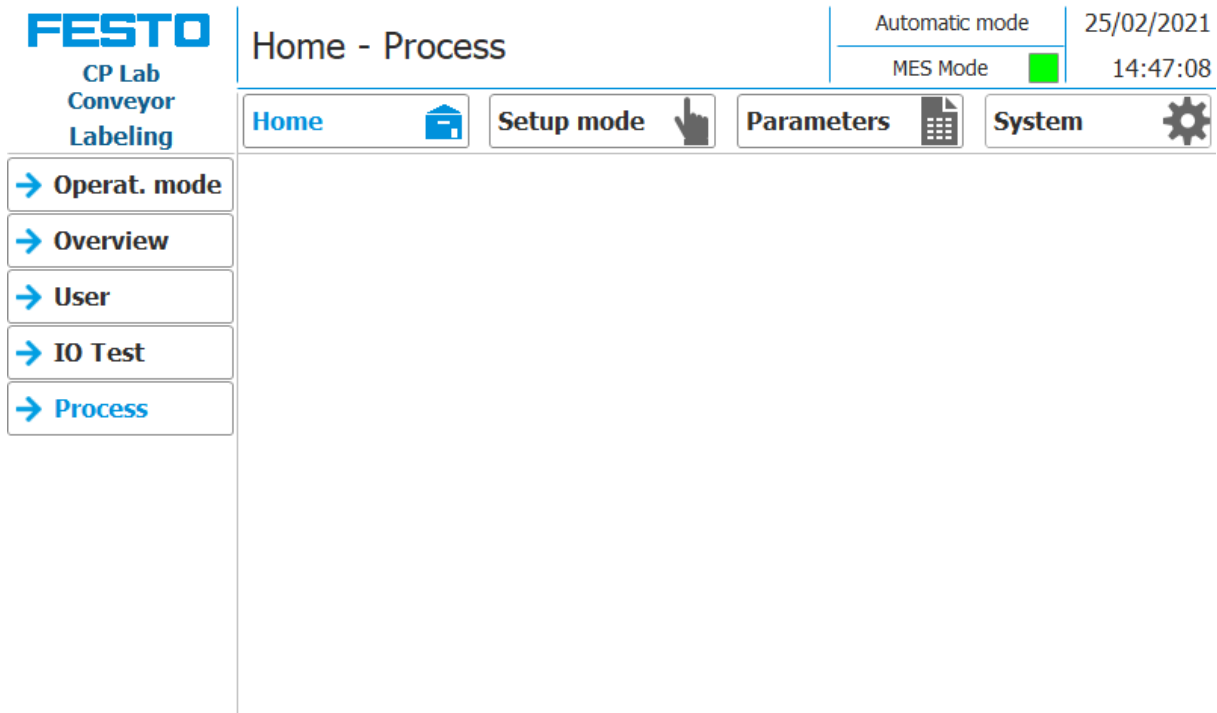

There is no process page available on the HMI for this application module.

8.4 Flow chart


CP-AM-LABEL	1
	<p>S1-S_Init Initialization start conditions</p>
	<p>T1-T_InitDone Wait for initialization done</p>
	<p>S2-S_StpIndx Prepare start conditions, reset all application outputs</p>
	<p>AUTO T2-T_Auto Wait for application start Wait for auto mode trigger and start condition valid (auto mode active and initial position)</p>
	<p>S3-S_SetBusy Set module to busy state, reset ready signal</p>
	<p>T3-T_SetBusyDn Wait for return message from the interactive message</p>
	<p>S4-S_SensChk Check start condition via sensor and activate fault pattern in case of error Call FC301 "SensorCheckLabeling"</p>
	<p>Sensor check ok T4-T_SensCheckOk Wait sensor check ok, wait for response "ok"</p>
	<p>S5-S_SuctFree Switch on vacuum, check whether suction plate is free, set MB6</p>
	<p>Sensor check not ok T24-T_SensChkNok Wait sensor check failed, wait for response "not ok"</p>
	<p>S22-S_SensFail Create return value for failed sensor check</p>
	<p>T25-T_SensFailDn Wait for Return Code <0></p>
	<p>S2 Jump back to step 2</p>
	<p>RESET T26-T_Reset Wait for reset Start Wait for reset trigger and reset condition valid (reset mode active and not initial position)</p>

CP-AM-LABEL	2
	<p>Suction plate is free T5-T_SuctFree Wait for suction plate is free and Vacuum sensor BP6 is not active</p>
	<p>S7-S_MovUpPos Lift Z-Axis, set MB3, reset MB4</p>
	<p>T7-T_Up Wait for Z-Axis in upper position, wait for BG3</p>
	<p>Suction plate is occupied T22-T_SuctOccpd Wait for suction plate is occupied, wait for BG6</p>
	<p>S21-S_SuctOccpd2 Suction plate occupied, create return value</p>
	<p>T23-T_SuctOccpd2 Wait for Return Code ≠0</p>
	<p>S2 Jump back to step 2</p>

CP-AM-LABEL	3
<pre> graph TD T7((T7)) --> S8[S8-S_MovPickPos] S8 --> T8((T8-T_MovPickPos)) T8 --> S9[S9-S_PrintLabel] S9 --> T9((T9-T_PrintLabel)) T9 --> S10[S10-S_VacSwitchOn] S10 --> T10((T10-T_VacSwitchOn)) T10 --> S11[S11-S_MovBackPos] S11 --> T11((T11-T_MovBackPos)) T11 --> S12[S12-S_MovDwnPos] S12 --> T12((T12-T_MovDwnPos)) T12 --> S13[S13-S_WaitPos] S13 --> T13((T13-T_WaitPos)) T13 --> S13[S13-S_WaitPos] S13 --> T13((T13-T_WaitPos)) T13 --> S14((S14)) </pre>	<p>S8-S_MovPickPos Extend X-Axis to label pick position, set MB1</p> <p>T8-T_MovPickPos Wait for X-Axis in label pick position, wait for BG1</p> <p>S9-S_PrintLabel Load print parameters, set start bit for print</p> <p>T9-T_PrintLabel Wait for label printed, wait for not busy and not started</p> <p>S10-S_VacSwitchOn Activate blowing air and vacuum, set MB6, reset MB7</p> <p>T10-T_VacSwitchOn Wait for vacuum built up conditions</p> <p>S11-S_MovBackPos Switch off blowing, retract X-axis, reset MB7, reset MB1</p> <p>T11-T_MovBackPos Wait for X-Axis retracted and Z-Axis in upper position</p> <p>S12-S_MovDwnPos Lower Z-axis, set MB4, reset MB3</p> <p>T12-T_MovDwnPos Wait for Z-Axis in lower position, wait for BG4</p> <p>S13-S_WaitPos Wait step for placing label on part</p> <p>T13-T_WaitPos Wait for 500ms</p>

CP-AM-LABEL	4
<pre> graph TD T13((T13)) --> S14[S14-S_VacSwitchOff] S14 --> T14((T14-T_VacSwitchOff)) T14 --> S15[S15-S_MovUpPos2] S15 --> T15((T15-T_ovUpPos2)) T15 --> S16[S16-S_CutOn] S16 --> T16((T16-T_CutOn)) T16 --> S17[S17-S_CutOff] S17 --> T17((T17-T_CutOff)) T17 --> S18[S18-S_LablPlacd] S18 --> Wait((Wait for label)) Wait -- T18-T_LablPlacd --> S19[S19-S_LablPlacd2] Wait -- T20-T_LablNotPlacd --> S20[S20-S_LablNotPlacd2] S19 --> T19((T19-T_LablPlacd2)) S20 --> T21((T21-T_LablNotPlacd2)) T19 --> S2((S2)) T21 --> S2 </pre>	<p>S14-S_VacSwitchOff Switch off vacuum, reset MB6</p>
	<p>T14-T_VacSwitchOff Wait for vacuum switched off, wait for not BP6</p>
	<p>S15-S_MovUpPos2 Lift Z-Axis, set MB3, reset MB4</p>
	<p>T15-T_ovUpPos2 Wait for Z-Axis in upper position, wait for BG3</p>
	<p>S16-S_CutOn Cut backing material, switch on cutting motor, set MA8</p>
	<p>T16-T_CutOn Wait for label cutted, wait 500ms</p>
	<p>S17-S_CutOff Switch off cutting motor, reset MA8</p>
	<p>T17-T_CutOff Wait for label cutted, wait 200ms</p>
	<p>S18-S_LablPlacd Check if label has been placed (switch on vacuum, feedback from vacuum switch must be missing) set MB6</p>
	<p>Label was placed T18-T_LablPlacd Wait 500ms for label placed and suction plate is free, wait for not BP6</p>
	<p>S19-S_LablPlacd2 Label has been placed, switch off vacuum, reset MB6</p>
	<p>T19-T_LablPlacd2 Wait for label placed, wait for 100ms</p>
	<p>S2 Jump back to step 2</p>
	<p>Label was not placed T20-T_LablNotPlacd Wait 500ms for label placed and suction plate is not free, wait for BP6</p>
	<p>S20-S_LablNotPlacd2 Label has not been placed, switch off vacuum, create return value</p>
	<p>T21-T_LablNotPlacd2 Wait for 100ms</p>
<p>S2 Jump back to step 2</p>	

CP-AM-LABEL	5
	<p>S23-S_ResX Reset: Retract X-Axis</p>
	<p>T27-T_ResLiftDn Wait for X-Axis retracted, wait for BG2</p>
	<p>S26-S_WhereIsZ Reset: check position of Z-axis</p>
	<p>Z-Axis is up T30-T_ZIsUp Wait for Z-Axis is in upper position, wait for BG3</p>
	<p>S24-S_ResZUP Reset: Lift Z-Axis, set MB3, reset MB4</p>
	<p>T28-T_ResZDn Wait for Z-Axis in upper position, wait for 200ms</p>
	<p>S25-S_ResDone Reference run completed, reset MB4</p>
	<p>T29-T_ResOkDn Wait for Z-Axis in upper position, wait for BG3</p>
	<p>S2 Jump back to step 2</p>
	<p>Z-Axis is down T31-T_ZIsDown Wait for Z-Axis is in lower position, wait for BG4</p>
	<p>S27-S_ResZDown Reset: Ventilate cylinder chamber of lowering Z-axis, set MB4, reset MB3</p>
	<p>T33-T_WaitDown Wait for Z-Axis in lower position, wait for 200ms</p>
	<p>S29-S_ResClampOpen Reset: Ventilate cylinder chambers of raising and lowering Z-axis, set MB3, set MB4</p>
	<p>S29-S_ResClampOpen Reset: Ventilate cylinder chambers of raising and lowering Z-axis, set MB3, set MB4</p>
	<p>T35-T_WaitClampOpen Wait for clamp opened, wait for 300ms</p>
	<p>S24 Jump back to step 24</p>

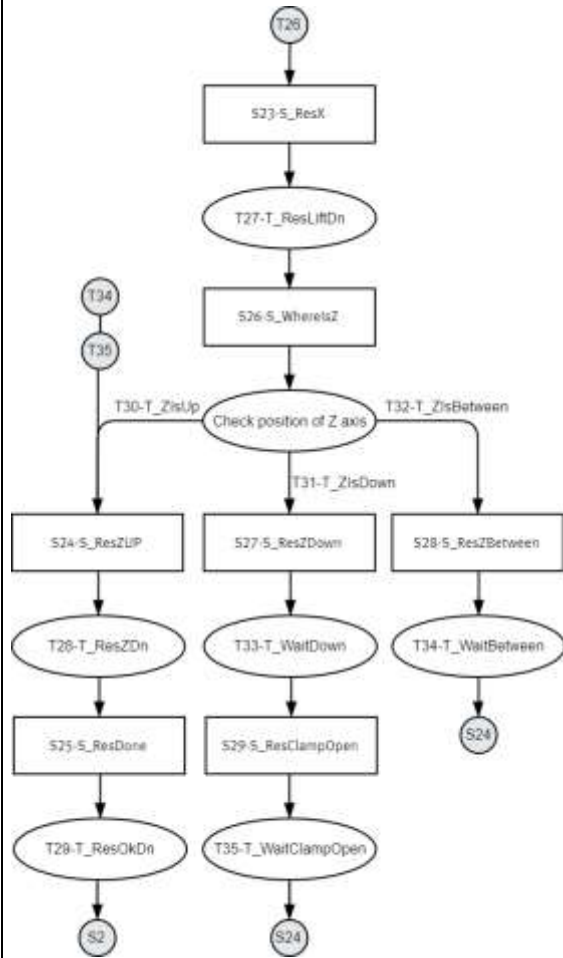

CP-AM-LABEL	6
	<p>Z-Axis is between T32-T_ZIsBetween Wait for Z-Axis not in upper and not in lower position, wait for not BG3 and not BG4</p>
	<p>S28-S_ResZBetween Reset: Ventilate cylinder chambers of raising and lowering Z-axis, set MB3, set MB4</p>
	<p>T34-T_WaitBetween Wait until chambers are filled, wait 300ms</p>
	<p>S24 Jump back to step 24</p>

8.5 Parameter (LABEL)

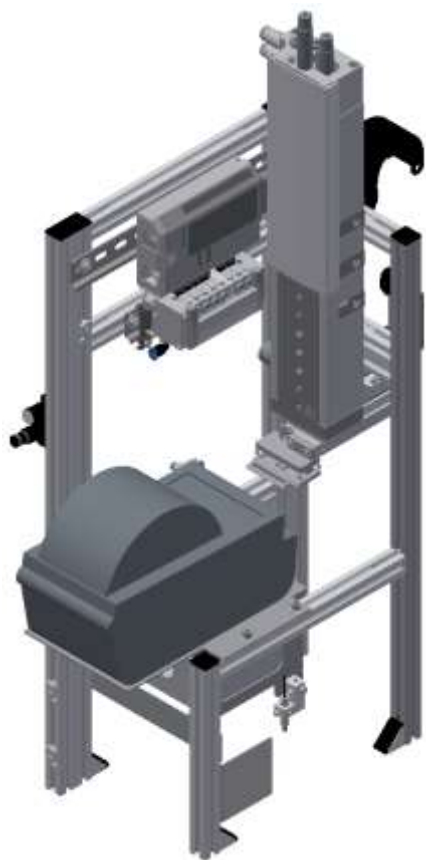


Illustration similar

Default:

Parameter-No.	Description
1	<p>File-No.</p> <p>0: Not defined (empty label is printed)</p> <p>1: Frame with ONo, OPos and Festo-Logo</p> <p>2: Frame with ONo, OPos without Festo-Logo</p> <p>3: QR-Code</p> <p>Limitation: No limit to the value in the transition table</p> <p>Note: The file no. selects the desired image template for printing. The image template can be created via the printer's website.</p>
2	<p>Variable 1</p> <p>Value: any</p> <p>Limitation: No limit to the value in the transition table</p> <p>Note: The meaning of variable 1 depends on the selected image template.</p>
3	<p>Variable 2</p> <p>Value: any</p> <p>Limitation: No limit to the value in the transition table</p> <p>Note: The meaning of variable 2 depends on the selected image template.</p>
4	Not used

MES:

Operation		Parameter	Description
114	Print label	1	<p>Program number</p> <p>Value: 1</p> <p>Type: changeable</p>
		2	<p>Parameter 1 [string]</p> <p>Example</p> <p><code>^XA^XF?:#F.ZPL^FN11^FD#1^FS^FN12^FD#2^FS^FN13^FDQA,#Q^FS^XS</code></p> <p>#F: File name #1: Variable 1 #2: Variable 2 #Q: QR-String</p> <p>Note:</p> <p>#F: The filename chose the picture template for the print</p> <p>#1: The meaning from variable 1 is independent from the chosen picture template.</p> <p>#2: The meaning from variable 2 is independent from the chosen picture template.</p> <p>#Q: The same QR string then the actual parameters instead the placeholders to generate an optional QR-Code</p>
		3	<p>Parameter 2 [string]</p> <p>Example</p> <p><code>^XA^XF?:#F.ZPL^FN11^FD#1^FS^FN12^FD#2^FS^FN13^FDQA,#Q^FS^XS</code></p> <p>#F: File name #1: Variable 1 #2: Variable 2 #Q: QR-String</p> <p>Note:</p> <p>#F: The filename chose the picture template for the print</p> <p>#1: The meaning from variable 1 is independent from the chosen picture template.</p> <p>#2: The meaning from variable 2 is independent from the chosen picture template.</p> <p>#Q: The same QR string then the actual parameters instead the placeholders to generate an optional QR-Code</p>

9 Message texts and interactive error messages at the HMI

In general, there are three different reporting classes. These are designed as follows

- Message class 0 (displayed red in the message line)
 - the program is immediately stopped and the automatic mode is terminated
 - the cause of the error has to be fixed
 - Then acknowledge the fault and restart the station
- Message class 1 (displayed red in the message line)
 - the program and the automatic mode are stopped at the end of the cycle
 - the cause of the error has to be fixed
 - Then acknowledge the fault and restart the station
- Message class 2 (displayed yellow in the message line)
 - the program and the automatic mode are executed further
 - If the cause of the fault is fixed, the error is automatically acknowledged
- Note
 - Displayed on the HMI but not processed in MES

9.1 Message texts

9.1.1 Message texts of the application module labeling


Melde-Klasse	Location	Alarmname	
0	ActuatorCntrApp	X-axis	Timeout: Sensor end position PH_BG1 not reached/left! Check sensor / end position. Instance: X-axis.
0	ActuatorCntrApp	X-axis	Timeout: Sensor end position PH_BG2 not reached/left! Check sensor / end position. Instance: X-axis.
0	ActuatorCntrApp	X-axis	Timeout: both sensors from end positions PH_BG1/PH_BG2 have same signal! Check sensors/end positions. Instance: X-axis;
0	ActuatorCntrApp	Z-axis_up	Timeout: Sensor end position PH_BG3 not reached/left! Check sensor / end position. Instance: Z-axis_up.
0	ActuatorCntrApp	Z-axis_down	Timeout: Sensor end position PH_BG4 not reached/left! Check sensor / end position. Instance: Z-axis_down.
0	ActuatorCntrApp	Vacuum	Timeout: feedback from sensor (PH_BP6) without control of actor PH_MB6! Instance: Vacuum. Check control / sensor
0	ActuatorCntrApp	Vacuum	Timeout: no feedback from sensor (PH_BP6) by activating actor PH_MB6! Instance: Vacuum. Check control / sensor
0	ActuatorCntrApp	BlowAir	Timeout (5000 ms) activating actor PH_MB7! Instance: BlowAir.
0	ActuatorCntrApp	CutPulse	Timeout (3000 ms) activating actor @1%s@! Instance: CutPulse.
0	ErrorApp	ErrPrinterJob	Timeout: No feedback from printing order; Parameter ONo: 1021 OPos: 1; PLC: plclabel; Instance: ErrPrinterJob.
0	ErrorApp	ErrLabelNotPlaced	Label was not placed / sucking plate not free! (Sensor: PH_BP6); remove label! PLC: plclabel; Instance: ErrLabelNotPlaced.
0	LabelPrintSrv	WarnPrinterOFF	Printer not switched on! Please check printer!
0	LabelPrintSrv	WarnPrinterPaused	Printer in break mode: Please check printer!

9.2 Interactive error messages

9.2.1 Default operation

Interactive messages are displayed via a pop-up window at HMI

The Pop Up has three buttons.

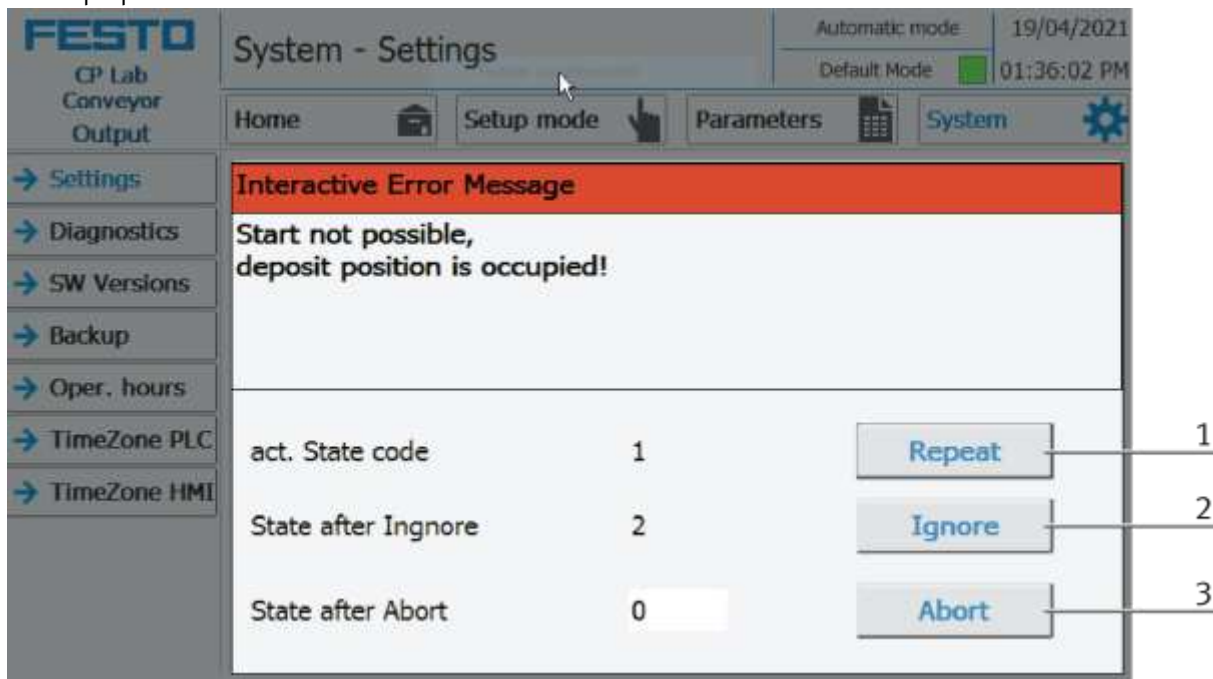

Example application module output - interactive error message in default mode

Position	Note
1	Repeat - An attempt is made to run the application again.
2	Ignore – The error status is ignored; the workpiece carrier receives the status code as indicated in the transition table in the "Initial status" column. The application is no longer executed.
3	Abort – The error status is ignored; the workpiece carrier receives the status code as shown in the input / output field next to the value displayed. This can be changed in this interactive error message window.

9.2.2 MES Operation

Interactive messages are displayed via a pop-up window at HMI

The Pop Up has four buttons.



Example application module output - interactive error message in default mode

Position	Note
1	Repeat - An attempt is made to run the application again with the same parameters.
2	Ignore – The application is not executed, but is treated in the MES as if the order step had been executed without errors.
3	Abort – The application is no longer executed. In the MES, this order position is terminated with an error and canceled, depending on whether an error step has been defined or not.
4	Reject order - the application will not be executed. In the MES, the step of this order position is reset and restarted the next time the workpiece carrier arrives.

9.2.3 General

Value	Text	Fix error
100	Order aborted with errors!	Start order again

9.2.4 Application module labeling

Value	Text	Fix error
1060	Suction plate is occupied!	Please remove label and check sensor BP6.
1061	Label was not placed!	Check suction plate and sensor BP6.
1062	Printer not ready	Switch on / check printer
1063	Printing label failed.	Check printer
1064	Build up vacuum failed	Check vacuum unit
5067	No workpiece on pallet detected!	Check pallet / sensor BG1.

10 Spare part list

10.1 Electric parts

Description	Part number	Res.Ident	Use
Proximity sensor SMT-10M-PS-24V-E-2,5-L-OE	551373	BG3	Z-axis top
Proximity sensor SMT-10M-PS-24V-E-2,5-L-OE	551373	BG4	Z-axis down
Proximity sensor SMT-10M-PS-24V-E-2,5-L-OE	551373	BG1	X-axis in back position
Proximity sensor SMT-10M-PS-24V-E-2,5-L-OE	551373	BG2	X-axis in label pick position
Light guide unit D: SOEG-L-Q30-P-A-S-2L	8127556	BG5	Workpiece available
Light guide SOOC-TB-M4-2-R25	552812	BG5	Workpiece available
I/O module	8027412	XD1	
Zebra Label printer	ZEB.ZD410	PH1	

10.2 Pneumatic parts

Description	Part number	Res.Ident	Use
Valve CPVSC1-M-M5	548901	MB 1	Expand X-axis
Valve CPVSC1-K-M5C	548899	MB 3	Z-axis lift
Valve CPVSC1-K-M5C	548899	MB 4	Z-axis lower
Valve CPVSC1-K-M5C	548899	MB 5	Open cylinder clamping unit
CPVSC-SP-M5	527532	XL10	
Valve CPVSC1-K-M5C	548899	MB 6	Vacuum switch on
Valve CPVSC1-K-M5C	548899	MB 7	Switch on blowing air
One-way flow control valve GRLA-1/8-QS-4-D	193143		
One-way flow control valve GRLA-1/8-QS-4-D	193143		
Cylinder DGSL-20-200-C-Y3A	543908		
One-way flow control valve GRLA-M5-QS-3-LF-C	175053		
One-way flow control valve GRLA-M5-QS-3-LF-C	175053		
Mini slide SLF-10-50-P-A	170510		
QS-connection plate / vacuum nozzle QSM-M5-3-l	153313		
Pressure control valve LRMA-QS-6	153496		
Vacuum jet VN-05-H-T4-PQ2-VQ2-01-P	536796		
One-way flow control valve GRLZ-M5-QS-3-LF-C	175055		

11 Service and cleaning

The components and systems from Festo Didactic are maintenance-free.

At regular intervals you should have checked:

- the lenses of the optical sensors, fibre optics and reflectors
- the active surface of the proximity switch
- the entire station

can be cleaned with a soft, lint-free cloth or brush.



NOTE

Do not use aggressive or abrasive cleaners.

Protective covers must not be cleaned with alcoholic cleaning agents, there is a risk of embrittlement.


12 Further information and updating

Further information and updates on the technical documentation of Festo Didactic components and systems can be found on the Internet at:

www.ip.festo-didactic.com



13 Disposal

	<p style="text-align: center;"><i>NOTE</i></p> <p>Electronic waste contains recyclable materials and must not be disposed of with the domestic waste. Bring electronic waste to a designated municipal collection point.</p>
---	---

Festo Didactic SE

Rechbergstraße 3
73770 Denkendorf
Germany



+49 711 3467-0



+49 711 34754-88500



www.festo-didactic.com



did@festo.com