

# 8043915

## Basic module branch

# FESTO

CP Factory/CP Lab

Translation of the  
original operating  
instructions



Festo Didactic  
8043915 en  
12/2021

Order number: 8097624  
Revision Level: 12/2021  
Authors: Schober  
Layout: Frank Ebel  
File Name: CP-F-BRANCH-GB-A004.doc

© Festo Didactic SE, Rechbergstr. 3, 73770 Denkendorf, Germany, 2021

 +49 711 3467-0       [www.festo-didactic.com](http://www.festo-didactic.com)  
 +49 711 34754-88500       [did@festo.com](mailto:did@festo.com)

Translation of the original instructions

© 2021 all rights reserved to Festo Didactic SE.



Where only pronouns such as he and him are used in these operating instructions, these pronouns are of course intended to refer to both male and female persons. The use of a single gender (e.g. he, him) should not be construed as gender discrimination; it is intended solely to make the manual easier to read and the formulations easier to understand.

	 <b>CAUTION</b>
	<p>These operating instructions must be available to the user at all times. The operating instructions must be read before commissioning. The safety instructions must be observed. Non-observance may result in severe personal injury or damage to property.</p>

### Main document

Associated documents attached:

Safety instructions concerning transport (print/electronic)

Component datasheets (print/electronic)

Circuit diagram (print/electronic)

# Contents

1 Safety instructions .....	6
1.1 Warning notice system .....	6
1.2 Pictograms .....	7
1.3 General prerequisites for installing the product.....	8
1.4 General prerequisites for operating the devices .....	8
2 Intended use .....	9
3 For your safety .....	10
3.1 Important information .....	10
3.2 Qualified persons .....	11
3.3 Obligations of the operating company .....	11
3.4 Obligations of the trainees .....	11
4 Basic safety instructions .....	12
4.1 General information .....	12
4.2 Mechanical components .....	12
4.3 Electrical components .....	13
4.4 Pneumatic components.....	16
4.5 Guarantee and liability for application examples .....	18
4.6 Cyber security .....	18
4.7 Additional safety instructions .....	19
4.8 Guarantee and liability .....	20
4.9 Transport.....	21
4.10 Name plates stations .....	22
4.11 General machine safety.....	23
4.12 Protective devices .....	24
4.12.1 Panel doors on underground control cabinet .....	24
4.12.2 Emergency stop.....	25
4.12.3 Additional protective devices .....	25
5 Technical data.....	26
5.1 Setup.....	27
6 Introduction .....	30
6.1 General information about CP Factory.....	30
6.2 Resources .....	31
7 Design and Function .....	35
7.1 Transport.....	35
7.2 Overview of the System.....	37
7.3 The basic module branch .....	38
7.4 Mechanical construction .....	40
7.4.1 Supply of the branch module .....	44
7.5 Electrical assembly.....	46
7.5.1 Cabling chart .....	54
7.5.2 Emergency-Stop Structure .....	57
7.6 Function extension by application modules .....	60
7.6.1 Assembly of an CP application module to a CP Factory basic module .....	60
7.6.2 Connecting the CP application module electrically to the CP Factory basic module .....	63

7.6.3 Pneumatic connection from application modules.....	64
7.7 Commissioning.....	65
7.7.1 Pneumatic commissioning.....	65
7.7.2 Electrical commissioning.....	65
7.8 Visual inspection.....	65
7.9 Adjusting the sensors.....	66
7.9.1 Proximity switch (stopper Identsensor).....	66
7.9.2 Proximity switch (stopper cylinder).....	68
7.9.3 Proximity switch (branch cylinder).....	70
7.10 Adjusting the one-way flow control valves.....	72
8 Operation.....	75
8.1 Starting the station.....	75
8.2 The control units of the basic module branch.....	75
8.3 Sequence description of the branch module.....	76
8.4 Menu architecture from operation panel.....	80
8.5 Operation modes.....	83
8.5.1 Mode.....	83
8.5.2 Operation mode Reset.....	86
8.5.3 Operation mode Setup.....	87
8.5.4 Operation mode automatic.....	109
8.5.5 Main menu - Home.....	110
8.5.6 Main menu - Setup.....	115
8.5.7 Main menu – Parameter.....	115
8.5.8 Main menu – System.....	121
8.6 Switching on the station.....	129
8.6.1 Start automatic.....	130
8.6.2 Sequence Description Automatic.....	133
8.6.3 Process description Cycle End.....	134
8.7 Operator assistance and simulate application on free AP.....	135
8.7.1 Generic sequence simulation.....	136
8.7.2 Operator assistance with display of pictures.....	137
8.7.3 Operator assistance with call of htm-page.....	139
8.8 OWriting on the RFID tag manually.....	140
8.8.1 Pallet carriers.....	140
8.8.2 Parameter (BRANCH).....	142
9 Components.....	143
9.1 Electrical components.....	143
9.1.1 2 Quadrant Controller.....	143
9.2 PLC Siemens.....	147
9.3 PLC Festo CECC.....	148
9.4 Turck Interface.....	149
9.5 PLC FESTO CPX-E.....	150
9.5.1 Touch Panel.....	151
9.6 Scalance Ethernet Switch.....	154
9.7 RFID with Ethernet.....	157
9.7.1 Electronic circuit protection.....	160
9.7.2 Power supply unit.....	162

9.7.3 SAFETY RELAY .....	164
9.7.4 Mini Terminal .....	165
9.7.5 SYS link interface .....	169
9.8 Mechanic components .....	170
9.8.1 Motor of Conveyor .....	170
9.8.2 The stopper unit .....	171
9.8.3 The branch .....	173
9.8.4 Transportation of the station.....	174
9.8.5 Operation panel working position .....	175
10 Message texts and interactive error messages at the HMI .....	177
10.1 Message texts .....	177
10.2 Interactive error messages .....	178
10.2.1 Default operation .....	178
10.2.2 MES Operation .....	179
10.2.3 General.....	179
11 Service and cleaning .....	180
12 Further information and updating .....	181
13 Disposal .....	182

# 1 Safety instructions

## 1.1 Warning notice system

These operating instructions contain notes that must be observed for your personal safety and in order to prevent property damage. The notes concerning your personal safety are indicated by a safety symbol.

Notes that only concern property damage are not indicated by a safety symbol.

The notes below are listed in order of hazard level.

	 <b>DANGER</b>
	<p>... indicates an <b>imminently</b> hazardous situation that will result in fatal or severe personal injury if not avoided.</p>

	 <b>WARNING</b>
	<p>... indicates a <b>potentially</b> hazardous situation which may result in fatal or severe personal injury if not avoided.</p>

	 <b>CAUTION</b>
	<p>... indicates a <b>potentially</b> hazardous situation that may result in moderate or slight personal injury or severe property damage if not avoided.</p>

	<b>NOTE</b>
	<p>... indicates a <b>potentially</b> hazardous situation that may result in property damage or loss of function if not avoided.</p>

In cases where more than one hazard level applies, the safety note with the highest hazard level will be shown. A safety note may concern both personal injury and property damage.

Hazards that will only result in property damage are indicated with the word "Note".

## 1.2 Pictograms

This document and the hardware described in it include warnings concerning possible hazards which may arise if the system is used incorrectly.

The following pictograms are used:



Hazard warning



Warning - dangerous electric voltage



Read and observe the operating and safety instructions prior to commissioning.



Switch off the device and unplug the connection for power supply from the plug socket before commencing installation, repair, maintenance or cleaning work.



Warning – hot surface



Warning – hand injuries



Warning – risk of entanglement



Warning – lifting heavy loads



Electrostatically sensitive devices



Information and/or references to other documentation

### 1.3 General prerequisites for installing the product

- Festo Didactic products must only be used for the applications specified in their respective operating instructions. Products or components supplied by other manufacturers must only be used if recommended or approved by Festo.
- The products must be transported, stored, installed, assembled, commissioned, operated and maintained properly in order to ensure their safe operation.
- The approved ambient conditions must be observed. The specifications in the relevant operating instructions must be observed.
- The safety equipment must be tested every working day.
- Connecting cables must be checked for damage before each use. In case of damage, they must be replaced.

Connecting cables must correspond to the minimum specifications.

### 1.4 General prerequisites for operating the devices

General requirements for safe operation of the system:

- In industrial facilities, the national accident prevention regulations must be observed.
- The laboratory or classroom must be overseen by a supervisor.
  - A supervisor is a qualified electrician or a person who has been trained in electrical engineering, knows the respective safety requirements and safety regulations, and whose training has been documented accordingly.

The laboratory or the classroom must be equipped with the following devices:

- An emergency-off device must be provided.
  - At least one emergency-off device must be located inside the laboratory or the classroom, and at least one outside it.
- The laboratory or classroom must be secured so that the operating voltage and compressed air supply cannot be activated by any unauthorized persons, for example by means of:
  - e.g. a keyswitch
  - e.g. lockable shut off valves
- The laboratory or classroom must be protected by residual current devices (RCDs).
  - RCDs with a differential current of  $\leq 30$  mA, Type B. When operating machinery with unavoidable leakage current, suitable measures must be implemented and documented in the corresponding workplace risk assessment.
- The laboratory or classroom must be protected by overcurrent protection devices.
  - Fuses or circuit breakers
- Devices must not be used if they are damaged or defective.
  - Damaged devices must be barred from further use and removed from the laboratory or classroom.
  - Damaged connecting cables, pneumatic tubing and hydraulic hoses represent a safety risk and must be removed from the laboratory or classroom.
- Safety devices must be checked every working day to ensure that they are fully functional.
- Connecting cables and accessories must be checked for damage before each use.

## 2 Intended use

Festo Didactic systems and components must only be used:

- For their intended use in teaching and training applications
- When their safety functions are in perfect condition

The components and systems are designed in accordance with the latest technology and recognized safety rules. However, life and limb of the user and third parties may be endangered and the components may be impaired if they are used incorrectly.

The Festo Didactic learning system has been developed and produced exclusively for education and training in the field of automation technology. The training company and/or trainers must ensure that all trainees observe the safety precautions described in these operating instructions.

Training with complex machinery is a highly hazardous activity. The operating company must draw up and document a workplace risk assessment. The trainees must be briefed on all the relevant safety aspects before work commences.

**Festo Didactic hereby excludes any and all liability for damages suffered by apprentices, the training company and/or any third parties, which occur during use of the device in situations which serve any purpose other than training and/or vocational education, unless such damages have been caused by Festo Didactic due to malicious intent or gross negligence.**

All extensions and accessories must be approved by Festo Didactic, and are only permitted for use for their intended purpose.

The machine fulfils the requirements of the European directives that applied when it was commissioned. Any modification to the machine shall render the manufacturer's CE Declaration of Conformity null and void. The CE Declaration of Conformity must be renewed following each major modification.

## 3 For your safety

### 3.1 Important information

Knowledge of the basic safety instructions and safety regulations is a fundamental prerequisite for safe handling and trouble-free operation of Festo Didactic components and systems.

These operating instructions include the most important instructions for safe use of the components and systems. In particular, the safety instructions must be adhered to by all persons who work with these components and systems. Furthermore, all pertinent accident prevention rules and regulations that are applicable at the respective place of use must be adhered to.

	 <b>WARNING</b>
	<ul style="list-style-type: none"><li>• <b>Malfunctions which could impair safety must be eliminated immediately!</b></li></ul>

	 <b>CAUTION</b>
	<ul style="list-style-type: none"><li>• <b>Improper repairs or modifications may result in unforeseeable operating statuses. Do not carry out any repair or alternation work on components or systems that is not described in these operating instructions.</b></li></ul>

### 3.2 Qualified persons

- The product described in these operating instructions is only permitted for operation by persons who are qualified for the task in question in accordance with the operating instructions, especially the safety instructions.
- Qualified persons are defined as persons whose training and experience enables them to recognize risks and avoid potential dangers when working with this product.

### 3.3 Obligations of the operating company

It is the responsibility of the operating company to ensure that the station is operated safely.

The operating company undertakes to allow only those persons to work with the components and systems who:

- Are familiar with the basic regulations regarding occupational safety, with the safety instructions, and with the accident prevention regulations, and who have been instructed in the use of the components and systems
- Have read and understood the safety chapter and warnings in these operating instructions
- Are qualified to operate the components and systems in question
- Are governed by and trained in suitable organizational measures to ensure safe training

Personnel should be tested at regular intervals to ensure that they are safety-conscious in their work habits.

### 3.4 Obligations of the trainees

All persons who have been entrusted to work with the components and systems undertake to complete the following steps before beginning work:

- Read the chapter concerning safety and the warnings in these operating instructions
- Familiarize themselves with the basic regulations regarding occupational safety and accident prevention

## 4 Basic safety instructions

### 4.1 General information

	 <b>CAUTION</b>
	<ul style="list-style-type: none"> <li>• <b>Trainees must be supervised by an instructor at all times when working with the components and systems.</b></li> <li>• <b>Observe the specifications included in the technical data for the individual components and in particular all the safety instructions!</b></li> <li>• <b>Wear your personal protective equipment (safety goggles, safety shoes).</b></li> <li>• <b>Never leave objects lying on the top of protective enclosures. Vibrations could cause such objects to fall off.</b></li> </ul>

### 4.2 Mechanical components

	 <b>WARNING</b>
	<ul style="list-style-type: none"> <li>• <b>Switch off the power supply!</b> <ul style="list-style-type: none"> <li>– Switch off both the operating power and the control power before commencing work on the circuit.</li> <li>– Never reach into the setup unless it is at a complete standstill.</li> <li>– Be aware of potential overtravel times for the actuators.</li> </ul> </li> <li>• <b>Risk of injury during troubleshooting!</b> <ul style="list-style-type: none"> <li>– Use a tool such as a screwdriver for actuating sensors.</li> </ul> </li> </ul>

	 <b>CAUTION</b>
	<ul style="list-style-type: none"> <li>• <b>Risk of burns due to hot surfaces</b> <ul style="list-style-type: none"> <li>– Devices can reach high temperatures during operation, as a result of which they can cause burns if touched.</li> </ul> </li> <li>• <b>Measures to take when maintenance is required.</b> <ul style="list-style-type: none"> <li>– Allow the device to cool off before commencing work.</li> <li>– Use suitable personal protective clothing, e.g. safety gloves.</li> </ul> </li> </ul>

### 4.3 Electrical components

	 <b>DANGER</b>
	<ul style="list-style-type: none"><li>• <b>Risk of fatal injury in case of interrupted protective grounding conductor!</b><ul style="list-style-type: none"><li>– The protective grounding conductor (yellow-green) must not be interrupted, either inside or outside of the device.</li><li>– The insulation of the protective grounding conductor must never be damaged or removed.</li></ul></li><li>• <b>Risk of death from connecting power supply units in series!</b><p>Contact voltages of greater than 25 V AC or 60 V DC are not permissible. Contact with voltages of greater than 50 V AC or 120 V DC may be fatal.</p><ul style="list-style-type: none"><li>– Do not connect power supplies in series.</li></ul></li><li>• <b>Risk of death due to electric shock!</b><p>Protect the outputs of the power supplies (output sockets/terminals) and cables connected to them from direct contact.</p><ul style="list-style-type: none"><li>– Always use connector cables with adequate insulation and electric strength.</li><li>– Use safety sockets with fully shrouded contact points.</li></ul></li></ul>

	 <b>WARNING</b>
	<ul style="list-style-type: none"> <li>• <b>Disconnect from all sources of electrical power!</b> <ul style="list-style-type: none"> <li>– Switch off the power supply before working on the circuit.</li> <li>– Please note that electrical energy may be stored in individual components. Further information on this issue is available in the datasheets and operating instructions included with the components.</li> <li>– <b>Warning!</b> Capacitors inside the device may still be charged even after being disconnected from all sources of voltage.</li> </ul> </li> <li>• <b>Danger due to malfunction</b> <ul style="list-style-type: none"> <li>– Never place or leave liquids (e.g. drinks) on the station in open containers.</li> <li>– The machine must not be switched on if there is condensation (moisture) on its surface.</li> <li>– Never lay pipes/hoses designed to carry liquid media near the machine.</li> </ul> </li> <li>• <b>Electric shock due to connection to unsuitable power supply!</b> <ul style="list-style-type: none"> <li>– When devices are connected to an unsuitable power supply, exposed components can cause dangerous electrical voltage that can lead to severe or fatal injury.</li> <li>– Always use power supplies that provide SELV (safety extra-low voltage) or PELV (protective extra-low voltage) output voltages for all the connections and terminals on the electronics modules.</li> </ul> </li> <li>• <b>Electric shock when there is no protective grounding in place</b> <ul style="list-style-type: none"> <li>– If there is no protective grounding terminal in place for a Protection Class I device, or if the protective grounding terminal has not been installed correctly, exposed, conductive parts may carry high voltages, thus causing severe or fatal injury if touched.</li> <li>– Ground the device in accordance with the applicable regulations.</li> </ul> </li> </ul>

	 <b>WARNING</b>
	<ul style="list-style-type: none"> <li>• <b>Risk of fire due to use of unsuitable power supply</b> <ul style="list-style-type: none"> <li>– If a device is connected to an unsuitable power supply, this can cause components to overheat, leading to a breakout of fire.</li> <li>– Always use limited power supplies (LPSs) for all the connections and terminals on the electronics modules.</li> </ul> </li> </ul>

**CAUTION**

- **Always ensure that your connecting cables are designed for use with the electrical connections in question.**
- **When laying connecting cables, make sure they are not kinked, sheared or pinched. Cables laid on the floor must be covered with a cable bridge to protect them.**
- **Do not lay cables over hot surfaces.**
  - Hot surfaces are identified with a corresponding warning symbol.
- **Make sure that connecting cables are not subjected to continuous tensile loads.**
- **Devices with a grounding terminal must always be grounded.**
  - If a ground connection (green-yellow laboratory socket) is available, it must always be connected to the protective grounding. The protective grounding must always be connected first (before voltage) and disconnected last (after disconnecting the voltage).
  - Some devices have high leakage current. These devices must be fitted with a grounding conductor for additional grounding.
- **When replacing fuses, always use specified fuses with the correct current rating and tripping characteristics.**
- **The device is not equipped with a built-in fuse unless otherwise specified in the technical data.**
- **Safe operation of the device is not possible in the event of any of the following circumstances:**
  - Visible damage
  - Malfunction
  - Inappropriate storage
  - Incorrect transport
- **Switch off the power supply immediately.**
- **Protect the device to prevent it from being restarted accidentally.**

#### 4.4 Pneumatic components

	 <b>WARNING</b>
	<ul style="list-style-type: none"><li>• <b>Depressurize the system!</b><ul style="list-style-type: none"><li>– Switch off the compressed air supply before working on the circuit.</li><li>– Check the system using pressure gauges to make sure that the entire circuit is fully depressurized.</li><li>– Please note that energy may be stored in reservoirs. Further information on this issue is available in the datasheets and operating instructions included with the components.</li></ul></li><li>• <b>Risk of injury when switching on compressed air!</b><ul style="list-style-type: none"><li>– Cylinders may advance and retract automatically.</li></ul></li><li>• <b>Risk of accident due to advancing cylinders!</b><ul style="list-style-type: none"><li>– Always position pneumatic cylinders so that the piston rod's working space is unobstructed along its entire stroke range.</li><li>– Make sure that the piston rod cannot collide with any of the rigid components in the setup.</li></ul></li><li>• <b>Risk of accident due to pneumatic tubing slipping off!</b><ul style="list-style-type: none"><li>– Use shortest barbed tubing connectors possible.</li><li>– If pneumatic tubing slips off, switch off the compressed air supply immediately.</li></ul></li><li>• <b>Do not exceed the maximum permissible pressure of 600 kPa (6 bar).</b></li><li>• <b>Do not switch on the compressed air until all the barbed tubing connectors have been connected and secured.</b></li><li>• <b>Do not disconnect pneumatic tubing while it is under pressure.</b><ul style="list-style-type: none"><li>– Do not attempt to seal or plug pneumatic tubing or plug connectors with your hands or fingers.</li></ul></li><li>• <b>Check the condition of the condensate in the service unit regularly. If necessary, drain the condensate and dispose of it properly.</b></li></ul>

	 <b>CAUTION</b>
	<ul style="list-style-type: none"><li>• <b>Setting up pneumatic circuits</b><ul style="list-style-type: none"><li>– Connect the devices with plastic tubing with an outside diameter of 4 or 6 mm.</li><li>– Push the pneumatic tubing into the push-in connector as far as it will go.</li></ul></li><li>• <b>Dismantling pneumatic circuits</b><ul style="list-style-type: none"><li>– Switch off the compressed air supply before dismantling the circuit.</li><li>– Press the blue release ring down so that the tubing can be pulled out.</li></ul></li><li>• <b>Noise due to escaping compressed air</b><ul style="list-style-type: none"><li>– Noise caused by escaping compressed air may damage your hearing. Reduce noise by using mufflers, or wear hearing protection if the noise cannot be avoided.</li><li>– All of the exhaust ports on the components included in the equipment set are equipped with mufflers. Do not remove these mufflers.</li></ul></li></ul>

#### 4.5 Guarantee and liability for application examples

The application examples are not legally binding, and we cannot guarantee their completeness in terms of their configuration, their equipment or any events that may occur. The application examples are not representations of any specific customer solution; they are merely intended to illustrate typical tasks for which the product in question could be used. You bear the responsibility for ensuring that the products described here are operated properly. These application examples do not in any way relieve you of your responsibility to ensure that the system is handled safely when it is being used, installed, operated or maintained.

#### 4.6 Cyber security

##### Note

Festo Didactic offers products with industrial security functions that aid the safe operation of plants, systems, machines and networks. In order to protect plants, systems, machines and networks from cyber threats, a comprehensive industrial security concept must be implemented and continuously updated. Festo's products and services only constitute one part of such a concept.

The customer is responsible for preventing unauthorized access to their plants, systems, machines and networks. Systems, machines and components should only be connected to a company's network or the Internet if and as necessary, and only when the suitable security measures (e.g. firewalls and network segmentation) are in place. Furthermore, Festo's guidelines on suitable security measures should be observed. Festo products and solutions are constantly being developed further in order to make them more secure. Festo strongly recommends that customers install product updates as soon as they become available and always use the latest versions of its products. Any use of product versions that are no longer supported or any failure to install the latest updates may render the customer vulnerable to cyber attacks.

	 <b>WARNING</b>
	<ul style="list-style-type: none"> <li>• <b>Unsecure operating conditions due to software tampering</b> <ul style="list-style-type: none"> <li>– Forms of software tampering (e.g. viruses, Trojans, malware and worms) can lead to unsecure operating conditions in your system, which may in turn lead to severe or fatal injury or property damage.</li> <li>– Keep your software up to date.</li> <li>– Integrate the automation and actuator components into an overarching and comprehensive industrial security concept for the installation or machine in question that is in line with the latest technological developments.</li> <li>– Make sure that all the products you have installed are incorporated into your overarching industrial security concept.</li> <li>– Use suitable measures, such as a virus scanner, to protect files save on exchangeable storage media from malware.</li> </ul> </li> </ul>

#### 4.7 Additional safety instructions

General requirements for safe operation of the devices:

- Do not lay cables over hot surfaces.
  - Hot surfaces are identified with a corresponding warning symbol.
- Maximum permissible current loads for connector cables and devices must not be exceeded.
  - Always compare the current ratings of the device, the cable and the fuse to ensure that they match.
  - If they do not match, use a separate upstream fuse in order to provide appropriate overcurrent protection.
- Devices with a grounding terminal must always be grounded.
  - If a ground terminal (green-yellow laboratory socket) is available, it must always be connected to protective ground. The protective grounding must always be connected first (before voltage) and disconnected last (after disconnecting the voltage).
- The device is not equipped with a built-in circuit unless otherwise specified in the technical data.

	<p data-bbox="756 797 1027 853"> <b>WARNING</b></p> <ul style="list-style-type: none"><li>• <b>This product is designed for use in industrial environments, and may cause malfunctions if used in domestic or small commercial environments.</b></li></ul>
---	---

#### **4.8 Guarantee and liability**

Our General Terms and Conditions of Sale and Delivery shall apply at all times. These shall be made available to the operating company no later than upon conclusion of the sales contract. Guarantee and liability claims resulting from personal injury and/or property damage are excluded if they can be traced back to one or more of the following causes:

- Use of the equipment for purposes other than its intended use
- Improper installation, commissioning, operation or maintenance of the system
- Operation of the system with defective safety equipment, or with improperly attached or non-functional safety equipment and protective guards
- Non-compliance with directions included in the operating instructions with regard to transport, storage, installation, commissioning, operation, maintenance and setup of the system
- Unauthorized modifications to the system
- Improperly executed repairs
- Disasters resulting from the influence of foreign bodies and acts of God
- Dust generated during construction work must be kept away from the system (use coverings).  
See the Environmental Requirements section (contamination level) for more details.

## 4.9 Transport

	<div style="background-color: #c85130; color: white; padding: 5px; text-align: center;">  <b>WARNING</b> </div> <ul style="list-style-type: none"> <li>• <b>Danger due to tipping over</b> <ul style="list-style-type: none"> <li>– Suitable packaging and transport equipment must be used when transporting the station. The station can be lifted from underneath using a forklift truck. Please note that eccentric centers of gravity can cause the station to tip over.</li> <li>– Stations with attachments at height will have a high center of gravity.</li> <li>– Take care to avoid tipping over during transportation.</li> </ul> </li> </ul>
	<div style="background-color: #f1c40f; color: black; padding: 5px; text-align: center;">  <b>CAUTION</b> </div> <ul style="list-style-type: none"> <li>• <b>Danger due to broken castors!</b> <p>The castors on the device are not designed to be used for transportation. The castors are designed merely for positioning the station. The screw feet must relieve the castors of all the station's weight before commissioning begins. The screw feet must be set so that the station is horizontal and aligned at the same height as its neighboring station.</p> <ul style="list-style-type: none"> <li>– Safety shoes must be worn when transporting the station!</li> </ul> </li> </ul>
	<div style="background-color: #2980b9; color: white; padding: 5px; text-align: center;"> <b>NOTE</b> </div> <ul style="list-style-type: none"> <li>• <b>Station contains delicate components!</b> <ul style="list-style-type: none"> <li>– Take care not to shake during transportation</li> <li>– The station is only permitted for installation on solid, non-vibrating surfaces.</li> <li>– Make sure that the ground underneath the station has sufficient load-bearing capacity.</li> </ul> </li> </ul>

#### 4.10 Name plates stations

1	<b>FESTO</b>	
2	<b>CP-F-LINEAR-C42</b>	
3	Mat.-Nr.: <b>xxxxxxx</b>	
4	Auftrag: <b>aaaaaaaaaa M306 2020</b>	
5	<b>3AC 400V 50/60 Hz</b>	
6	<b>I=1A SCCR=10kA p=6 bar 90 psi</b>	
7	 <b>3S7PNLMDTQG</b>	9
8	<b>Festo Didactic SE</b> <b>Rechbergstrasse 3</b> <b>DE-73770 Denkendorf</b>	8
		
		

Name plate example

Position	Description
1	Description / Configuration
2	Intern material number
3	Order number, charge code, year of construction
4	Data electrical connection
5	Current consumption, short-circuits strength, input pressure compressed air (bar / psi)
6	Unique-ID, unique machine identification
7	Manufacturer's address
8	Data matrix code of a link to the website of the product
9	CE Identification

#### 4.11 General machine safety

	 <b>WARNING</b>
	<ul style="list-style-type: none"><li>• <b>General machine safety, CE conformity</b><ul style="list-style-type: none"><li>– The individual modules of this system contain control programs for which the safety of the machine has been evaluated.</li><li>– The safety-related parameters and checksums of the safety function are listed in the operating instructions for the respective stations.</li><li>– Changes to programs may impair the safety of the machine. A modified control program may constitute a major change to the machine.</li><li>– In such cases, the manufacturer's CE Declaration of Conformity shall be rendered null and void. The operating company will need to re-evaluate the safety of the machine and confirm its CE conformity.</li></ul></li></ul>

#### 4.12 Protective devices

In order to reduce risks, this machine contains guards to prevent access to dangerous areas. These guards must not be removed or tampered with.

 <b>WARNING</b>	
	<ul style="list-style-type: none"><li>• <b>Damage to the safety window</b><ul style="list-style-type: none"><li>– Windows must not be cleaned using aggressive or alcoholic cleaning agents. Risk of brittleness and breakage!</li><li>– This protective device must be replaced if it shows any signs of damage. Please contact our Service department to arrange this.</li></ul></li></ul>

##### 4.12.1 Panel doors on underground control cabinet

Transparent, impact-resistant, polycarbonate plate with lock.

Can only be accessed with tool (control cabinet key); tool must be kept in a secure place!

Access reserved for qualified electricians.

The safety door is not monitored! Make sure the safety door is always closed.

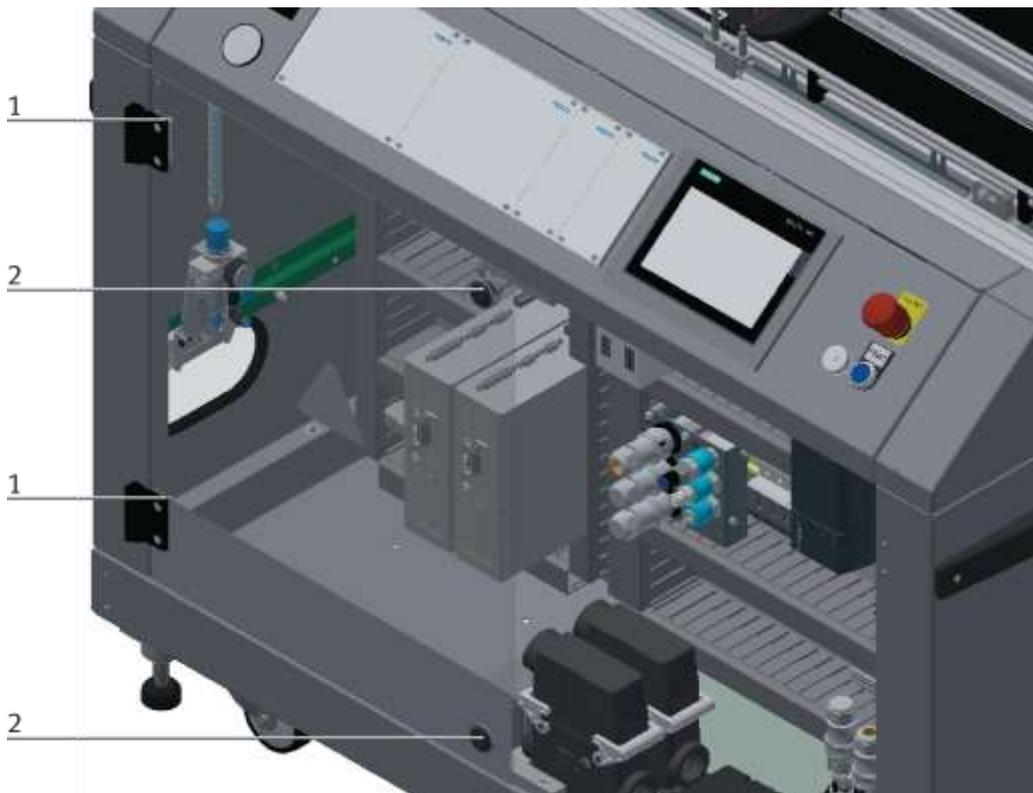


Illustration similar

The hinges of the control cabinet doors are provided with spring steel sheets (1). If the switch cabinet locks (2) are not locked, the door is automatically opened a crack and reminds the user to firmly lock the door with the switch cabinet locks.

#### **4.12.2 Emergency stop**

Every station contains an emergency stop mushroom actuator. All the emergency stop actuators in the system are interconnected. The emergency stop signal shuts off all the actuators. Operator confirmation is required to restart the system; there is no automatic restart.




#### **4.12.3 Additional protective devices**

The individual components, such as the power supplies and the controllers, possess built-in safety functions such as short-circuit protection, overcurrent protection, overvoltage protection and thermal monitoring. If necessary, consult the instruction manual for the device in question for more information.


## 5 Technical data

Parameter	Value
<b>Electrics</b>	
Operating voltage	3-phase 400 V AC±10%, 50 Hz
Power supply system	TNC-S, mains conductor L1, L2, L3, neutral conductor N, protective grounding PE
Full load power	1 A
Control voltage, Voltage for small actuators	24 V DC Protective extra-low voltage (PELV)
Power supply connection	IEC 60309, CEE 16 A
Max. backup fuse for installation	16 A
Leakage current	≤ 18 mA
Connecting cable between stations	System plug
Protection class	I, Operation with protective grounding only. Second protective grounding conductor required due to high leakage current
Overvoltage category	CAT II, Operation in building installation only
Short circuit current rating (SCCR)	10 kA
<b>Compressed air</b>	
Supply pressure	6 bar, 90 psi
Supply rate	≥ 40 l/min
Compressed air quality	EN ISO 8573-1
Pressure dew point (Class 4)	≤ +3°C
<b>Ambient conditions</b>	
Operating environment	Use inside building only
Ambient temperature	5°C ... 40°C
Rel. air humidity	80% up to 31°C
Pollution degree	2, Dry, non-conductive contamination
Operating height	Up to 2000 m above NN (sea level)
Noise emission level	L <sub>pA</sub> < 70 dB
<b>Certification</b>	
CE marking in accordance with:	Machinery Directive EMC Directive RoHS Directive
EMC environment	Industrial environment, Class A (in acc. with EN 55011)
<b>Subject to change</b>	


5.1 Setup

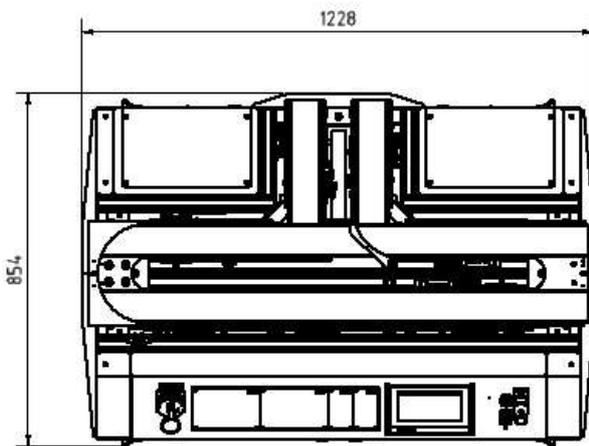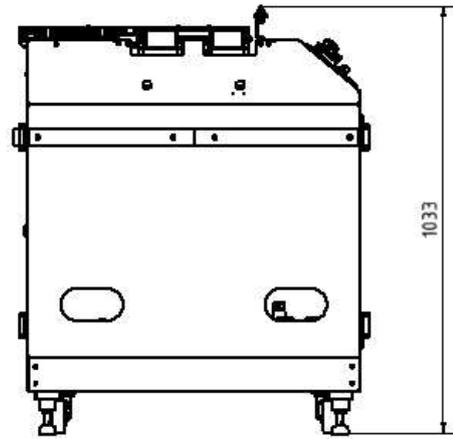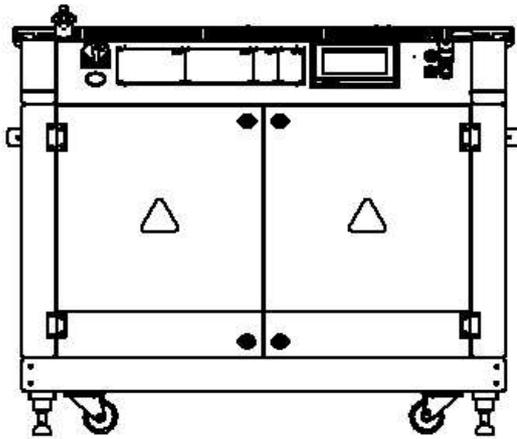

Drawing with closed doors / illustration similar

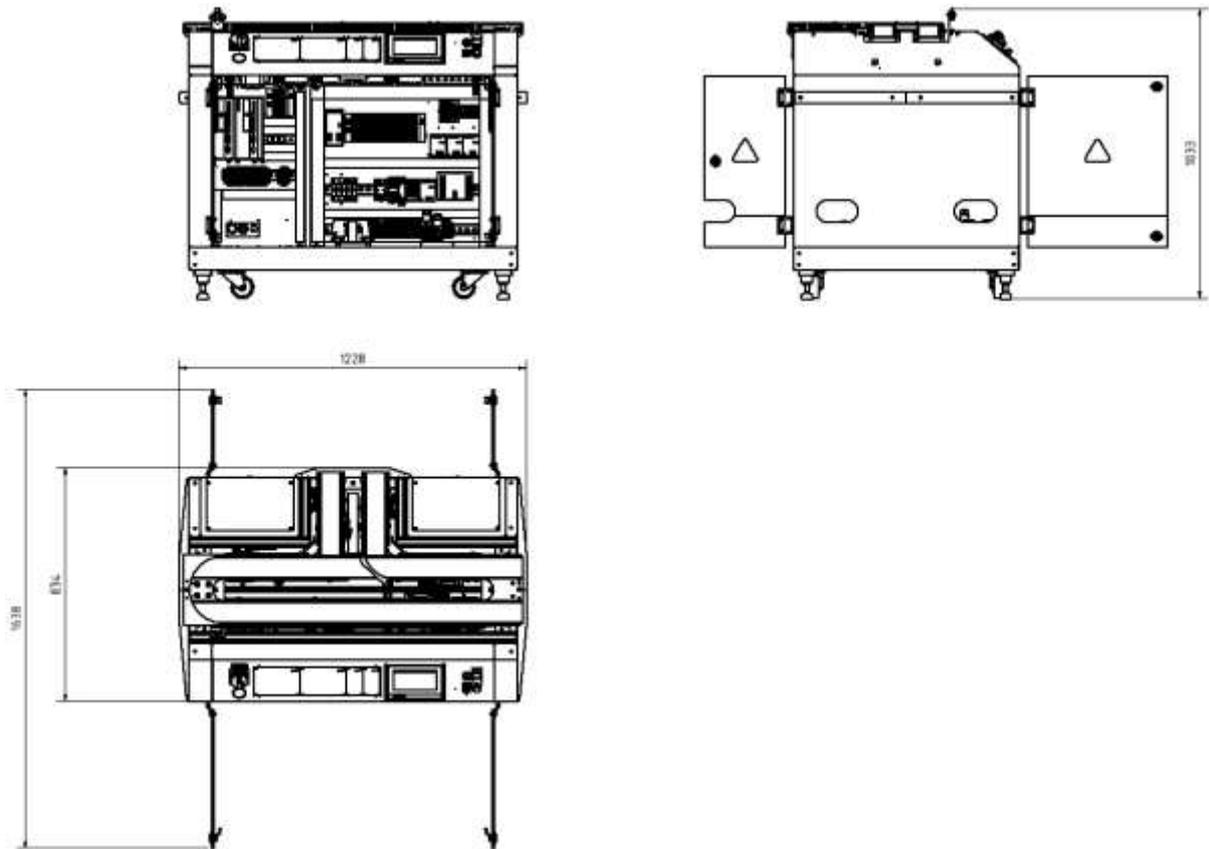

Drawing with open doors 90° / illustration similar

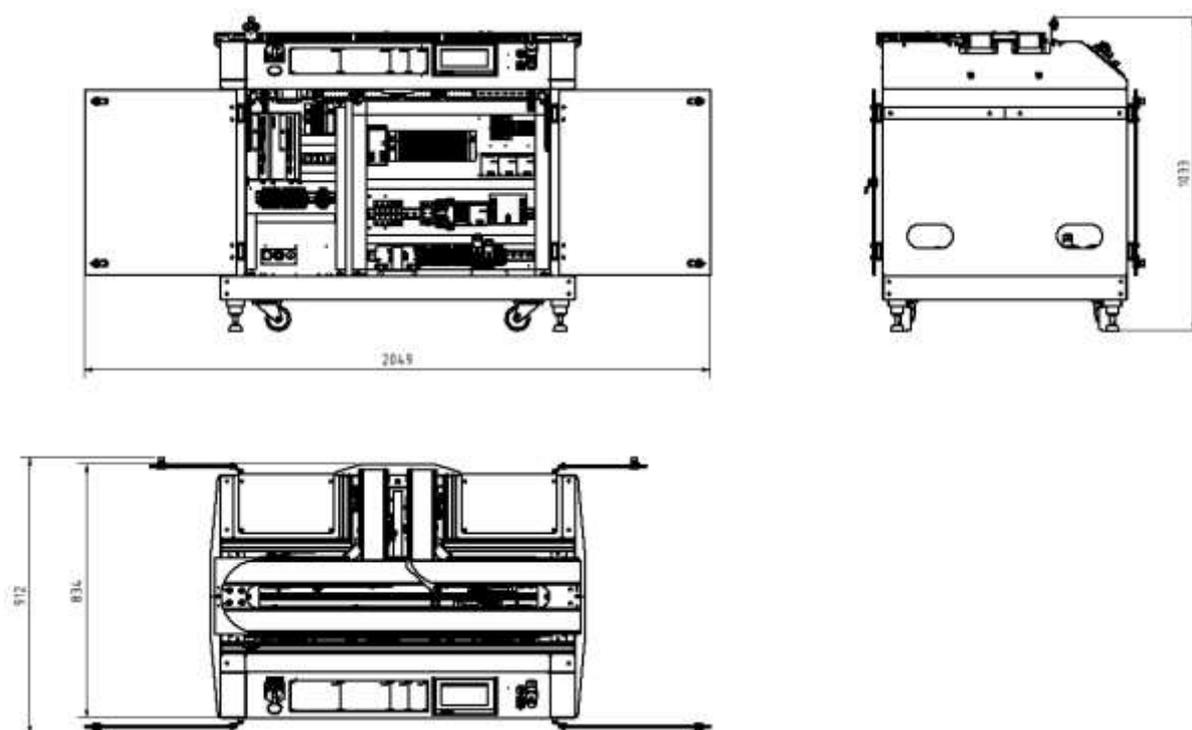

Drawing with open doors 180° / illustration similar

Recommended minimum distance from the spatial boundary is 1.2 m

## 6 Introduction

### 6.1 General information about CP Factory

The CP Factory has been developed in close co-operation with teachers and instructors. The result is a training system meeting all demands on modularity, mobility, flexibility and openness due to its completely new characteristics.

The station provides an appropriate system for practice-orientated tuition of the following key qualifications

- Social competence,
- Professional competence and
- Methodological competence,

Which are required in today's complex world of employment. This is much easier now with use of the CP Factory.

The two-sided symmetrical basic modules with accompanying control board and control unit are identical. With their technical system „transfer line with drive unit and stopper unit“, they are ideal for the training in SPS programming and drive technology from basics to medium level.

Due to the patented passive pallet return systems, the continuous working process „pallet circulation“ is already possible when using one single basic module.

The industrial-relevant basic process „pallet circulation“ already contains a large number of important course contents such as:

- drive technology with DC geared motor
- drive technology with asynchronous motor and converter (optional)
- drive technology with servo motor and servo converter (optional)
- pallet-stop setting
- pallet-stroke setting and pallet-indexing (optional)
- pallet identification by binary coding
- pallet identification by RFID
- speed and position recording by pulse generating disc (optional)
- basics on electro pneumatics (stop-cylinder model)
- basics on SPS programming
- SPS programming in steps
- SPS programming operating modes
- SPS programming binary coding
- SPS programming communication by frequency converter (optional)
- SPS programming communication by RFID (optional)
- SPS programming/visualization by touch panel (optional)

The basic module becomes a station by adding technology-specific application modules like magazines, handling or machining units. The standardized mechanical and electrical interface of application and basic module allows an unproblematic starting-up.

The CP Factory is a perfect platform for nearly all course contents. It helps to improve the co-operation of different teams and to extend the ability of understanding processes.

On this system, especially the topics about networking, communication and data acquisition can be shown in an easily comprehensible way and can be further trained.

## 6.2 Resources

The training equipment of the system consists of several resources. They are used depending on the process selection.

The following resources are available:



Pallet carrier / illustration similar

These pallet carriers are available for transporting the pallets.

Partnumber in MES - 31



Pallet / illustration similar

These pallets are available for receiving always one workpiece.

Partnumber in MES - 25

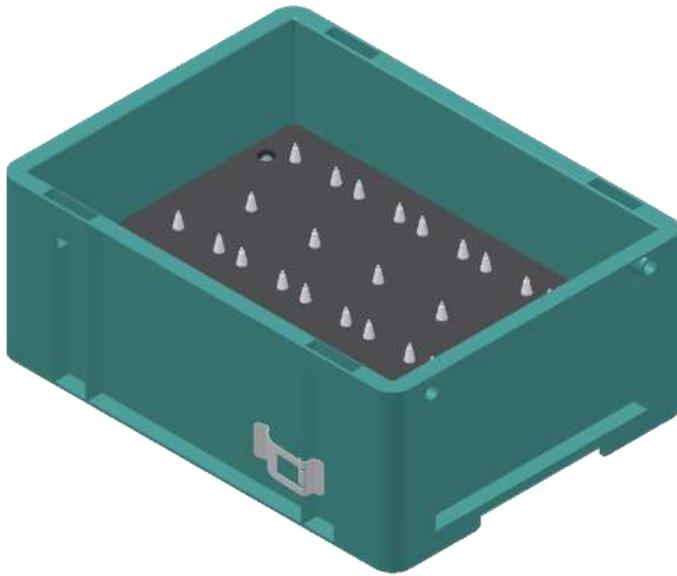


Illustration similar

Box with retainer for 10 PCB's  
Partnumber in MES – 27

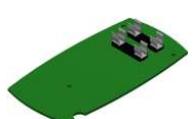
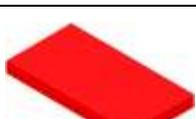
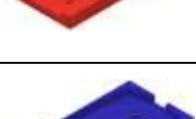





Illustration similar

Box with retainer for 8 front/backcovers or assembled workpieces  
Partnumber in MES – 28

## Workpieces

The workpieces are differentiated according to the project into production parts and external production parts.

Workpieces	Description	Workpieces	Description
	CP raw material black No. 101		CP back cover blue No. 113
	CP raw material grey No. 102		CP back cover red No. 114
	CP raw material blue No. 103		CP – board No. 120
	CP raw material red No. 103		CP fuse No. 130
	CP front cover red No. 107		CP front cover black No. 210 – if there is a CNC milling machine integrated in the system, the front cover can also be produced there, thus becoming a production part.
	CP front cover blue No. 108		CP front cover black without fuses No. 211
	CP front cover grey No. 109		CP front cover black with fuse left No. 212
	CP front cover black No. 110		CP front cover black with fuse right No. 213
	CP back cover black No. 111		CP front cover black with both fuses No. 214
	CP back cover grey No. 112		

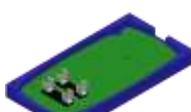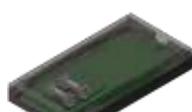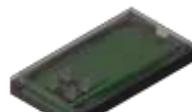Workpieces	Description	Workpieces	Description
	CP front cover grey No. 310 – if there is a CNC milling machine integrated in the system, the front cover can also be produced there , thus becoming a production part.		CP front cover red No. 510 – if there is a CNC milling machine integrated in the system, the front cover can also be produced there , thus becoming a production part.
	CP front cover grey without fuses No. 311		CP front cover red without fuses No. 511
	CP front cover grey with fuse left No. 312		CP front cover red with fuse left No. 512
	CP front cover grey with fuse right No. 313		CP front cover red with fuse right No. 513
	CP front cover grey with both fuses No. 314		CP front cover red with both fuses No. 514
	CP front cover blue No. 410 – if there is a CNC milling machine integrated in the system, the front cover can also be produced there , thus becoming a production part.		CP black complete without board No. 1200
	CP front cover blue without fuses No. 411		CP part customer No. 1210 freely selectable
	CP front cover blue with fuse left No. 412		CP part black with no fuse No. 1211
	CP front cover blue with fuse right No. 413		CP part black with fuse on the left No. 1212
	CP front cover blue with both fuses No. 414		CP part black with fuse on the right No. 1213
			CP part black with both fuses No. 1214

## 7 Design and Function

### 7.1 Transport

	 <b>WARNING</b>
	<ul style="list-style-type: none"> <li>• <b>Damage to transport equipment when moving heavy machines/machine sections</b> <ul style="list-style-type: none"> <li>– When the stations are shipped out, extra care must be taken to ensure that heavy machines/machine sections are always transported using a suitable forklift truck. A single station can weigh up to 500 kg.</li> <li>– Always use suitable transport equipment.</li> <li>– Always use the lifting points provided to move the machine/machine sections.</li> <li>– Always use the designated load take-up point.</li> </ul> </li> </ul>

	 <b>WARNING</b>
	<ul style="list-style-type: none"> <li>• <b>Securing transit routes</b> <ul style="list-style-type: none"> <li>– The supply routes must be cleared prior to transport, and must be suitable for the forklift truck to pass through. If necessary, warning signs or barrier tape must be set up to keep the routes clear.</li> </ul> </li> <li>• <b>Caution</b> <ul style="list-style-type: none"> <li>– When opening transport boxes, care must be taken to ensure that any additional components delivered in the same box, such as computers, do not fall out.</li> </ul> </li> </ul>


	 <b>WARNING</b>
	<ul style="list-style-type: none"> <li>• <b>Danger of crushing for hands/feet</b> <ul style="list-style-type: none"> <li>– It is not permitted to grip onto or under the feet when handling the machine, as there is an increased risk of hands or feet getting crushed or trapped in these areas.</li> <li>– When setting down the station, make sure no persons have their feet under the machine's feet.</li> </ul> </li> </ul>

	<b><i>NOTE</i></b>
	<ul style="list-style-type: none"><li>– When opening the transport box, any additional components must be secured to prevent them from falling out, and removed first.</li><li>– Once this is done, the transport box can be removed/opened up fully, and the station can be taken out and moved to its intended location.</li><li>– Care must be taken with all components projecting from the machine, as sensors and similar small parts can easily be damaged if the machine is not transported correctly.</li><li>– Check that all the profile connectors are seated correctly using a size 4 – 6 Allen key. Unavoidable vibrations can loosen the connectors during transport.</li></ul>

## 7.2 Overview of the System

CP Lab Conveyor, CP Factory Linear, CP Factory Shunt and CP Factory Bypass are called basic modules. If an application module, e.g. the CP Application Module muscle press is attached to a basic module, it becomes a station.

### Example

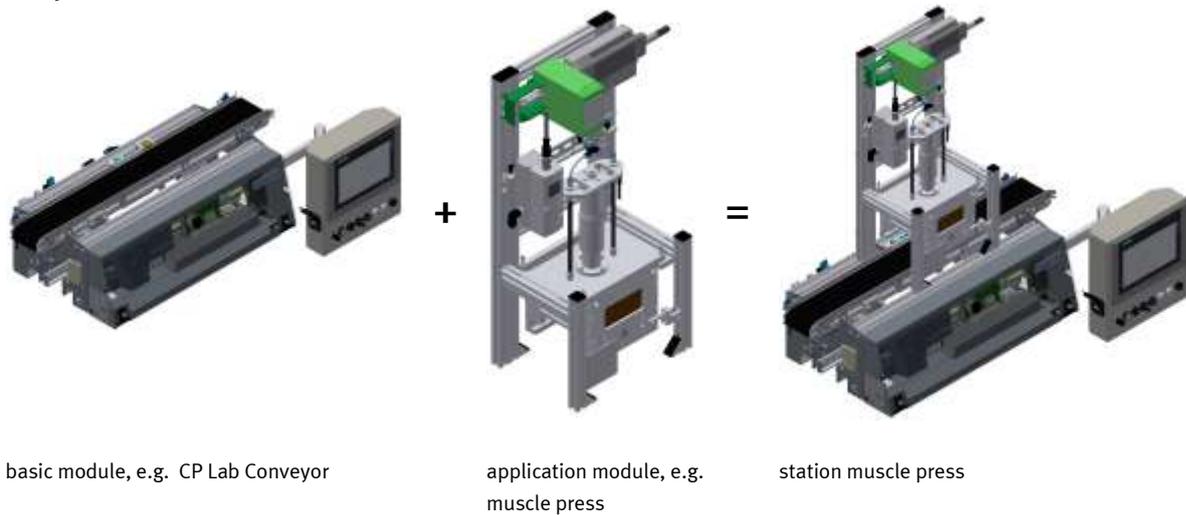


If several stations are put in a row one behind the other, this will form a production line.



Carriers are transported on the conveyors of the basic modules. And on the carriers, there are pallets with a fixed workpiece reception placed. The workpieces are placed on the workpiece reception or taken from it. Pallets can also be placed on a carrier in some stations or gripped from there.

The typical workpiece of a CP Factory/Lab System is the roughly simplified version of a mobile phone. The workpiece consists of a front cover, of a back cover, of a board and of a maximum of two fuses.

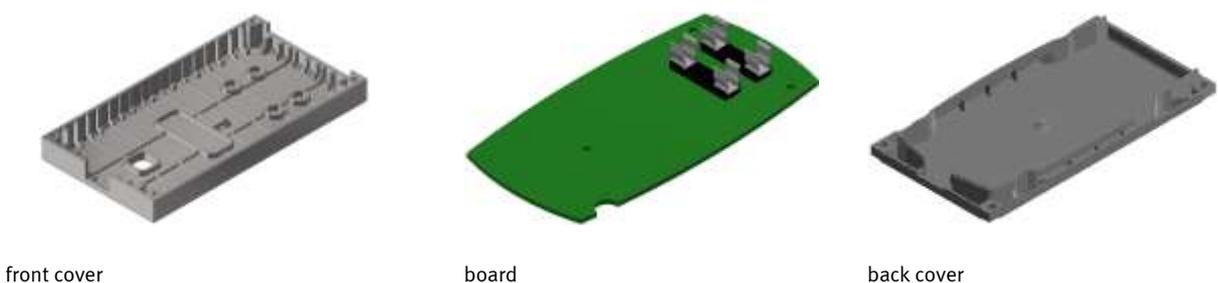


### 7.3 The basic module branch

The basic module branch consists of a 1200 mm long two-track conveyor line. The conveyors are 80 mm wide. On the rear side of the module, there is a two-track branch where carriers can be transferred outward and inward in a loop. On the conveyors boards are transported on carriers.

The carriers are equipped with a read/write ID system. This ID system represents a very important part of the CP Factory System. The carriers are written with the current data of the workpiece to be transported. Thus all information required for the process is carried together with the workpiece/ carrier and is available at every operating position.

It is possible to split the branch module into two parts, the back conveyor line with branch and the front conveyor line. At the front conveyor line it is possible to mount an application; at the back conveyor line this is not possible. Therefore the front conveyor line reacts like a basic module and is not explained in detail. All processes in this manual are for the back conveyor line – also for the branch module.

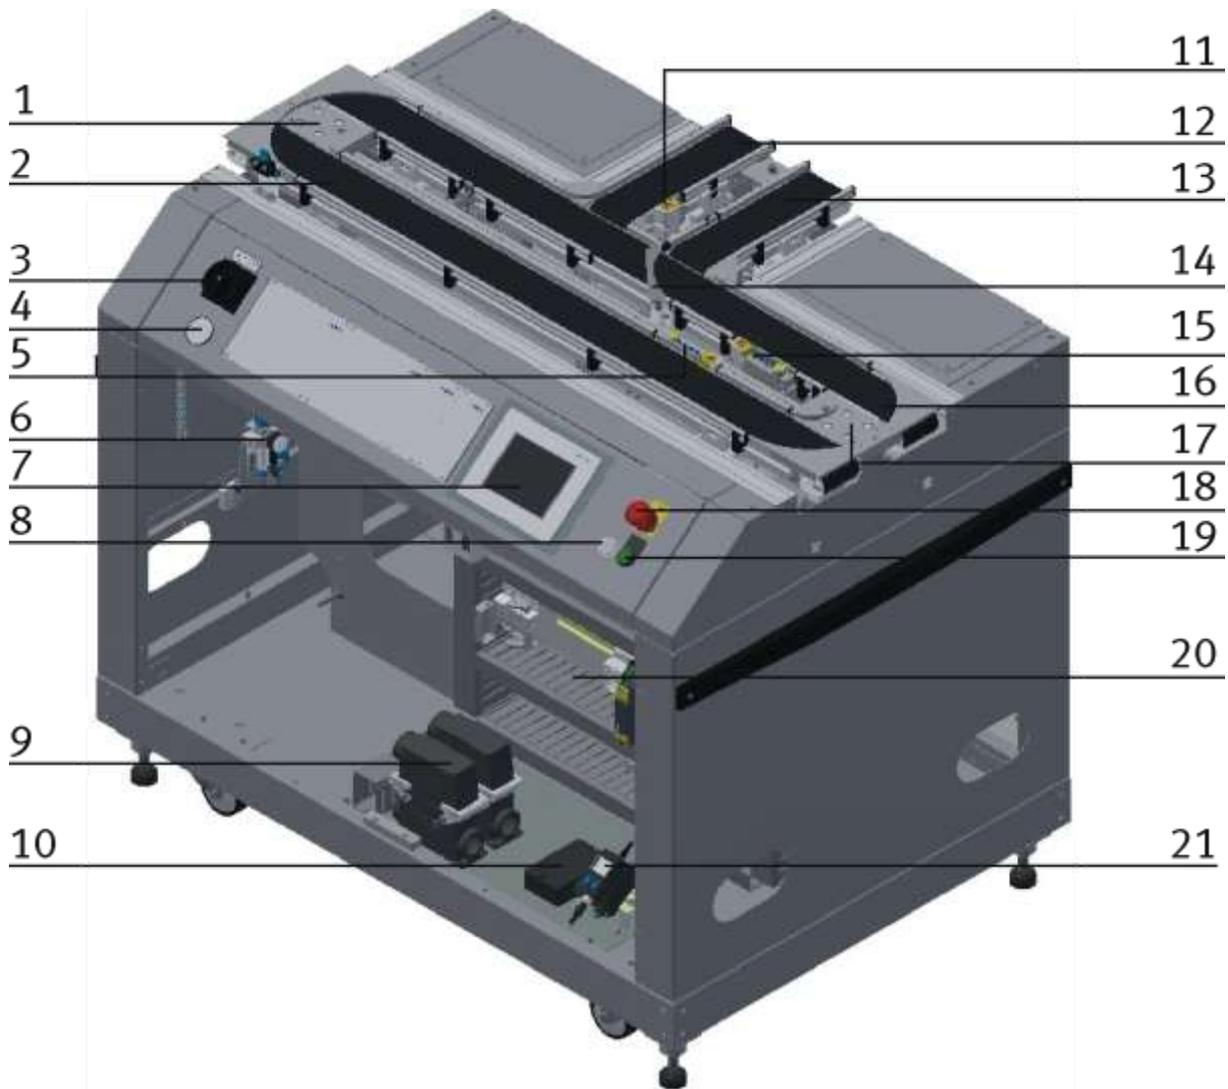


CP Factory Basic module branch / illustration similar

Position	Description
1	Corner pulley/no other module attached
2	Conveyor front side
3	Main switch
4	Manometer
5	Stopper unit front side
6	Maintenance unit
7	Touch panel Variant 1 / Festo panel Variant 2 / Siemens panel
8	Ethernet interface
9	Supply lines
10	Turck I/O module with RFID interface for attachment of 2 read/write heads
11	Stopper inward transfer
12	Conveyor inward transfer
13	Conveyor outward transfer
14	Branch outward transfer
15	Stopper unit back side
16	Conveyor rear side
17	Corner pulley/no other module attached
18	Emergency stop button
19	Controller on pushbutton
20	E-Board
21	Pressure switches (option for energy monitoring)

### 7.4 Mechanical construction


In contrast to the two-sided basic module, the branch module has been constructed for the operation from one side only. The rear side of the branch module has got two short conveyors for the inward and outward transfer of workpiece carriers. With the help of branches the workpiece carriers are transferred outward in a loop or transferred inward from a loop. The basic module has been equipped with mechanically adjustable feet. If the moving of the basic module is required, you can lower the basic module onto its rollers and transport it easily.

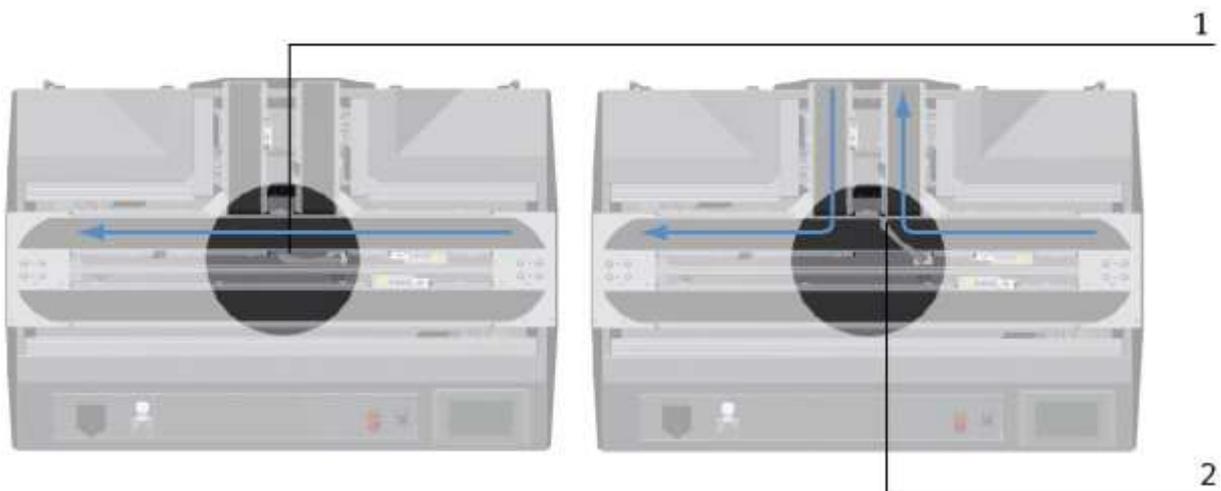

Construction of the branch module – example / illustration similar

Position	Designation
1	Branches are in the position “do not transfer workpiece carriers outward”
2	Branches are in the position „transfer workpiece carriers outward/inward“ (branch is optional)


The modules can be operated in two ways - as a single station or in combination with other modules. When combined with another module, it is necessary to replace the deflection at the end of the conveyor by a support plate. The branch is an exception, if this is operated as a single station, it is not possible to discharge or to infiltrate carriers.

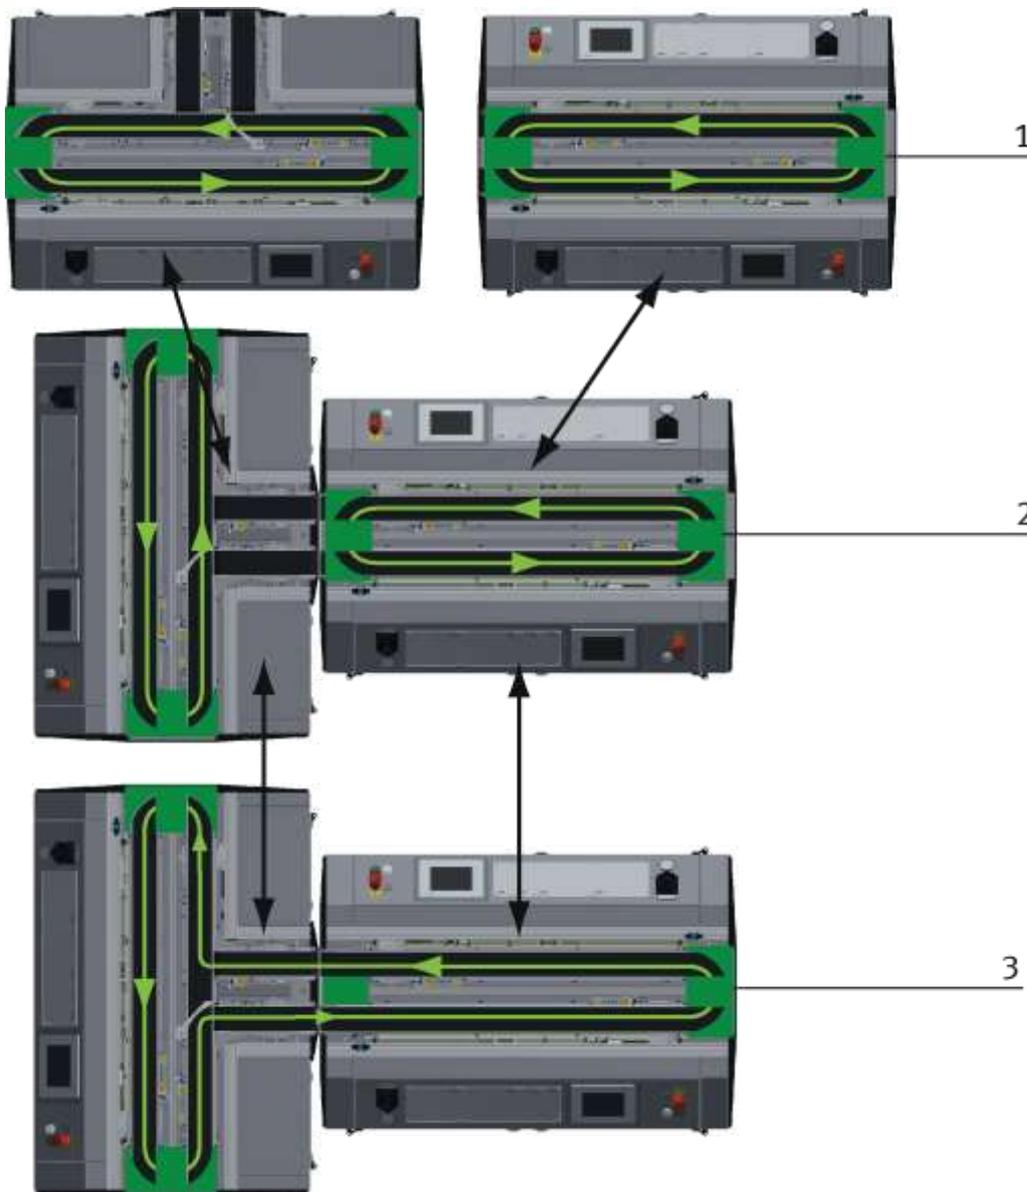

Options for assembly example / illustration similar


With the pluggable deflections there are different possibilities to control the transport flow. Depending on this, different modules can be operated individually or in combination.

Position	Designation
1	Operation as single station / not put together
2	Operation as single station / stations are put together
3	Operation in combination with an additional station

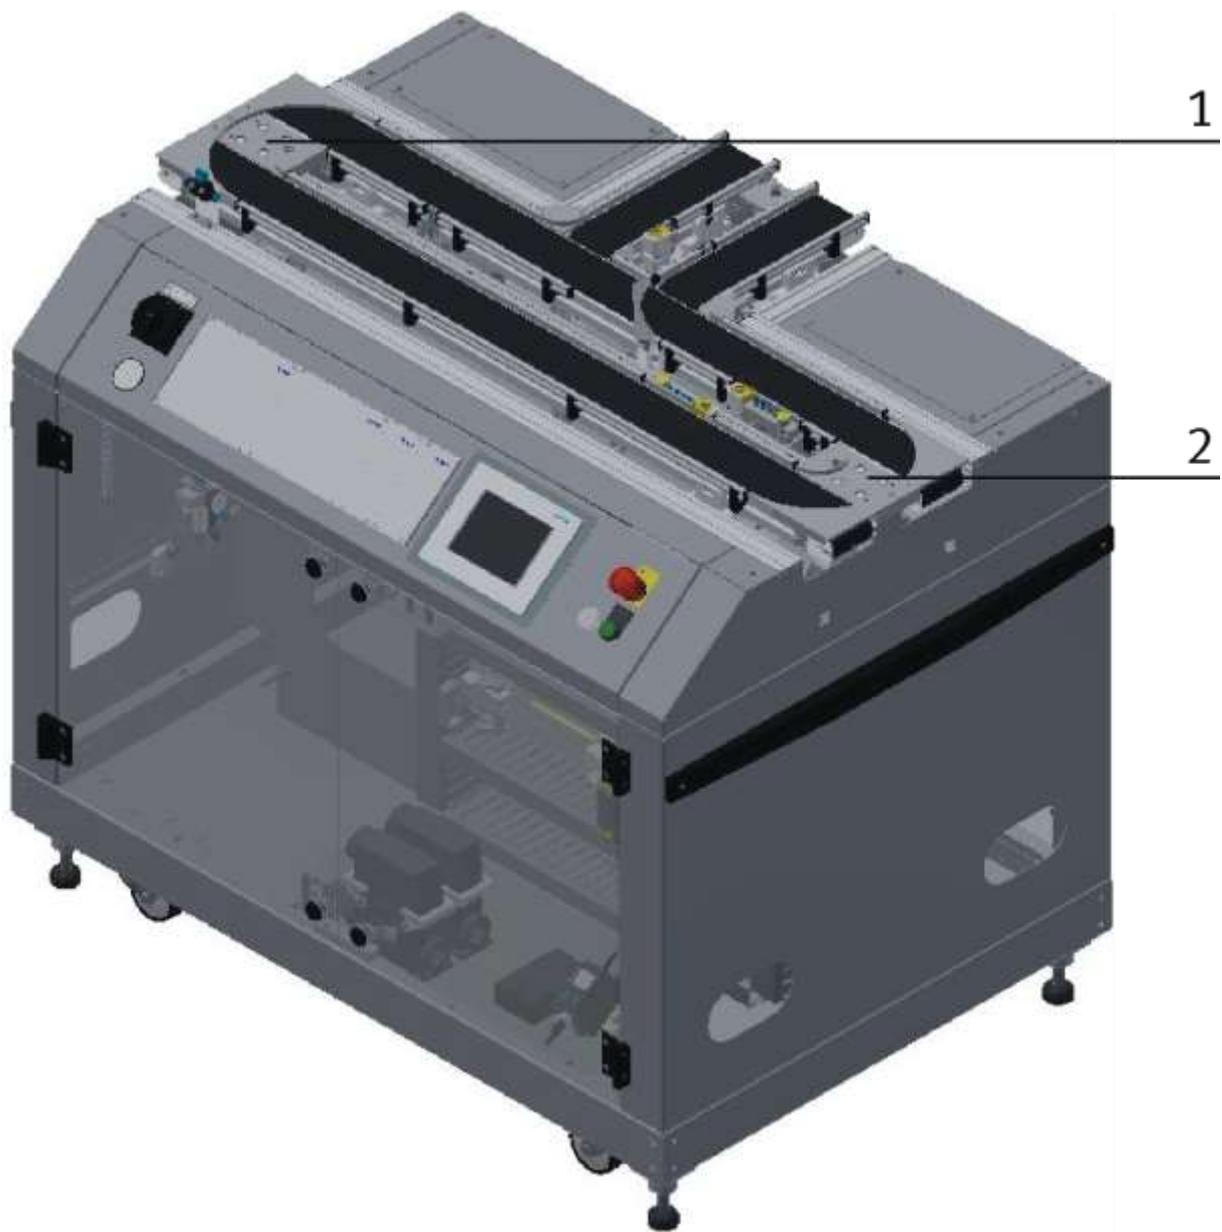

Mounting as a single station – example / illustration similar

Position	Designation
1+2	Corner pulley – the pallet carrier is reversed from one conveyor to the other conveyor on the branch module

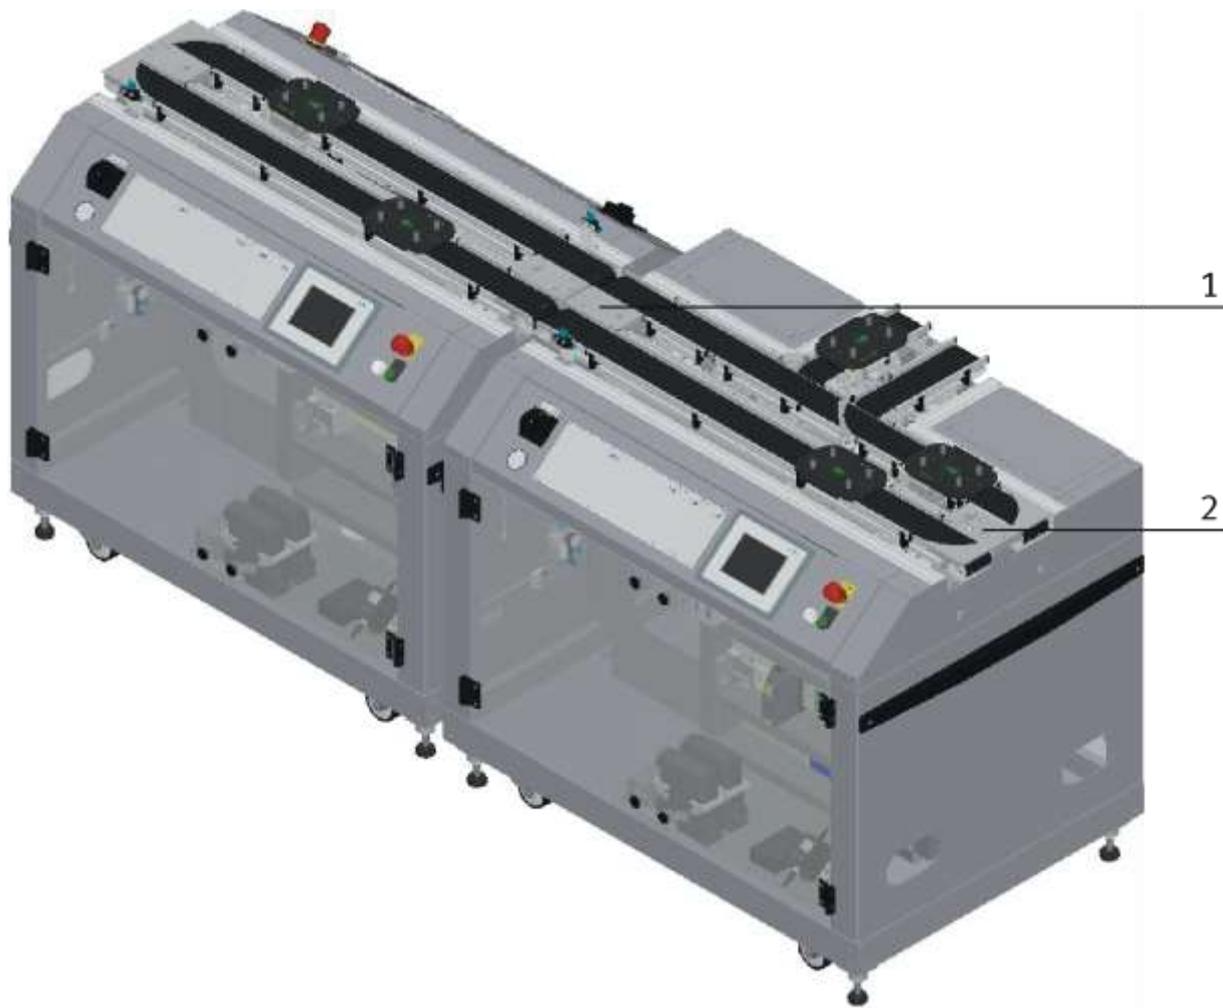


Example for mounting in combination with an additional module / illustration similar

Position	Designation
1	Replacement guide board (support plate) in combination with an additional module – here the workpiece carrier is not reversed but transferred to the following module
2	Corner pulley – the workpiece carrier is reversed from one conveyor to the other conveyor on the module.

The corner pulley and the support plate have only been put together and can easily be exchanged without tools.

### 7.4.1 Supply of the branch module

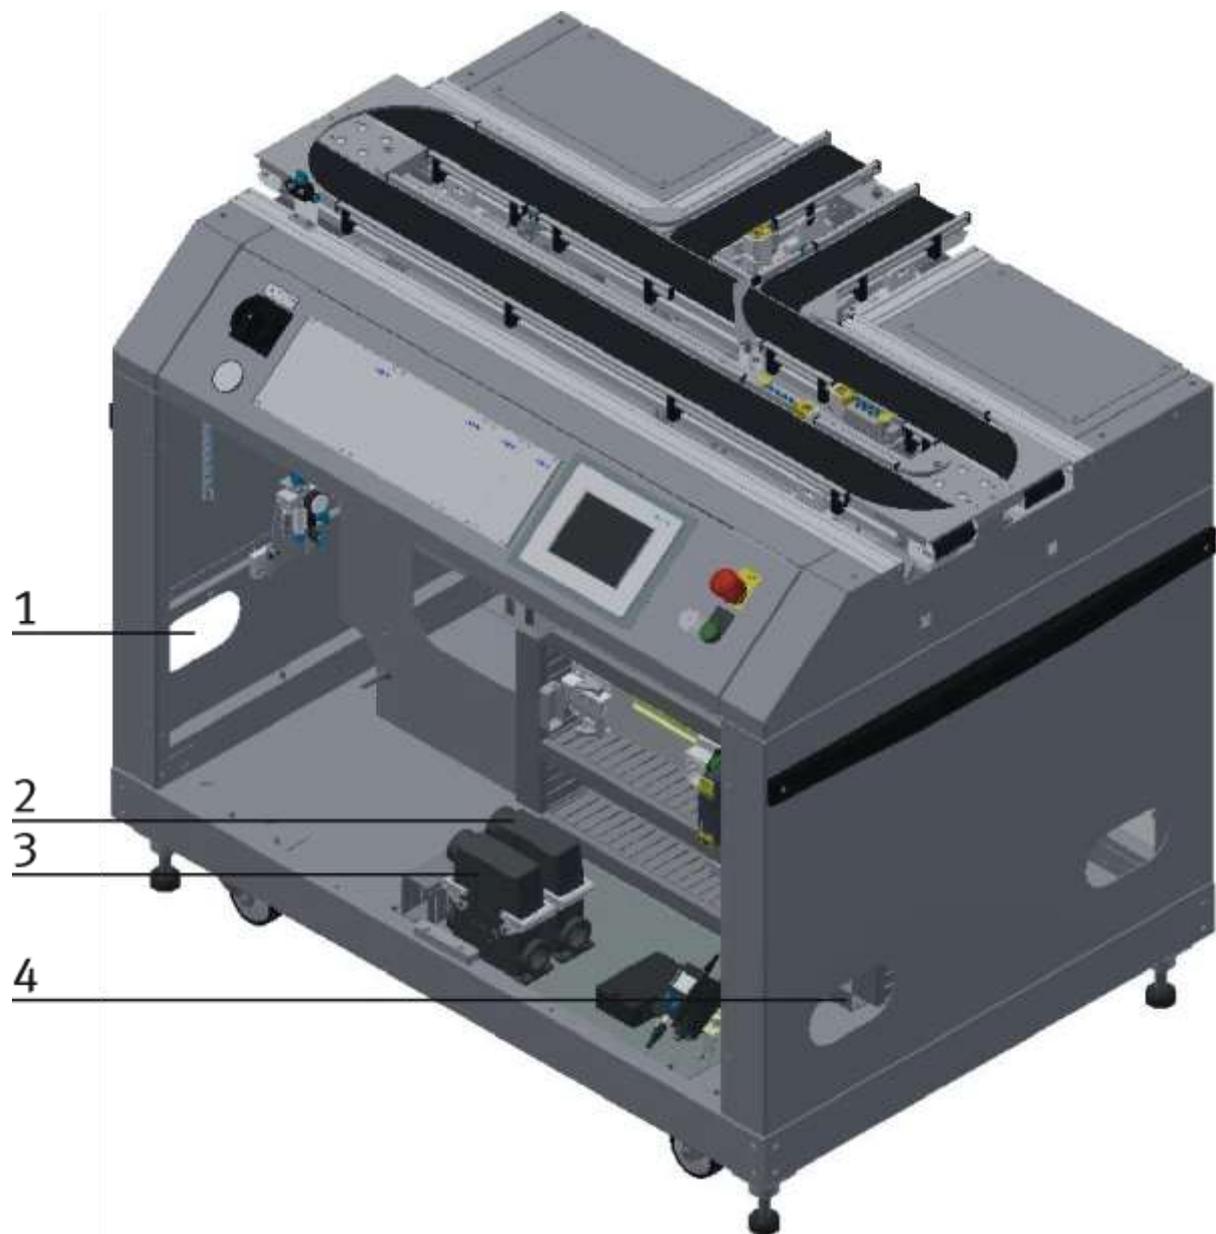

CP Factory supply / illustration similar

Position	Description
1	Inlet port for connection tube with voltage, communication and pneumatics
2	Connection plug K2-XZ1
3	Connection plug K2-XZ2
4	Outlet port for the connection tube of a further module

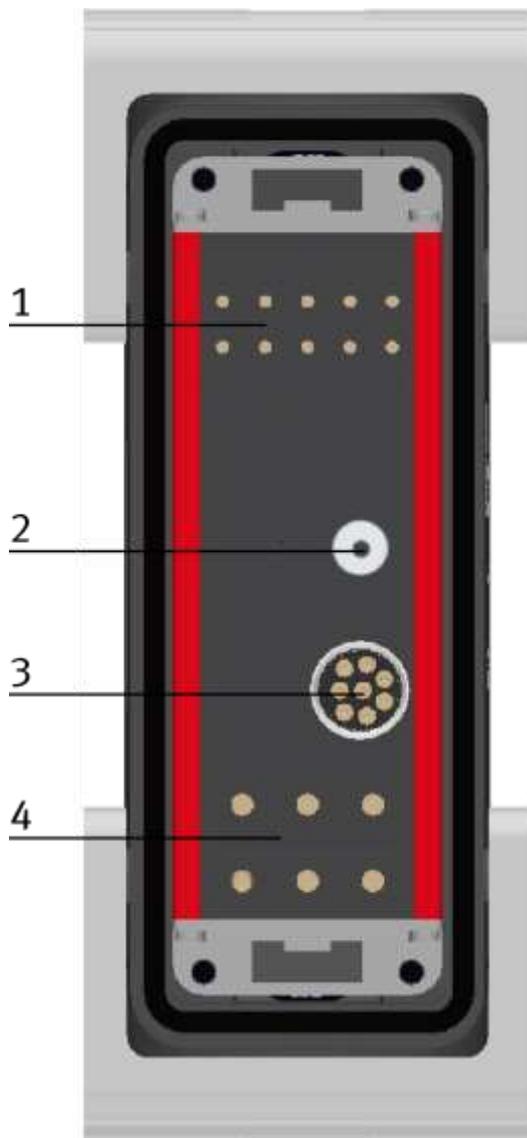


illustration similar


Position	Description
1	Emergency chain linking
2	Pressure
3	Network
4	400 V

### 7.5 Electrical assembly

The branch module has got an electric board on the front side for the electrical components of the module. This electric board has been mounted in the right part of the housing.




Electric board front side / illustration similar

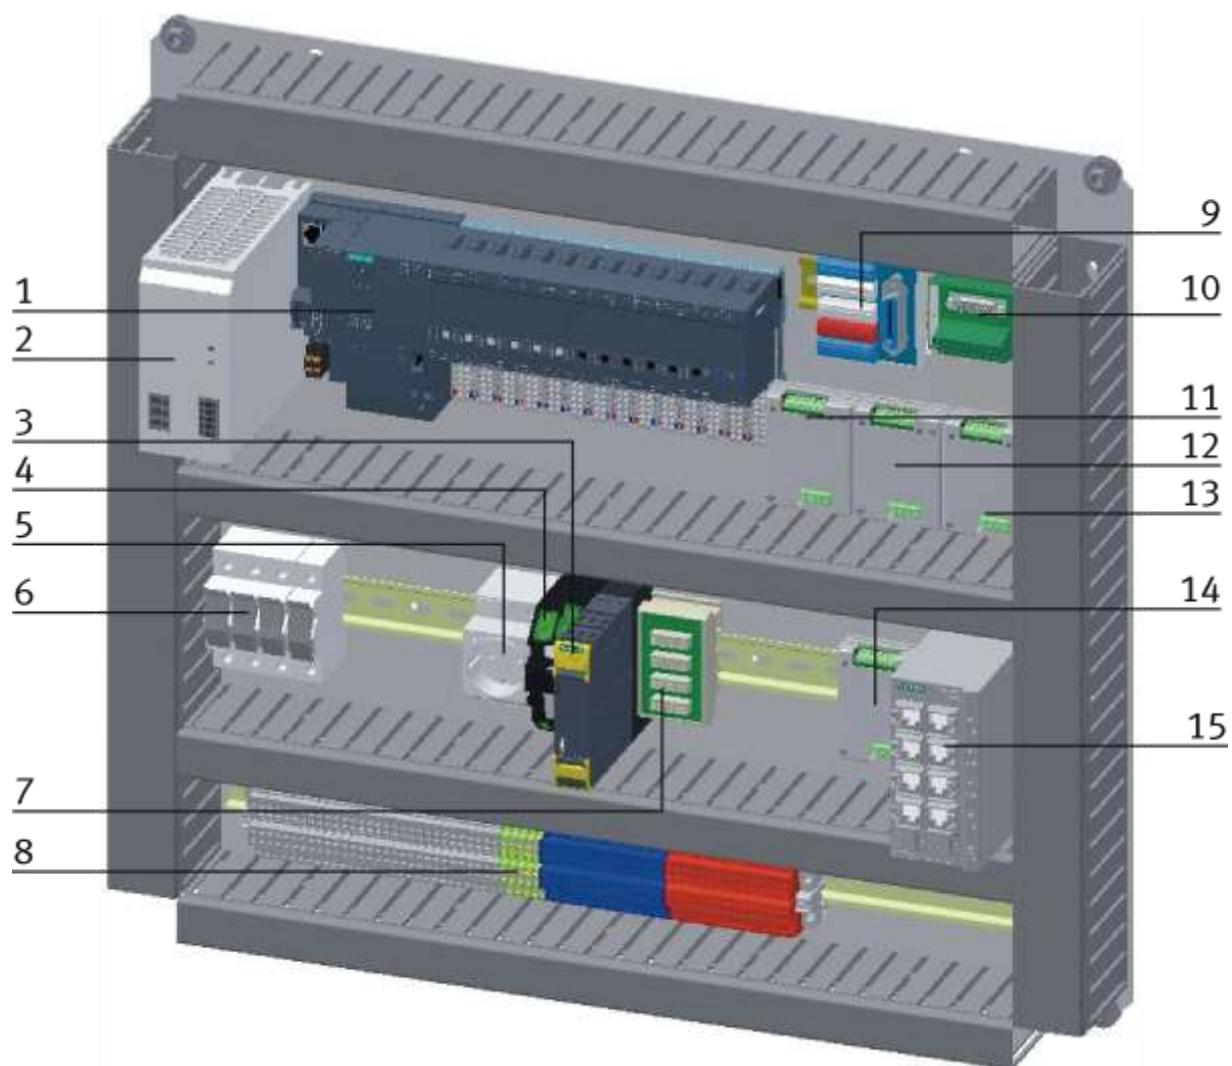


Electric board front side with Siemens controller / illustration similar

Position	Designation	BMK	Description / Ordernumber
1	Power supply unit 24 V	TB1	Festo CACN-3A-1-10 / 2247682
2	CPU	K1-K5-	Siemens ET200 SP CPU 1512SP F-1 P
3	Emergency stop Unit	K1-F2-KF1	Siemens / 3SK1111-2AB30
4	ELEC AUX CIRCUIT	K1-FC4	Murr Elektronik / 9000-41042-0100600
5	Receptacle	K1-XJ4	
6	Fuses	K1-FC1 + K1-FC2	
7	Emergency stop board	K1-F2-XZ2	
8	Clamps	K1 XD0-K1-XD13	
9	I/O Terminal	K1-XD15	
10	Analog Terminal	K1-XD16A	UM 45-D15SUB/B
11	Start-up current limiter	K1-QA1	Kaleja M-MZS-4-30 / 06.05.020
12	Start-up current limiter	K1-QA2	Kaleja M-MZS-4-30 / 06.05.020
13	Start-up current limiter	K1-QA3	Kaleja M-MZS-4-30 / 06.05.020
14	Start-up current limiter	K1-QA4	Kaleja M-MZS-4-30 / 06.05.020
15	Ethernet switch	K1-XF1	Siemens Scalance XB008 / 6GK5008-0BA00-1AB2

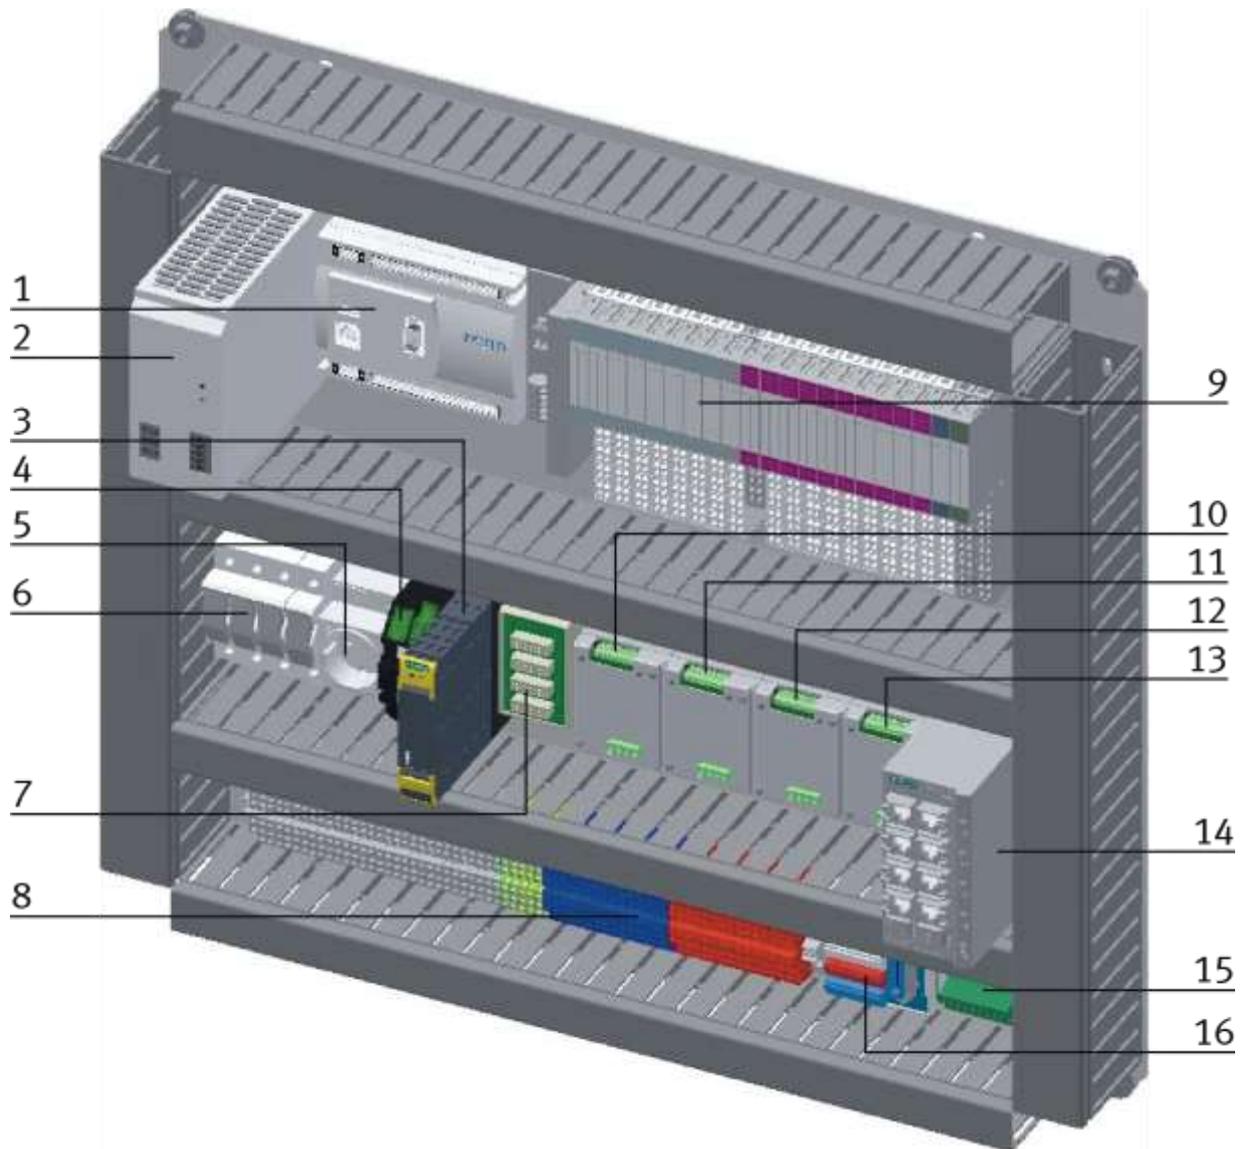


Electric board front side with Festo controller / illustration similar

Position	Designation	BMK	Description / Order number
1	CPU	K5-KF1	Festo CECC / 574418
2	Power supply unit 24 V	K1-TB1	Festo CACN-3A-1-10 / 2247682
3	Emergency stop Unit	K1-F2-KF1	Siemens / 3SK1111-2AB30
4	ELEC AUX CIRCUIT	K1-FC4	Murr Elektronik / 9000-41042-0100600
5	Receptacle	K1-XJ4	
6	Fuses	K1-FC1 + K1-FC2	
7	Emergency stop board	K1-F2-XZ2	
8	Clamps	K1 XD0-K1-XD13	
9	Turck Interface	K5-KF2 – K5-KF41	Turck BL20-GWBR-CANOPEN
10	Start-up current limiter	K1-QA1	Kaleja M-MZS-4-30 / 06.05.020
11	Start-up current limiter	K1-QA2	Kaleja M-MZS-4-30 / 06.05.020
12	Start-up current limiter	K1-QA3	Kaleja M-MZS-4-30 / 06.05.020
13	Start-up current limiter	K1-QA4	Kaleja M-MZS-4-30 / 06.05.020
14	Ethernet switch	K1-XF1	Siemens Scalance XB008 / 6GK5008-OBA00-1AB2
15	Analog Terminal	K1-XD16A	UM 45-D15SUB/B
16	I/O Terminal	K1-XD15	

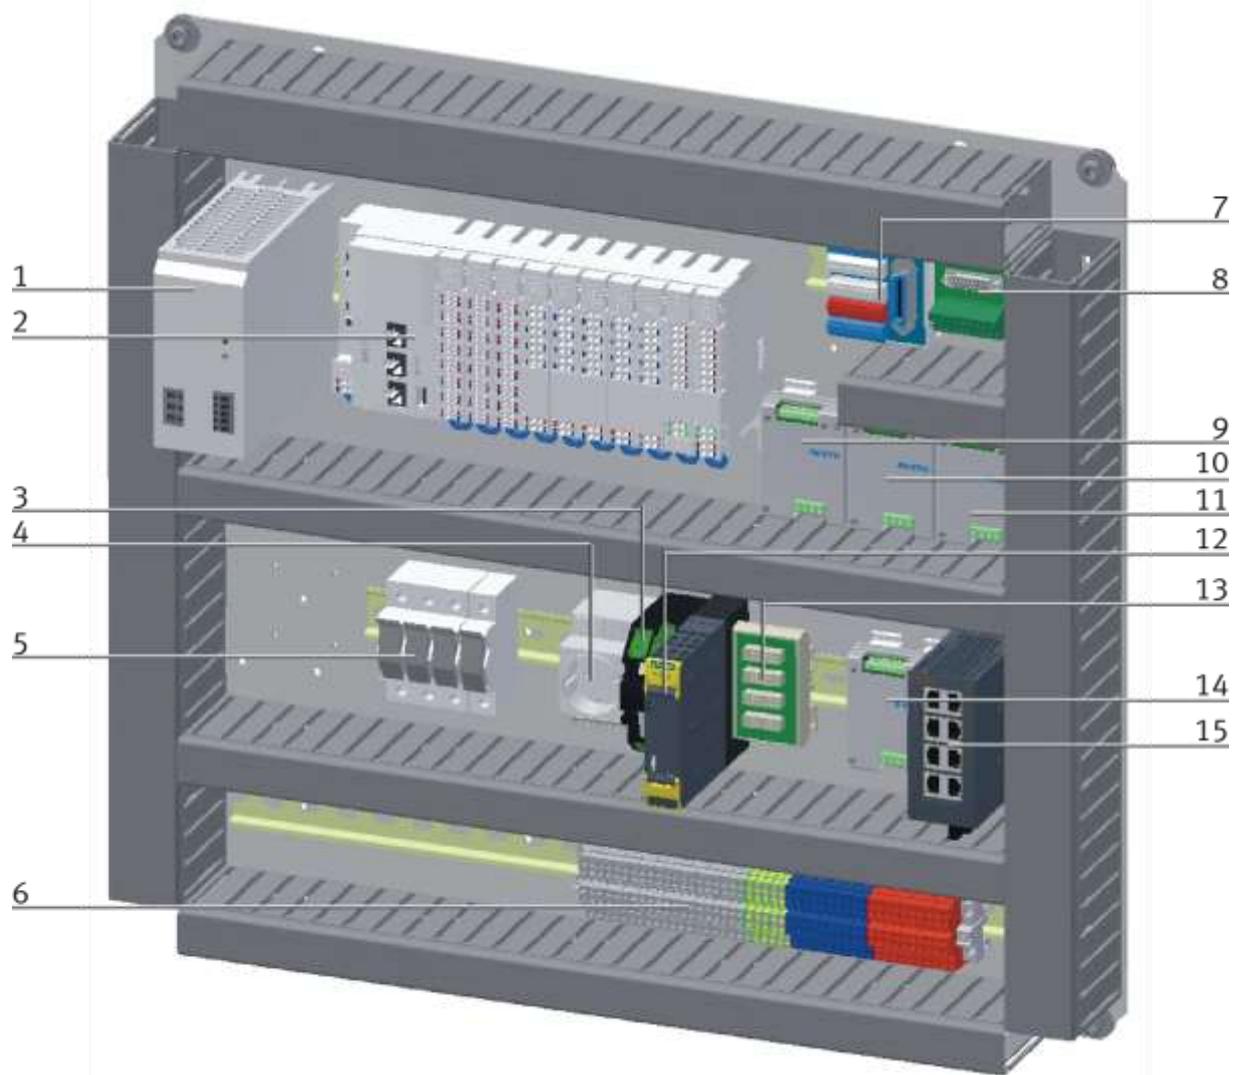

Electric board front side with Festo controller / illustration similar


Position	Designation	BMK	Description / Order number
1	Power supply unit 24 V	TB1	Festo CACN-3A-1-10 / 2247682
2	CPU Festo CPX-E	K1-K5-	CPX-E-CEC-C1-PN / 4252741
3	Emergency stop Unit	K1-F2-KF1	Siemens / 3SK1111-2AB30
4	ELEC AUX CIRCUIT	K1-FC4	Murr Elektronik / 9000-41042-0100600
5	Receptacle	K1-XJ4	
6	Fuses	K1-FC1 + K1-FC2	
7	Emergency stop board	K1-F2-XZ2	
8	Clamps	K1 XD0-K1-XD13	
9	I/O Terminal	K1-XD15	
10	Analog Terminal	K1-XD16A	UM 45-D15SUB/B
11	Start-up current limiter	K1-QA1	Kaleja M-MZS-4-30 / 06.05.020
12	Start-up current limiter	K1-QA2	Kaleja M-MZS-4-30 / 06.05.020
13	Start-up current limiter	K1-QA3	Kaleja M-MZS-4-30 / 06.05.020
14	Start-up current limiter	K1-QA4	Kaleja M-MZS-4-30 / 06.05.020
15	Ethernet switch	K1-XF1	Siemens Scalance XB008 / 6GK5008-0BA00-1AB2

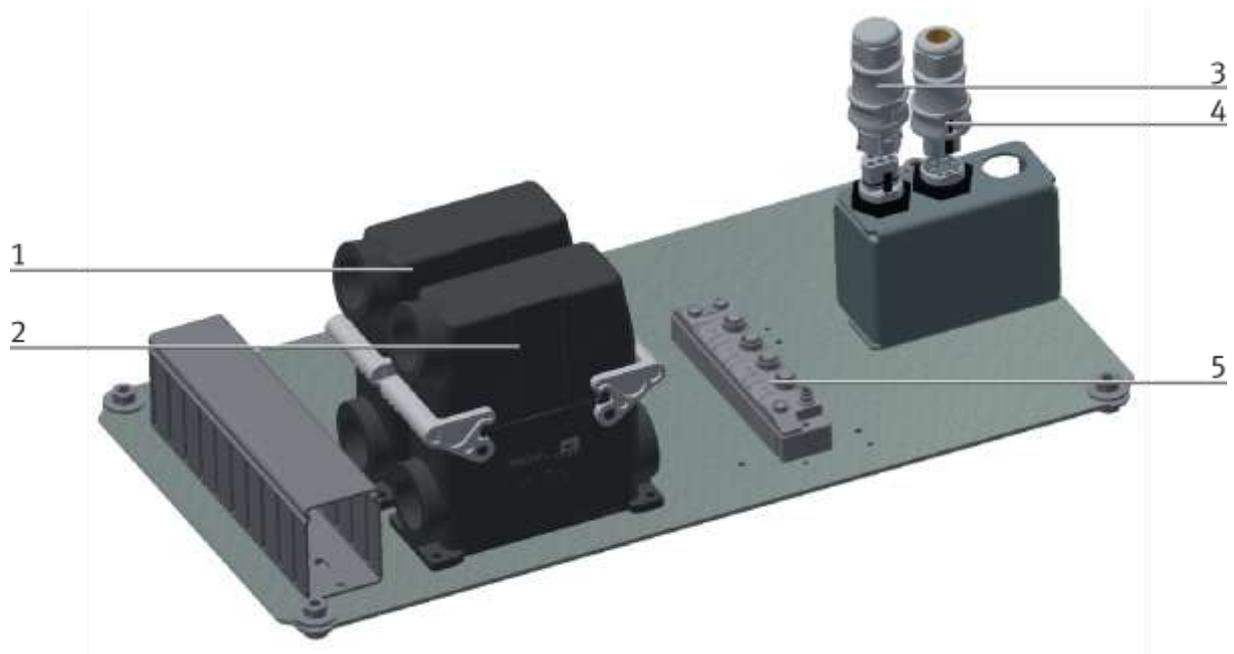


E-board front side / illustration similar

Position	Description	BMK	Description / order number
1	Supply plug	K2-XZ1	
2	Supply plug	K2-XZ2	
3	Supply plug	K2-XJ1	
4	Supply plug	K2-XJ2	
5	RFID	K2-KF80	Turck TBEN-S2-2RFID-4DXP / 6814029


### 7.5.1 Cabling chart

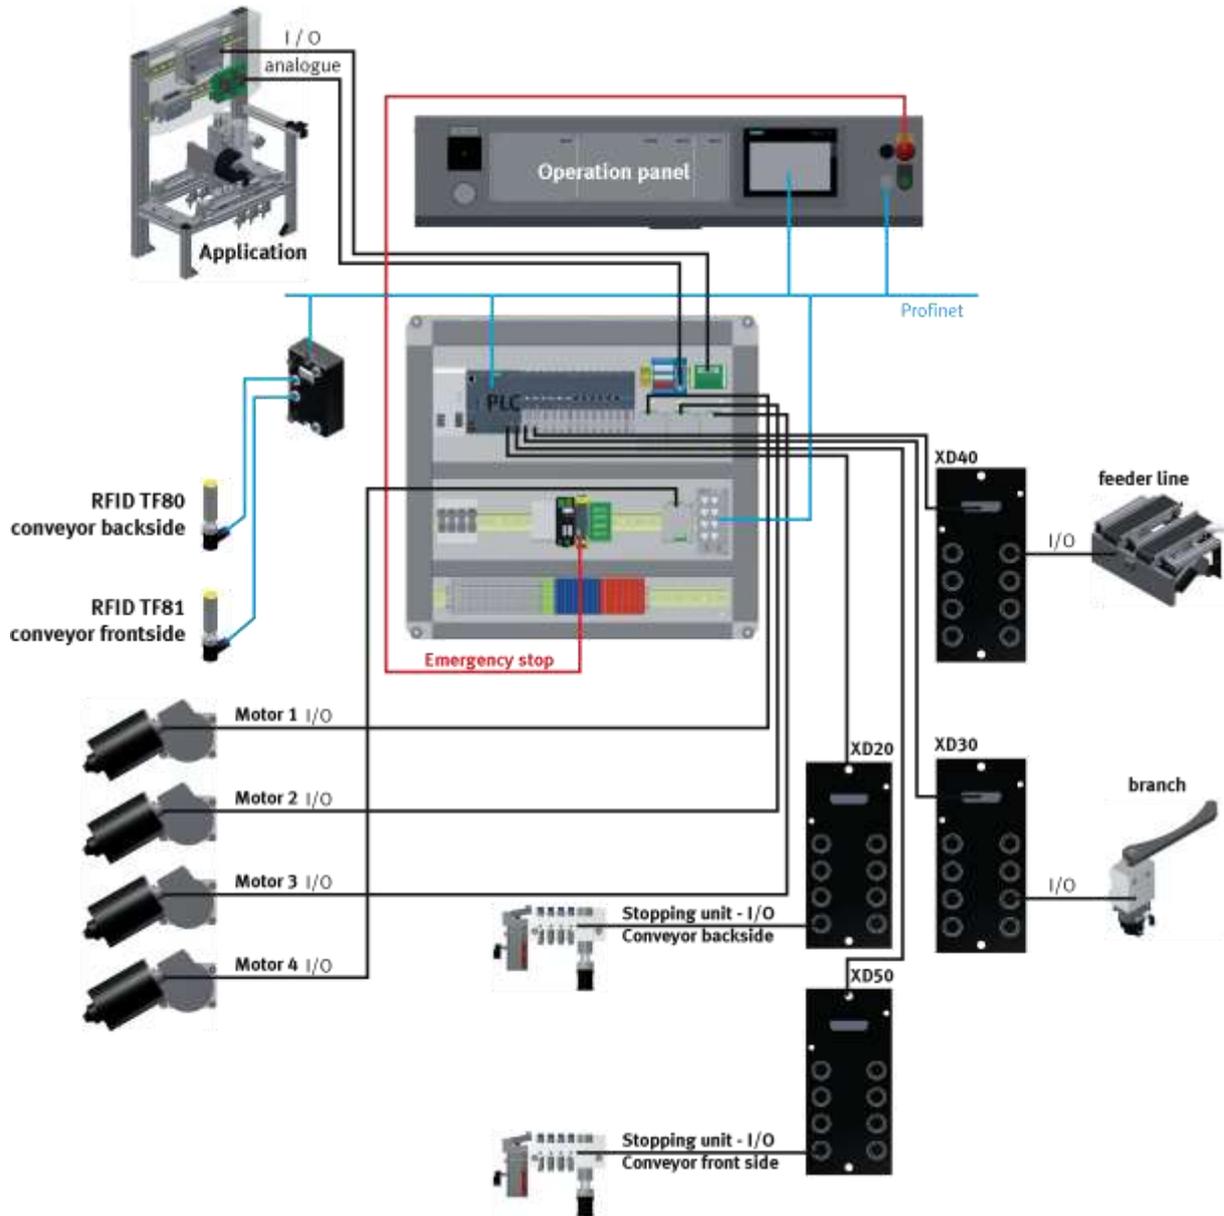

Cabling chart frontside siemens controller / illustration similar

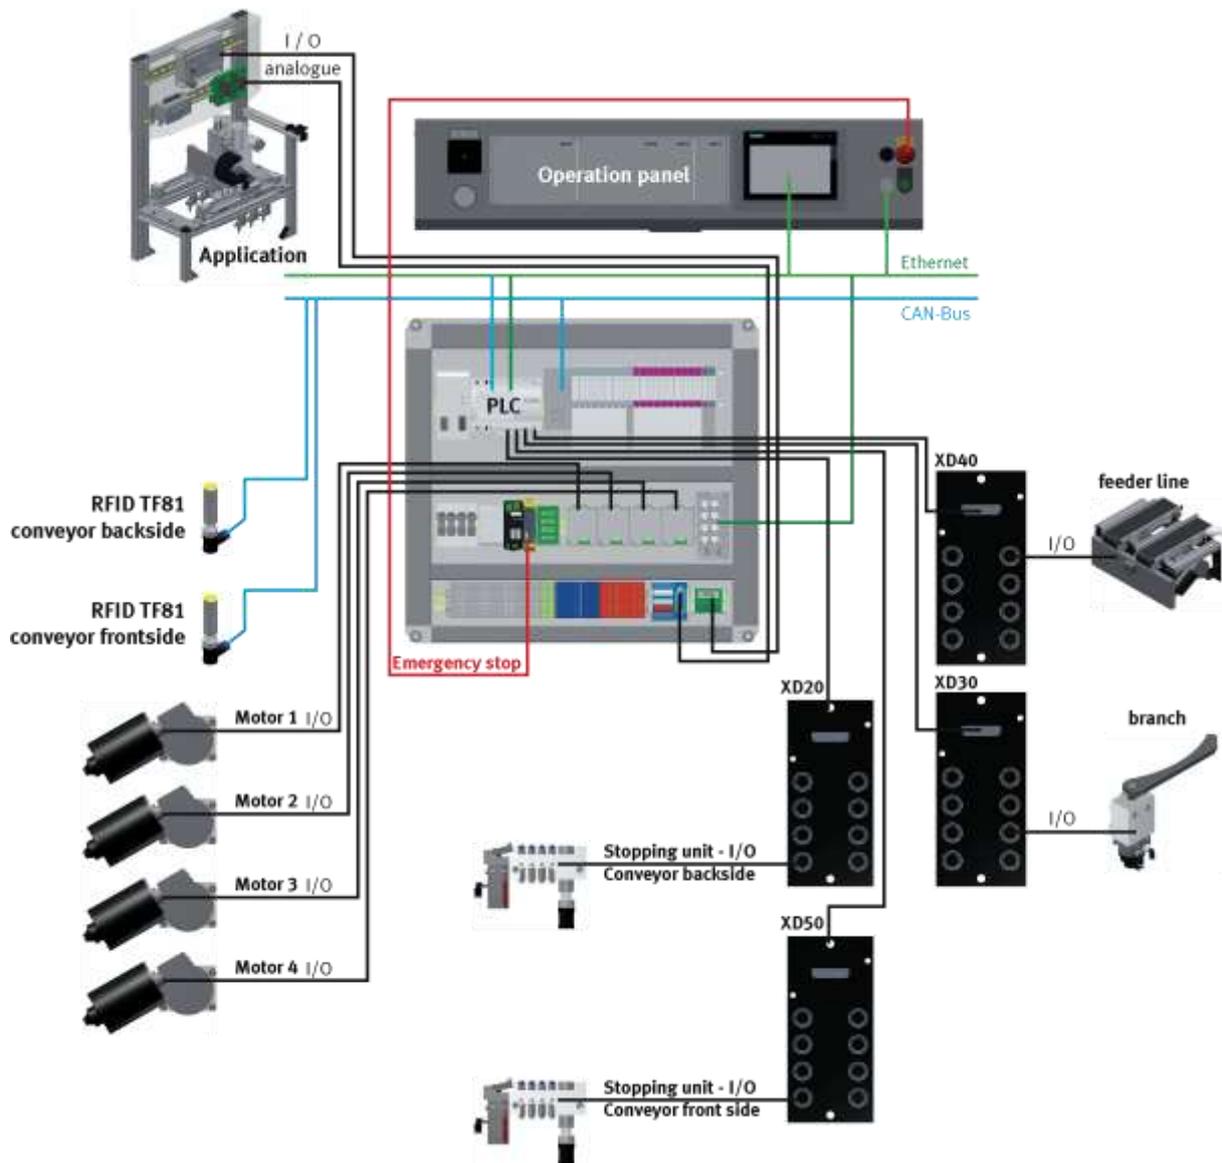


Cabling chart frontside Festo CECC controller / illustration similar

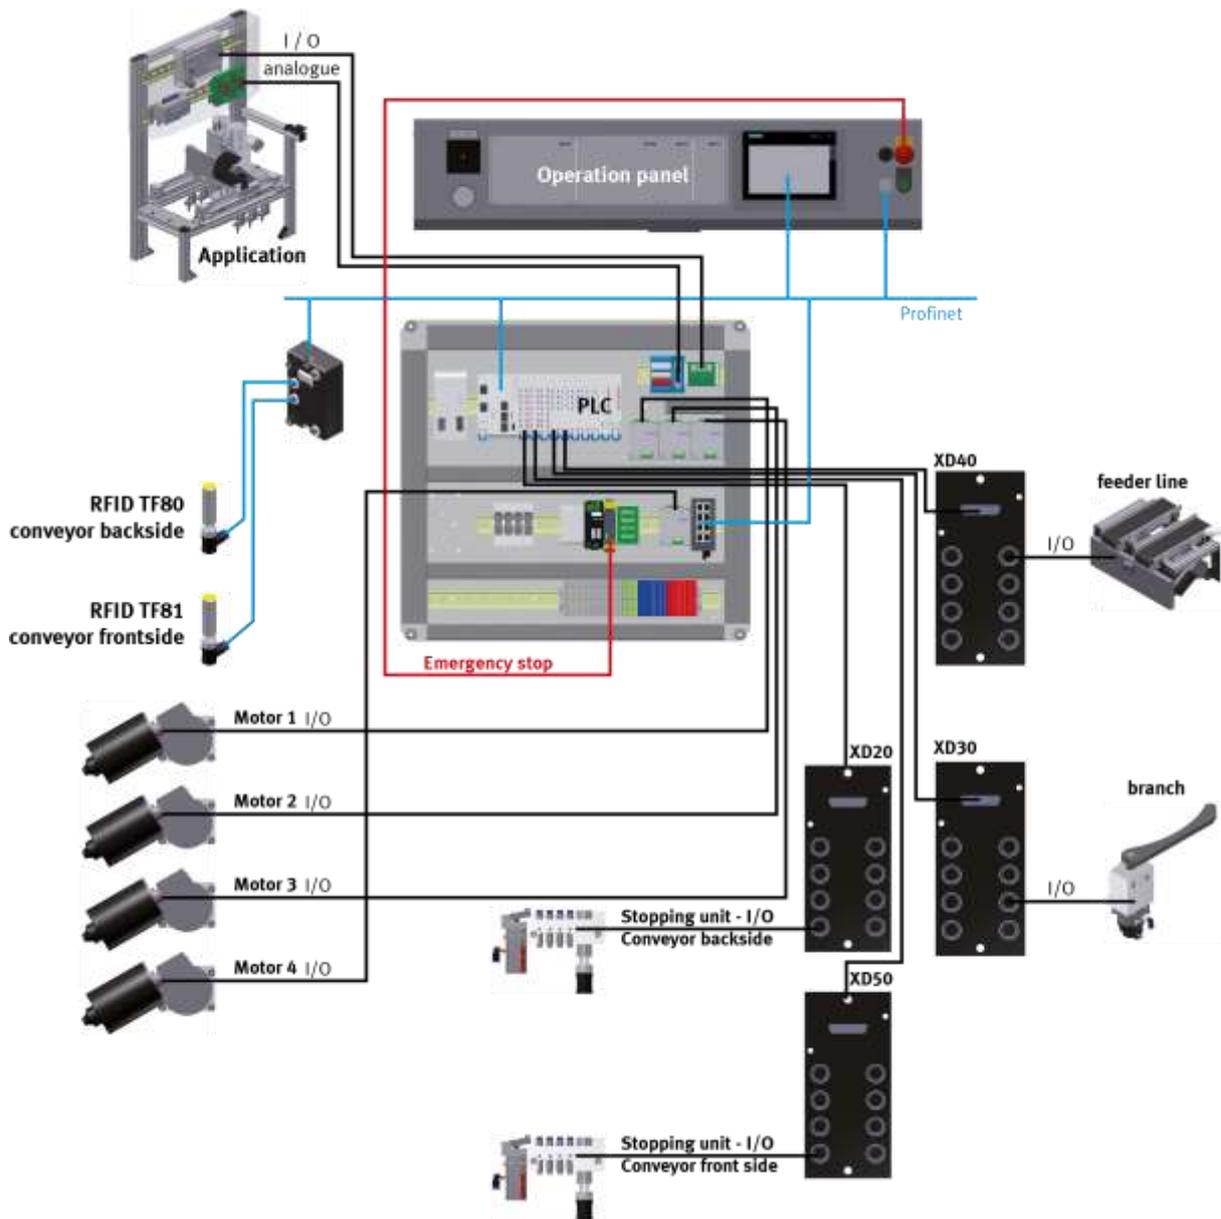


Cabling chart frontside Festo CPX-E controller

### 7.5.2 Emergency-Stop Structure

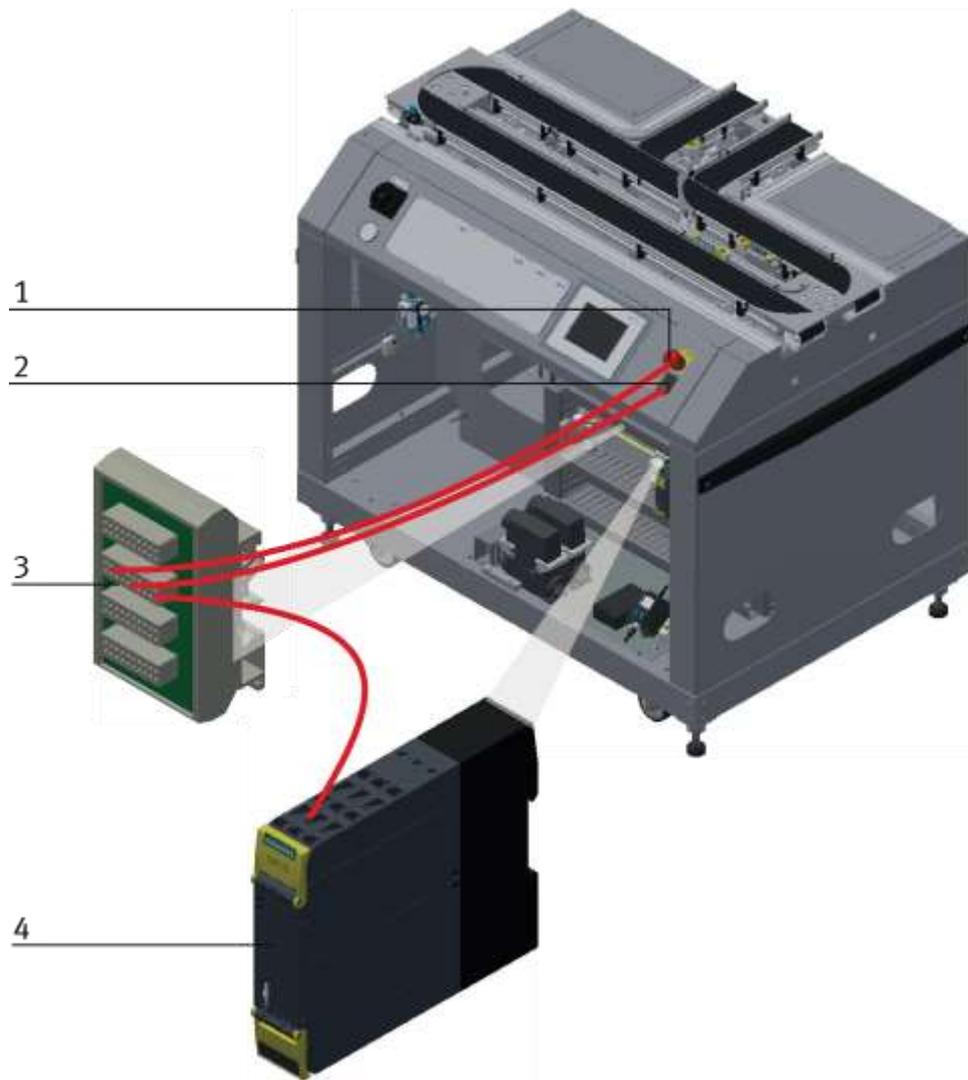

Structure of the emergency- stop system example / illustration similar

Position	Name
1	Emergency-stop pushbutton F2-FQ1 / to emergency stop board X4:1; X4:3; X4:5; X4:7
2	Reset Pushbutton 1S2 / to PNOZ S33+S34; indicator light terminal strip 24VNA/0V+
3	Emergency stop board for emergency chain linking / F2-XZ2
4	Emergency stop Unit / F2-KF1

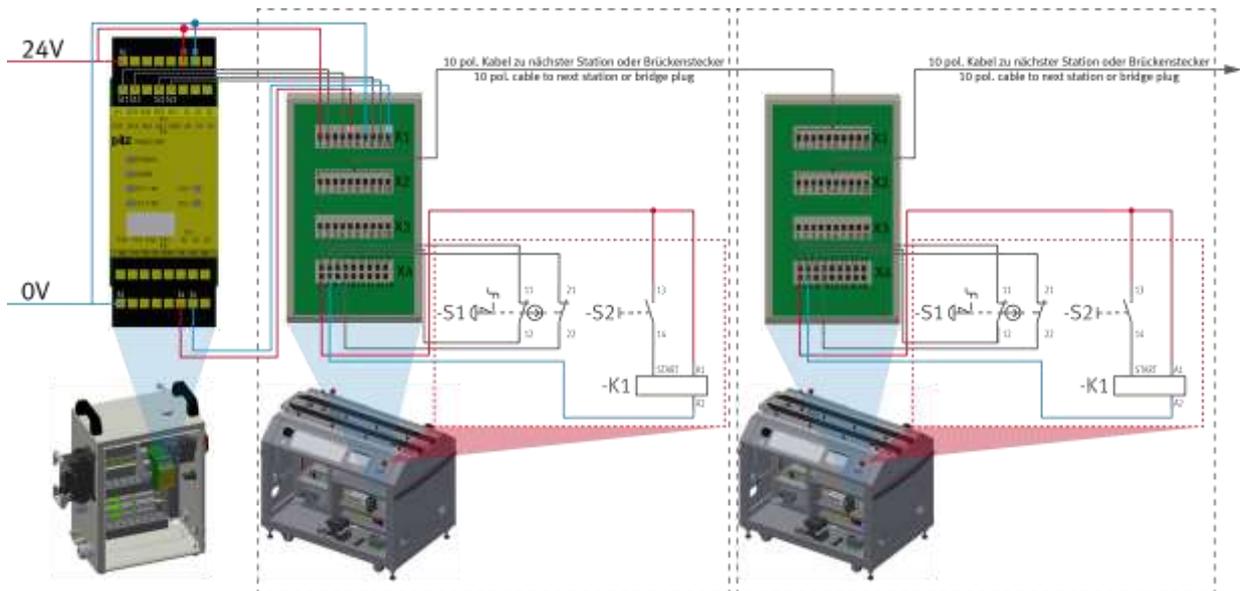

Setup emergency stop system / illustration similar

The emergency stop system affects the whole line, so if an emergency stop is pressed, all stations in the line stop.

The emergency stop boards which are used in each station are used to connect one station to the next.

These are connected with 10-pin cables and route all emergency stop information from one station to the next.

Starting at the power cabinet, a 10-pin cable is plugged into the X1 interface of the emergency stop board at the first station, from there it goes from the X2 of the emergency stop board to the X1 interface of the Emergency stop board from the next station. If no other station is connected, a jumper plug must be plugged into X2 of the emergency stop board at the last station.

The information is processed internally by X4 on the emergency stop board.

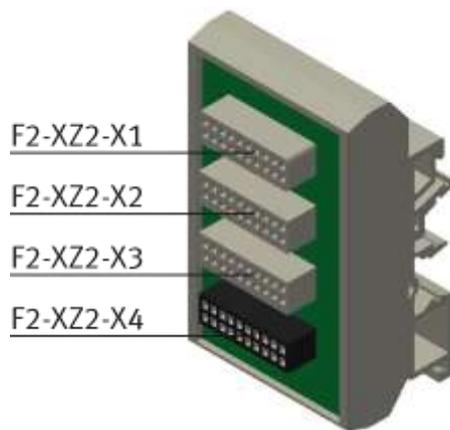


Illustration similar

### Circuit board emergency stop circuit

- F2 XZ2-X1  
Emergency stop coupling input / If no predecessor station is present, a bridge plug is to be installed here or at the system plug.
- F2 XZ2-X2  
Emergency stop coupling Output 1 / If there is no following module, a bridge plug is to be installed here or at the system plug.
- F2 XZ2-X3  
Emergency stop coupling output 2 / for the connection of a further module or an external machine (for example for basic module branch - here a further module can be installed at the branch or a CNC processing machine can be provided at a bypass) otherwise a bridge plug is to be provided.
- F2 XZ2-X4  
Connection terminals for control panel, power supply, emergency stop relay

## 7.6 Function extension by application modules

### 7.6.1 Assembly of an CP application module to a CP Factory basic module

	NOTE
<p>The procedure for installing a CP application module on a basic module is identical for all basic modules. The following example is an example for all basic modules and applications.</p>	

#### Positioning slot nuts in the cross profiles of the CP Factory basic module

Mounting the CP application module is very easy:

- Two M5-slot nuts (1) have to be put into the inner front slot of the cross profile (4) of the CP Factory basic module.
- Then put two additional M5-slot nuts (1) into the inner back slot of the cross profile (2) of the basic module.
- Then you have to position the slot nuts (1) approximately to the distance of the vertical cross profiles of the CP application module.




Positioning slot nuts / illustration similar

Position	Description
1	slot nut
2	back cross profile
3	Inner slot (front cross profile)
4	front cross profile

**Attaching the application module to the CP Factory basic module**

- Put the CP application module on the CP Factory basic module.
- Position the slot nuts (2) underneath the mounting brackets (1) of the CP application module so that the internal threads of the slot nuts are visible underneath the elongated holes of the mounting brackets.

	NOTE
	Use Allen keys for lateral adjustment of the slot nuts.

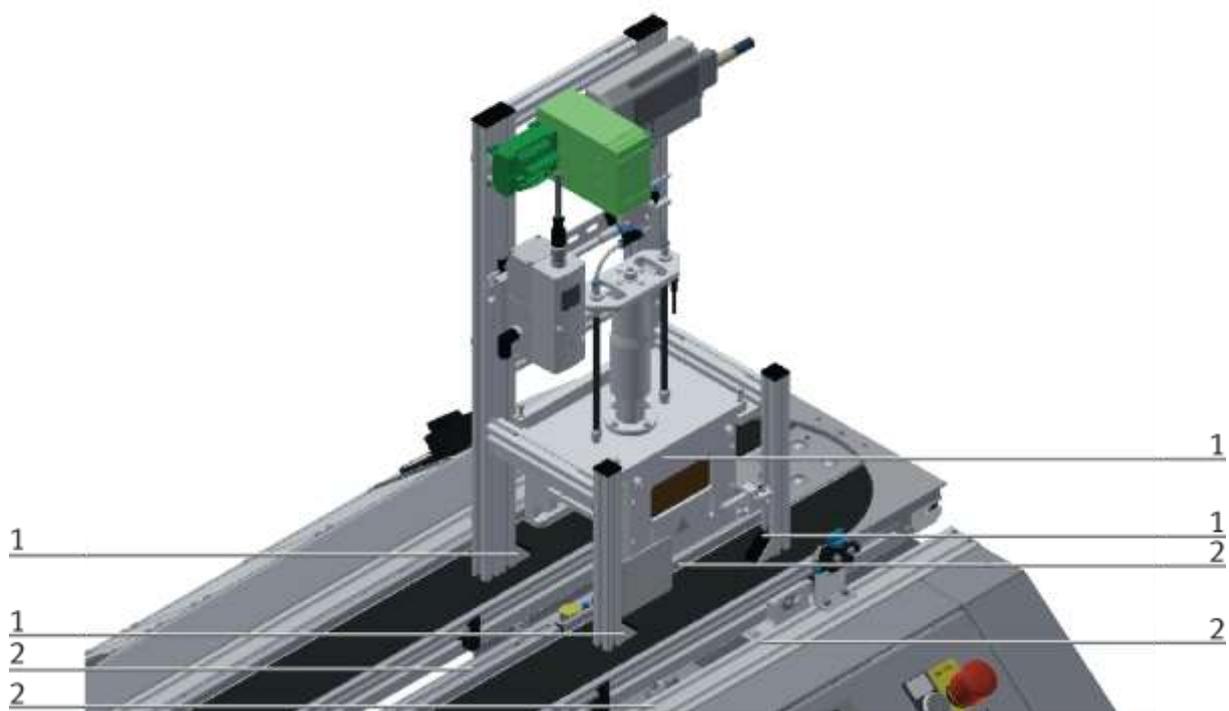


How to put on the CP application module / illustration similar

Position	Description
1	CP application module: mounting bracket
2	slot nut

**Adjusting the CP application module and fixing it on the CP Factor basic module**

- Use raised head screws M5x8, in order to connect the mounting brackets (1) of the CP application module Measuring, at first loosely, with the cross profiles (2) of the CP Factory basic module.
- After setting all raised head screws, you can still move the CP application module to the position required.
- Push a carrier with pallet and front cover to the stopper position. The front cover points with its inside upwards. The drilled hole of the front cover is on the left side.
- Have a visual inspection to make sure that the two distance sensors are capable of registering the front cover more or less in medium range.
- Now tighten the raised head screws.
- Then put the black covers onto the mounting brackets.

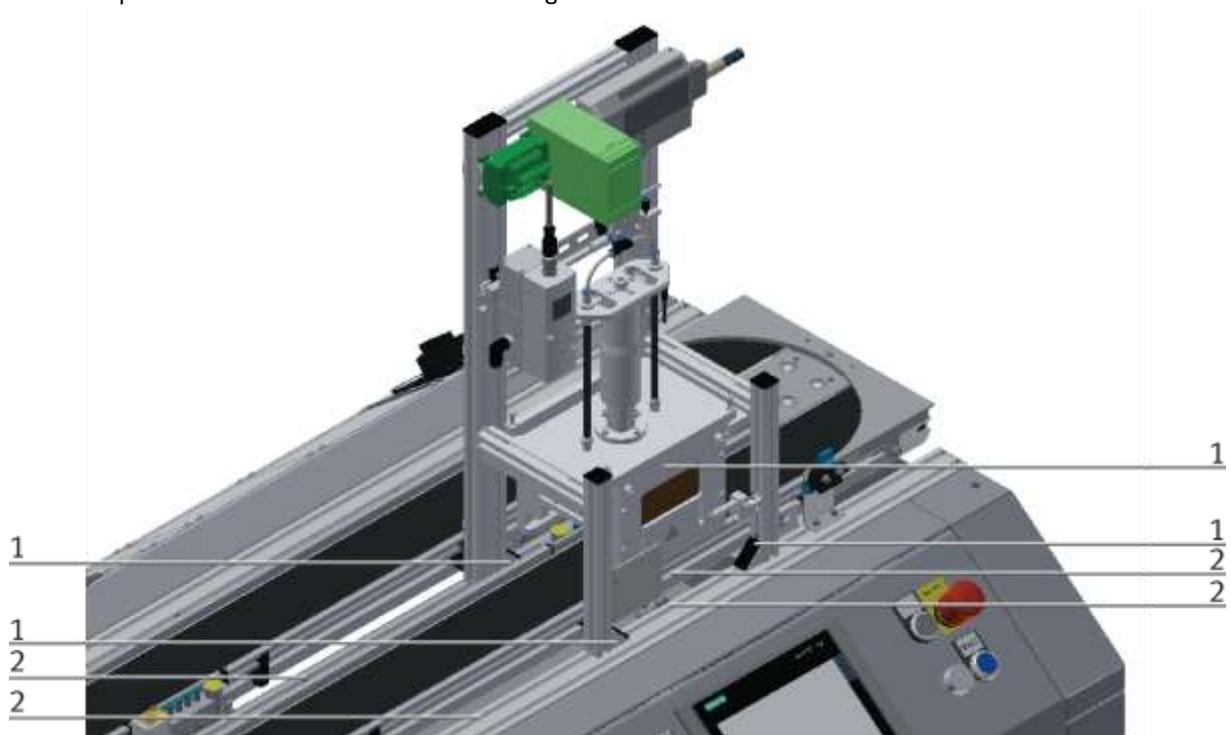

Tightening the CP application module / illustration similar

Position	Description
1	CP application module: mounting bracket with cover
2	CP Factory basic module: cross profile

## 7.6.2 Connecting the CP application module electrically to the CP Factory basic module

### SysLink-interface for digital signals


The CP application module exchanges digital input and output signals with the basic module via the SysLink interface:

- Connect the I/O terminal (1) of the CP application module with the I/O terminal (6) on the electric board of the CP Factory basic module. Therefore use the provided connecting cable with SysLink plugs (5).

### D-Sub-interface for analogue signals (option – not available at all CP application modules)

The CP application module produces two analogue output signals with the distance sensors. These are set on the analogue terminal and have to be connected with the analogue inputs of the CP Factory basic module:

- Connect the analogue terminal (2) of the CP application module with the analogue terminal (4) on the electric board of the CP Factory basic module. Therefore use the provided connecting cable (3) with standard D-Sub plugs: 15-pin, two-rowed.

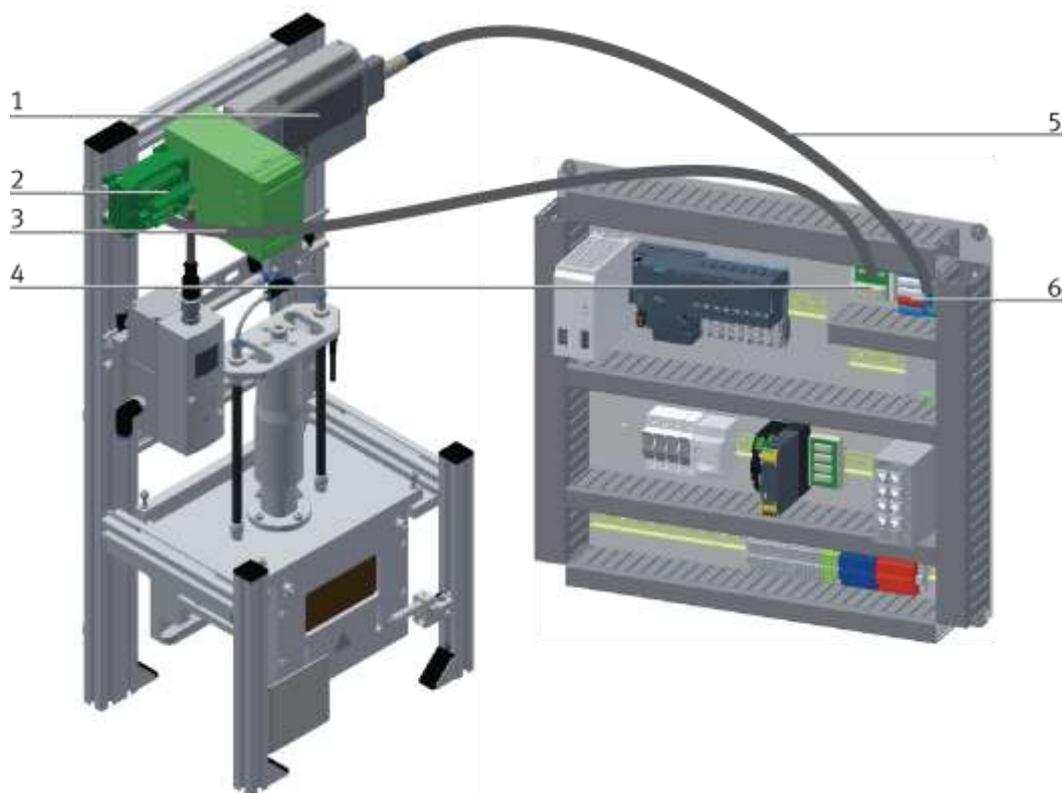


Electrical connections / illustration similar

Position	Description
1	CP application module: I/O terminal (+BG-XD1)
2	CP application module: analogue terminal (+BG-XD2A)
3	connecting cable with 15-pin D-Sub-plugs
4	electric board CP Factory basic module: analogue terminal (+K1-XD16A)
5	connecting cable with SysLink-plugs (SysLink-cable)
6	electric board CP Factory basic module: I/O terminal (+K1-XD15)

### 7.6.3 Pneumatic connection from application modules

The pneumatic connection is based on the principle of the following sketch. The application module is connected from the valve (terminal) to the shut-off valve (3) on the conveyor belt. The hose (nominal width 4) is simply inserted into the QS connector.

The supply line (2) is plugged into the shut off-valve (3).

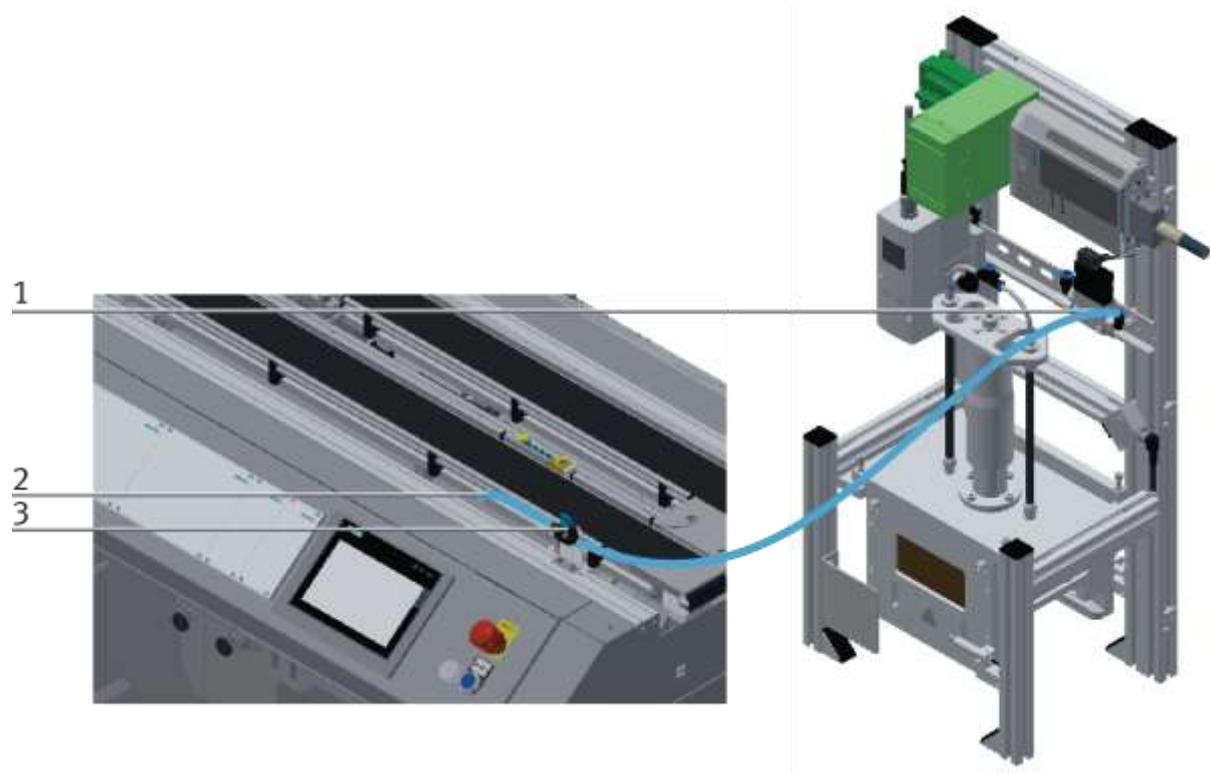

Pneumatically connect application module / illustration similar

## **7.7 Commissioning**

The Basic Module ByPass has got several components which have to be attached when starting up. The procedure will be described on the following pages.

### **7.7.1 Pneumatic commissioning**

The mechanic mounting must be finished and completed. At first you have to connect the Basic Module ByPass to the pneumatic system of the room. The corresponding service unit has to be provided by the customer and should be placed right next to it. The quick coupling plug has got a nominal size of 5 mm. If the local system has got a nominal size of 7.9 mm, it is possible to exchange the quick coupling plug of the service unit for a bigger one (adapter 1/8 to 1/4 necessary).

Now the station can be supplied by 6 Bar and the pneumatic commissioning is completed.

### **7.7.2 Electrical commissioning**

Now the Basic Module ByPass has to be supplied with electric voltage (400 V). The voltage has to be provided by the customer. Professional installation must be guaranteed as well.

## **7.8 Visual inspection**

The visual inspection must be carried out before each start-up!

Before starting the station, check:

- the electrical connections
- the correct fit and the condition of the compressed air connections
- the mechanical components for visible defects  
(Cracks, loose connections, etc.)
- the emergency stop devices are working

Eliminate any damage found before starting the station!

## 7.9 Adjusting the sensors

### 7.9.1 Proximity switch (stopper Identsensor)

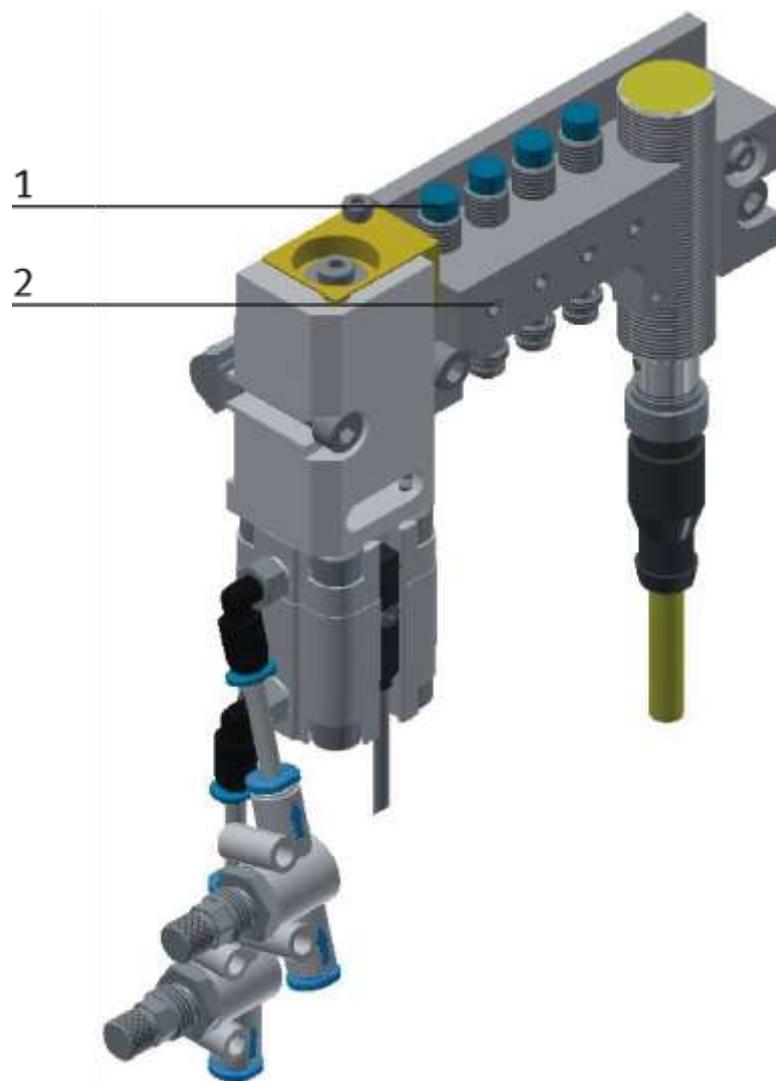


Illustration similar

Position	Description
1	Sensor stopper identify sensor / 150395 (SIEN-M8NB-PS-S-L) 1 position (BG21/BG31/BG41) 2 position (BG22/BG32/BG42) 3 position (BG23/BG33/BG43) 4 position (BG24/BG34/BG44)
2	Screw to clamp the sensor

The proximity switches are used for controlling the pallet.

**Requirements**

- Stopper unit is attached to the conveyor.
- Electrical connection of the proximity switches is set up.
- Power supply is available.

**Procedure**

1. The stopper is in upper position, a pallet is stopped at the stopper.
2. Shift the switch as long as the switching status display (LED) appears.
3. Shift the proximity switch into the same direction by a few millimeters as long as the switching status display disappears.
4. Shift the proximity switch halfway between the start-up and end position.
5. Tighten the locking screw of the proximity switch with an Allen key SW 1,3.
6. Check the position of the proximity switch by repeated removing the pallet.

**Documents**

- Data sheets / operating instructions  
Proximity Switch 150395 (SIEN-M8NB-PS-S-L)

### 7.9.2 Proximity switch (stopper cylinder)

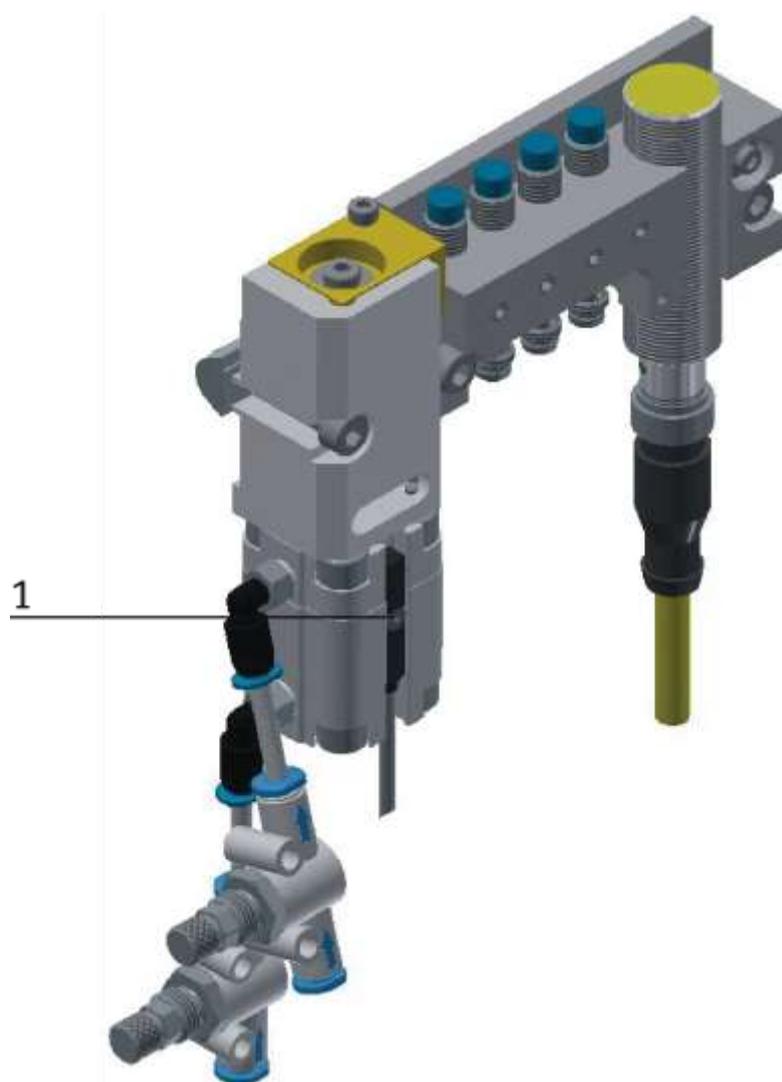


Illustration similar

Position	Description
1	Sensor stopper down/ 574334 (SMT-8M-A-PS-24V-E-0,3-M8D) (BG20) / (BG30) / (BG30) / (BG40)

The proximity switches are used for controlling the end position of the cylinder for the stopper. The proximity switches react to a permanent magnet on the piston of the cylinder.

**Requirements**

- Cylinder stopper is attached to the conveyor.
- Pneumatic port of the cylinder is set up.
- Compressed air supply is switched on.
- Electrical connection of the proximity switches is set up.
- Power supply is available.

**Procedure**

1. The cylinder is in its end position to be queried.
2. Shift the proximity switch as long as the switching status display (LED) appears.
3. Shift the proximity switch into the same direction by a few millimeters as long as the switching status display disappears.
4. Shift the proximity switch halfway between the start-up and end position.
5. Tighten the locking screw of the proximity switch with an Allen key SW 1,3.
6. Check the position of the proximity switch by repeated test runs of the cylinder.

**Documents**

- Data sheets / operating instructions  
Proximity Switch 574334 (SMT-8M-A-PS-24V-E-0,3-M8D)

### 7.9.3 Proximity switch (branch cylinder)

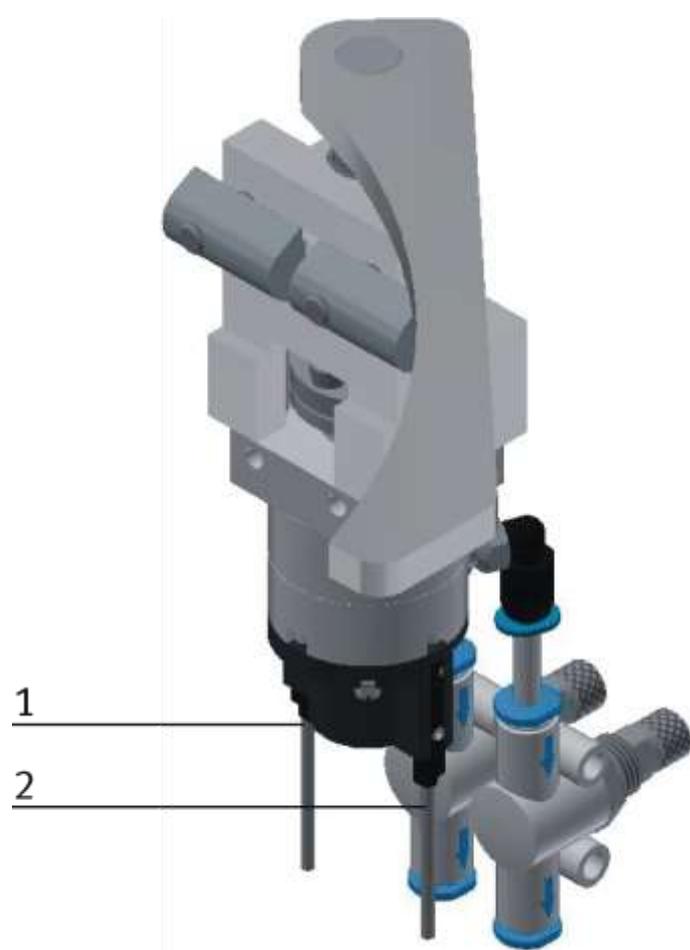


Illustration similar

Position	Description
1	Sensor outward transfer straight line/ 551373 (SMT-10M-PS-24V-E-2,5-L-OE) (BG30)
2	Sensor outward transfer bend off/ 551373 (SMT-10M-PS-24V-E-2,5-L-OE) (BG31)

The proximity switches are used for controlling the end position of the cylinder for the branch. The proximity switches react to a permanent magnet on the piston of the cylinder.

**Requirements**

- Branch is attached to the conveyor.
- Pneumatic port of the cylinder is set up.
- Compressed air supply is switched on.
- Electrical connection of the proximity switches is set up.
- Power supply is available.


**Procedure**

1. The cylinder is in its end position to be queried.
2. Shift the proximity switch as long as the switching status display (LED) appears.
3. Shift the proximity switch into the same direction by a few millimeters as long as the switching status display disappears.
4. Shift the proximity switch halfway between the start-up and end position.
5. Tighten the locking screw of the proximity switch with an Allen key SW 1,3.
6. Check the position of the proximity switch by repeated test runs of the cylinder.

**Documents**

- Data sheets / operating instructions  
Proximity Switch 551373 (SMT-10M-PS-24V-E-2,5-L-OE)

### 7.10 Adjusting the one-way flow control valves

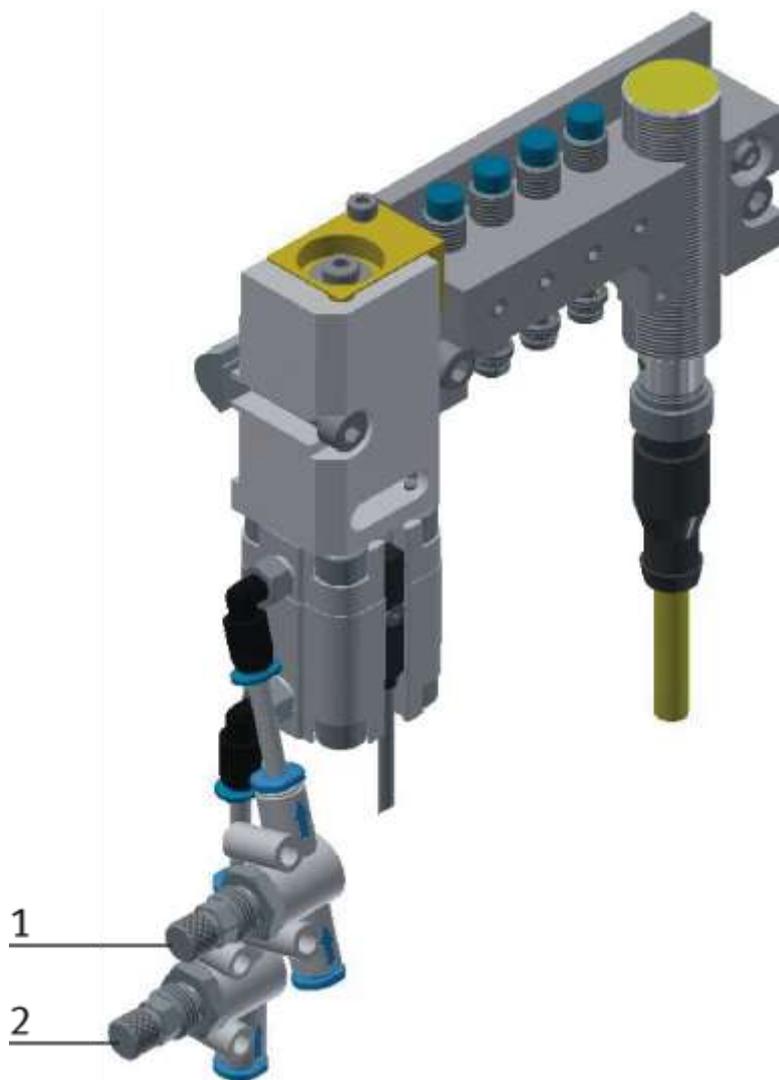

One-way flow control valves / illustration similar

Pos	Description
1	One-way flow control valves GRLA for stopper cylinder
2	One-way flow control valves GRLA for stopper cylinder



One-way flow control valves / illustration similar

Pos	Description
1	One-way flow control valves GRLA for branch cylinder
2	One-way flow control valves GRLA for branch cylinder

One-way flow control valves are used for the regulation of the exhaust air volume of double-acting drive units. In the opposite direction the air flows through the flow control valve having a full cross-sectional flow. The piston is clamped between air cushions by free supply air and throttled exhaust air (improvement of the operating behavior even if the load changes).

### **Requirements**

- Pneumatic port of the cylinders is set up.
- Compressed air supply is switched on.

### **Procedure**

1. At first, turn off both one-way control valves completely. Then turn them on by about one rotation.
2. Start a test run.
3. Turn on the one-way flow control valves slowly as long as the required piston speed has been reached.

### **Documents**

- Data sheets
  - One-way flow control valve (193138)

## 8 Operation

### 8.1 Starting the station

An initial commissioning has already been carried out ex works for the station.

Follow these steps to work with the station and the applications:

1. Establish mains supply 400 V AC for basic module.
2. The basic module is supplied with approx. 6 bar compressed air. When commissioning for the first time, make sure to increase the pressure slowly. (Prevents unpredictable events).
3. Now you can work with the station.

### 8.2 The control units of the basic module branch



CP Factory control panel / illustration similar

Position	Description
1	Main switch - QB1
2	Manometer
3	Touch Panel – PH1 / Festo panel or Siemens panel possible
4	Network socket- XPN3
5	Emergency- stop switch – F2-FQ1
6	Reset pushbutton – F2-SF1
7	Switch operation mode (option)

### 8.3 Sequence description of the branch module



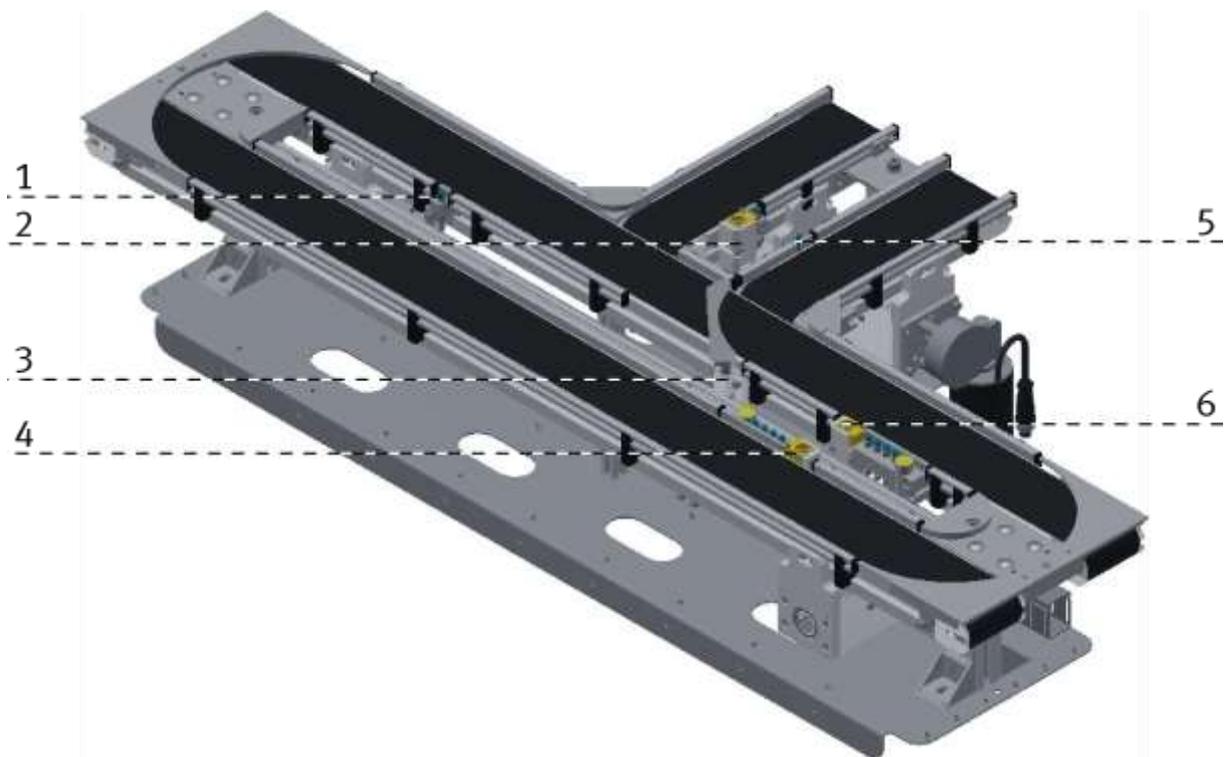



Illustration similar

Position	Description
1	Sensor straight track passed
2	Stopper branch feed in
3	Branch
4	Stopper basic track
5	Sensor branch track
6	Stopper branch

Sequence description stopper feed in

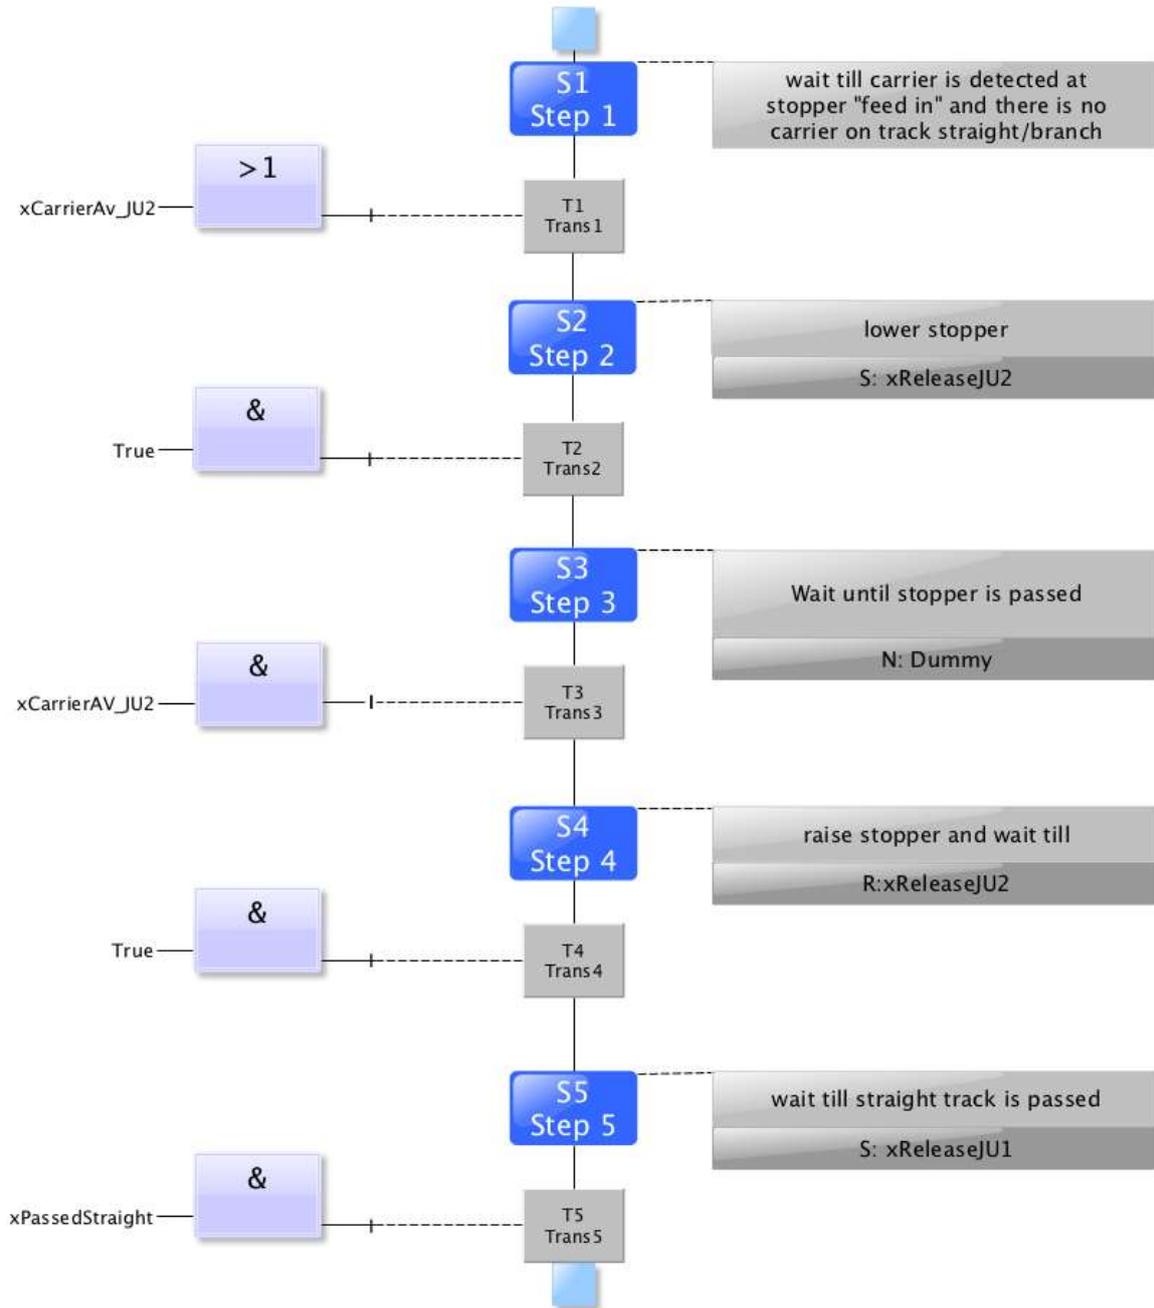


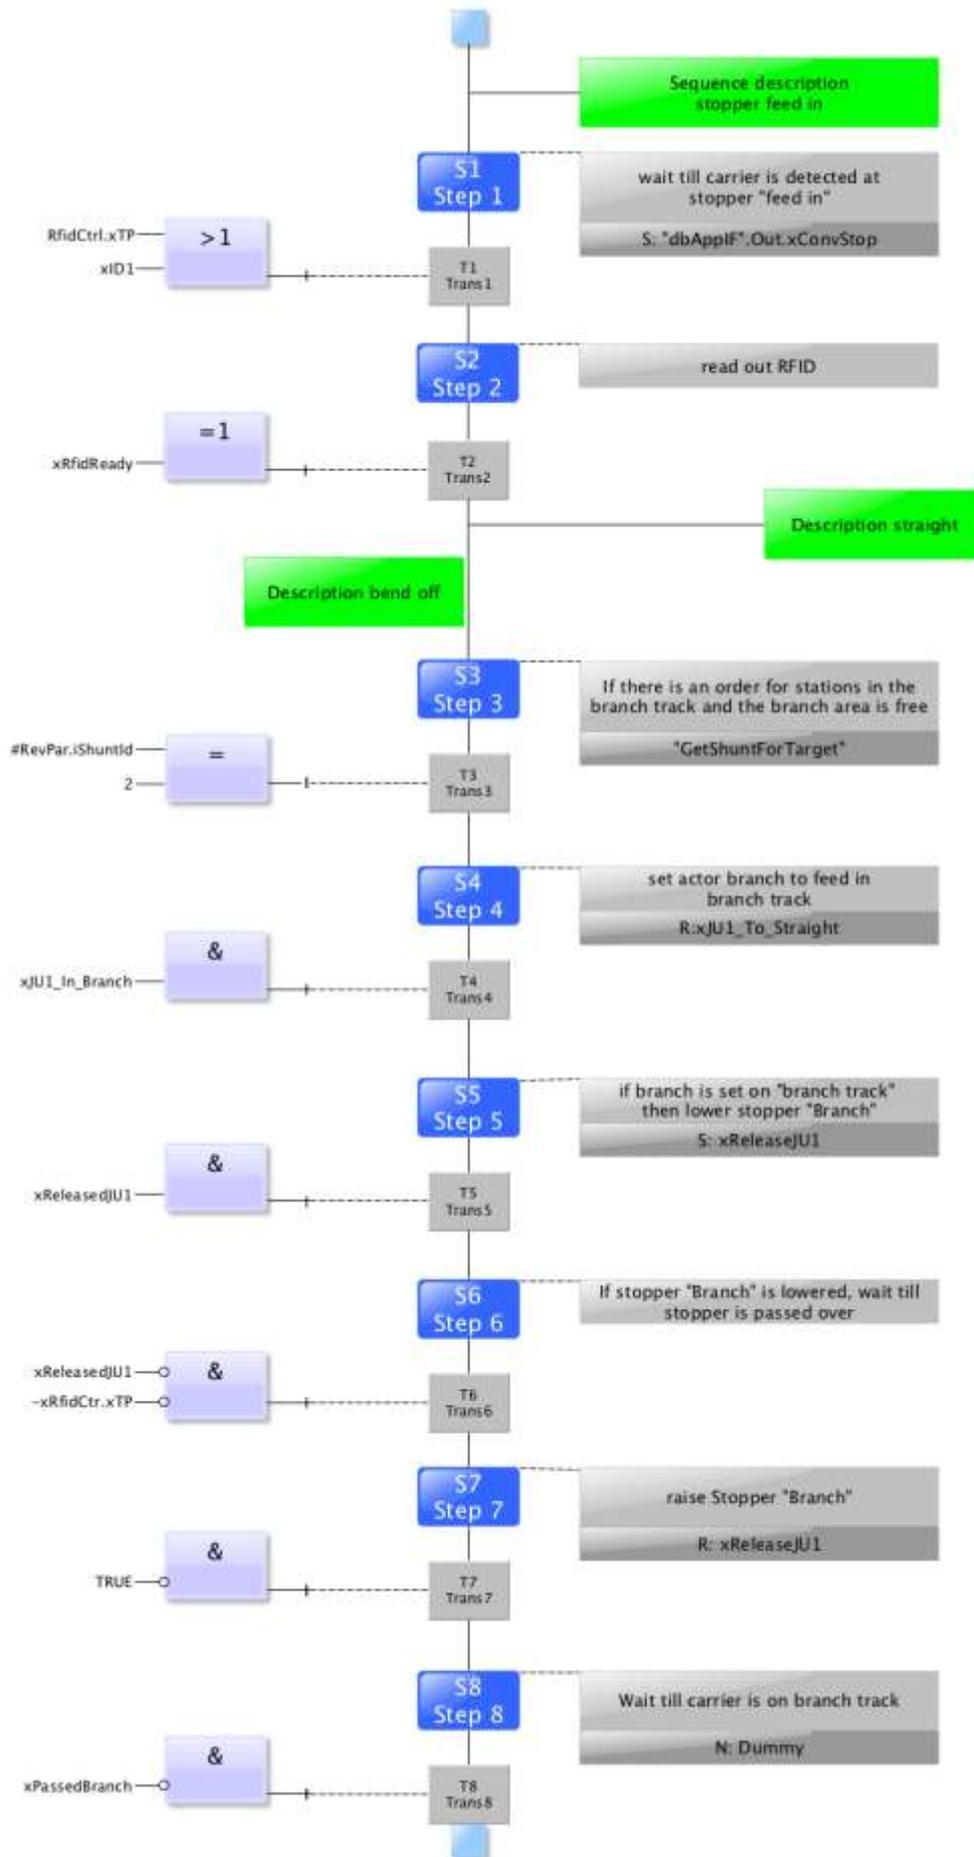

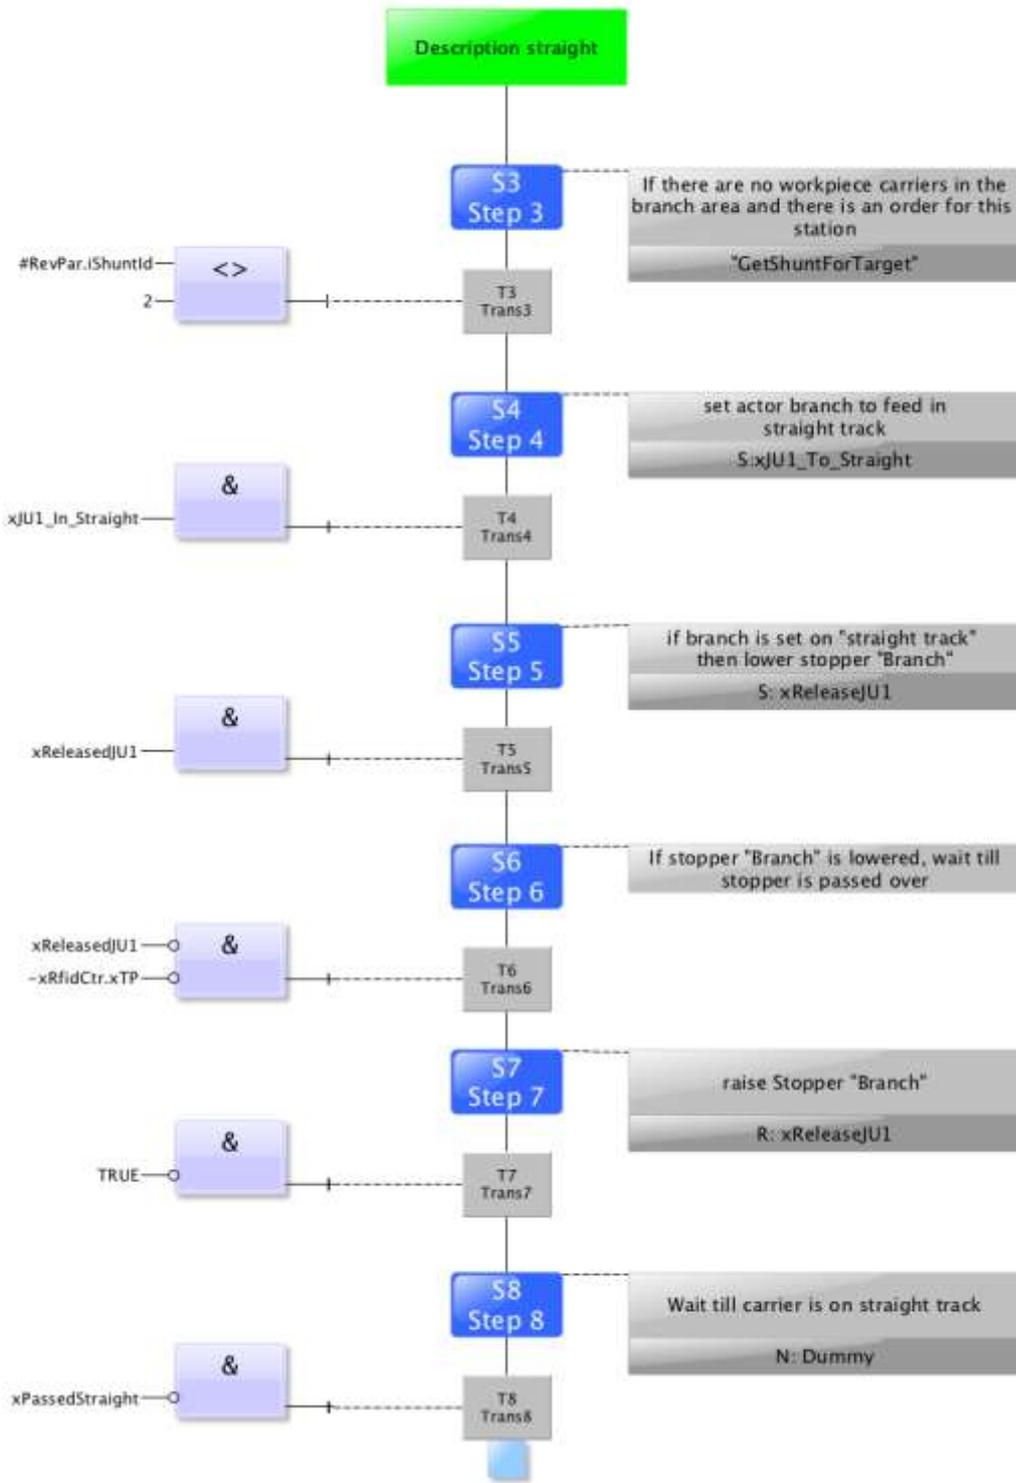

### 8.4 Menu architecture from operation panel

This description serves as an example; it is made with a branch module and an application module measure analog. Some of the functions are not available if there is no or other application module mounted.

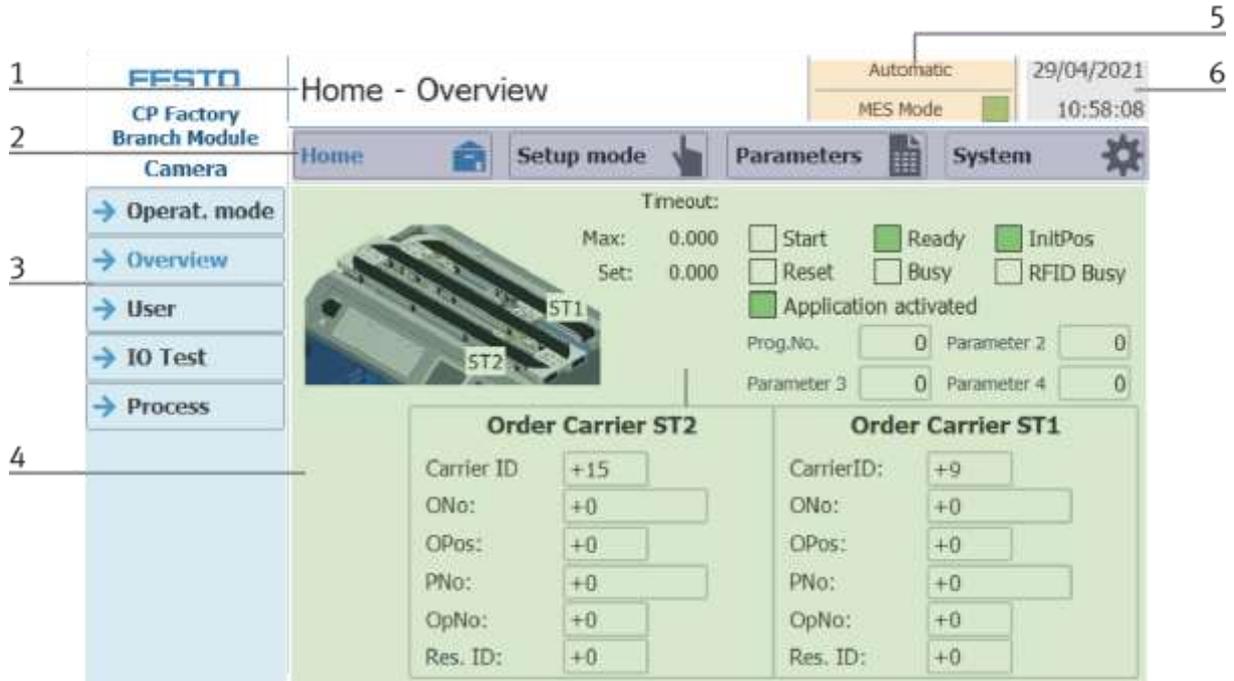


Position	Description
1	Description of menu (main or submenu) OR in case of an active Error or an error message, this field is also for announcement
2	Main menu (always shown the same) Home: Here the module can be controlled, the mode (default / MES) can be selected, the automatic or the set-up mode can also be operated. Setup: Here, the application can be operated manually in setup mode Parameter: The parameters of the application are set here, a simulation can be started, the transitions can be defined, or the tape can be set System: Here the system parameters such as language, time, etc. are set
3	Submenu Changing content, depending on the main menu
4	Changing content, depending on the main or submenu
5	Announcement of operation mode or mode (MES or default)
6	Announcement of actual date and time

**Log in as an administrator**


There are 2 functions in the operation of the HMI that are only available when the operator logs on to the HMI. These functions are the I/O test in the setup mode and the user area.

If one of the functions has been logged in, the other function is also available without the user having to log in again.

The process is explained using the user function as an example.

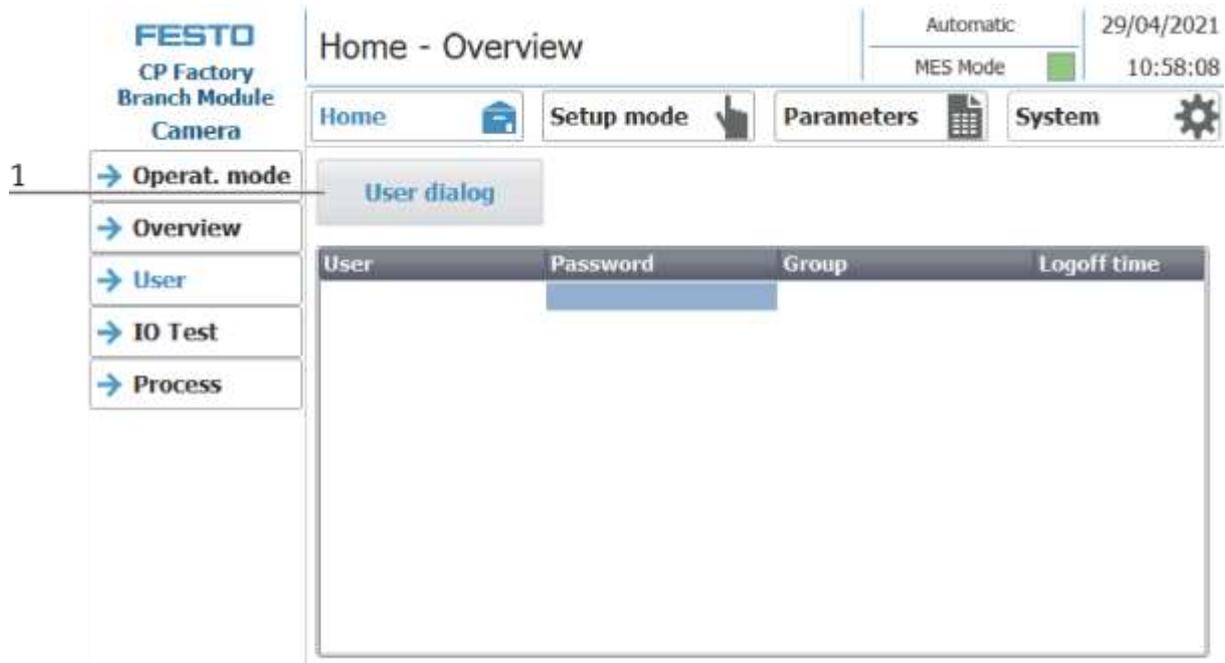

1. With a click on the User Dialog button the following window is opened.

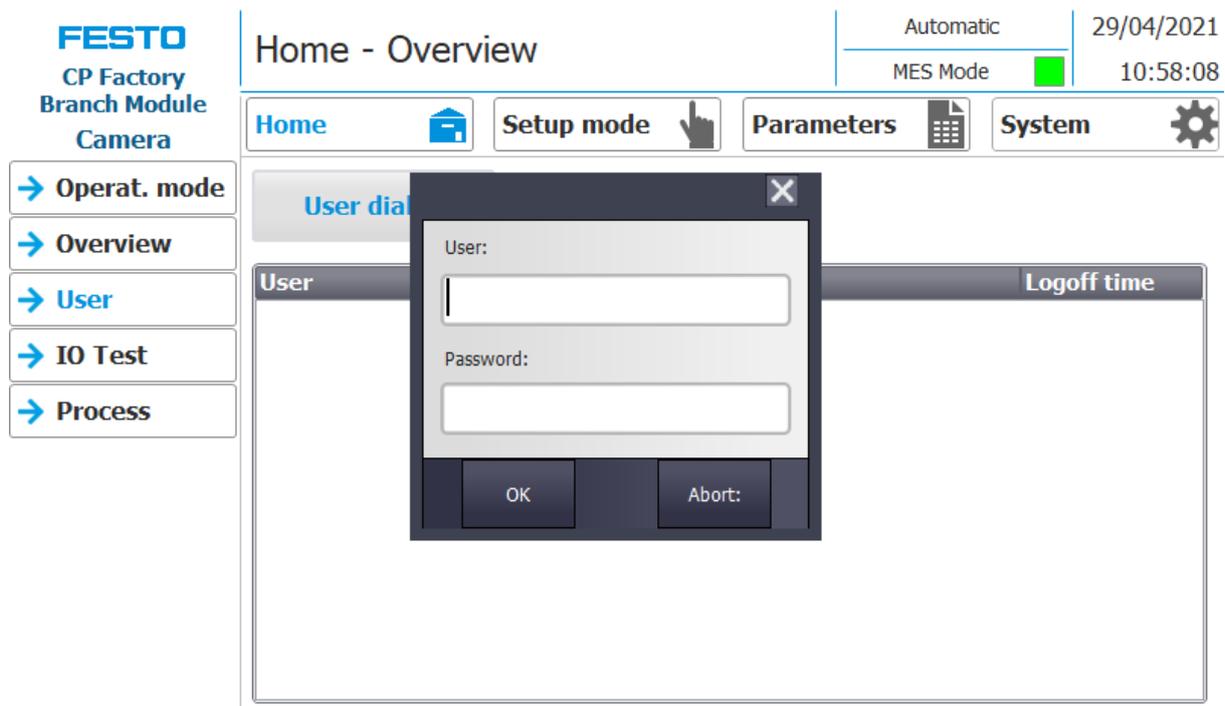

2. If you click in the User or Password fields, the input window opens and the user data can be entered.



- The user data can be entered here. The entry is confirmed with the Return key.

User: festo

Password: festo

**FESTO**  
CP Factory  
Branch Module  
Camera

- Operat. mode
- Overview
- User
- IO Test
- Process

## Home - Overview

Automatic | 29/04/2021  
MES Mode ■ | 10:58:08

Home 
Setup mode 
Parameters 
System

User dialog

User	Password	Group	Logoff time
Administrator	*****	Bedienen	5
festo	*****	Bedienen	5
PLC User	*****		5

- The user is now logged in as "Administrator" and the functions User and I / O test are available.

## 8.5 Operation modes


The following operation modes are available

- Reset  
The station is moved to its home position
- Setup  
The station runs in set-up mode, actuators can be controlled and monitored
- Automatic  
The station runs in automatic mode, all processes run automatically, no actuators can be controlled.  
There are two modes in the automatic mode: the default mode and the MES mode.

### 8.5.1 Mode

The mode can be set between MES and default, there are two ways to set it.

1. Clicking on the blue marked area opens a pop-up window in which the operating mode can be selected. Other functions are also integrated in the pop-up.
2. The mode can also be set on the Home / Operating mode page.

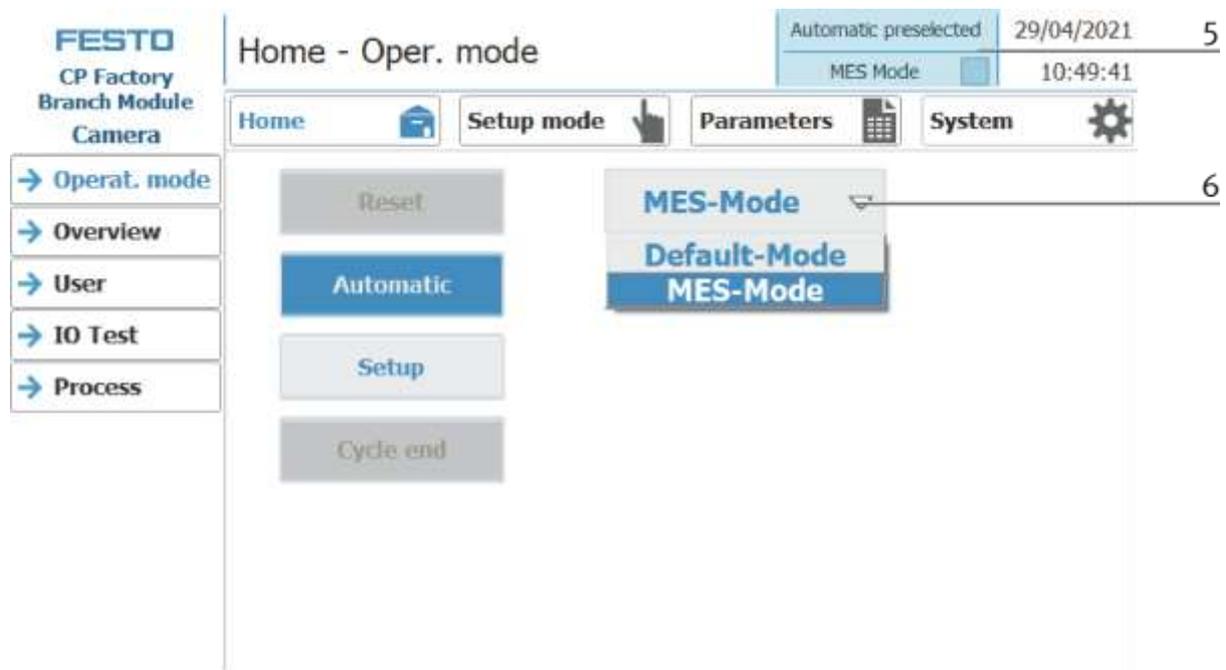


Possibilities of mode

- MES mode  
In the MES mode, all processes are centrally started, executed and monitored by the MES software. All stations must be set to MES mode and automatic start.
- Default Mode  
The automatic sequence is not centrally controlled in the default mode, all information from the transition tables (see chapter "Schematic process flow") is read and processed separately at each station.

### Display MES Mode


Various states are displayed in the Home operating mode on the Overview page.

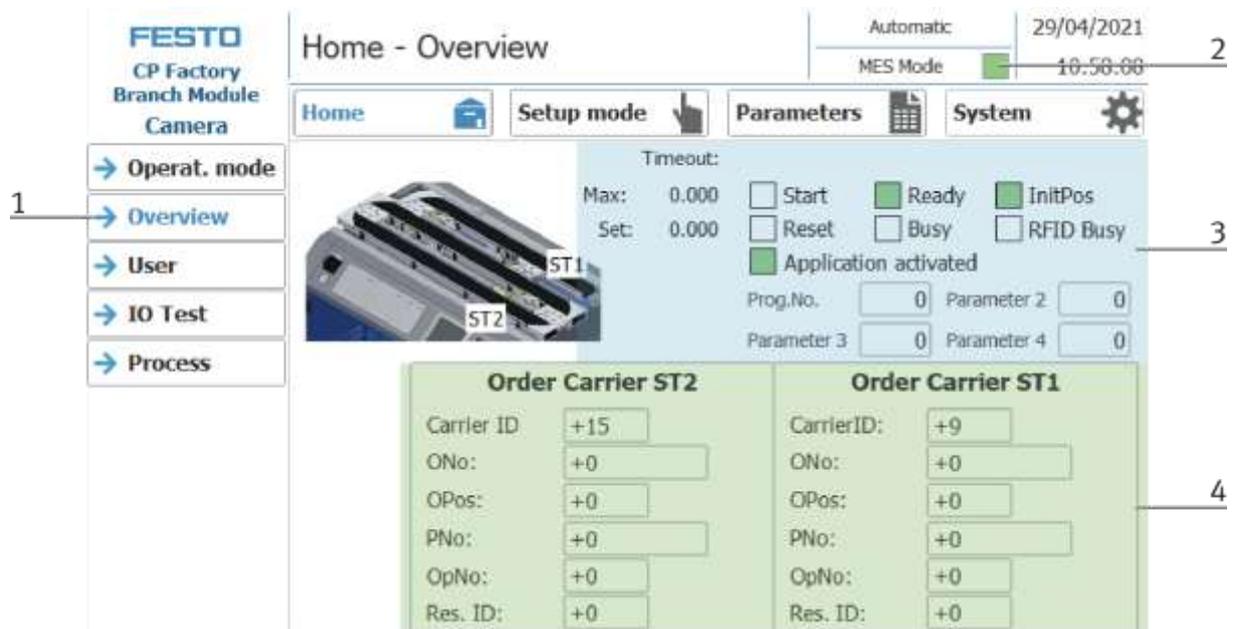

Position	Description
1	Change to sub menu Overview
2	Display operation state MES is active
3	Display of various functions (marked green if active) Display of various information about the station and its parameters
4	Display of the order data of the current carrier ST1 and ST2

### Display Default mode


Various states are displayed in the Home operating mode on the Overview page.

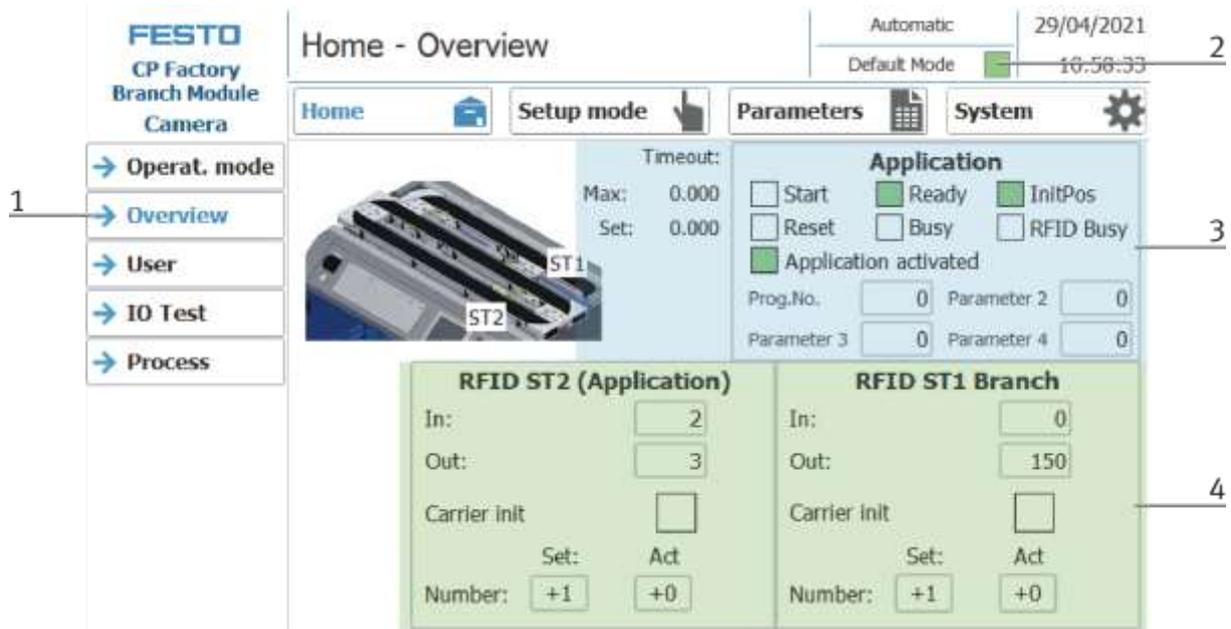

Position	Description
1	Change to sub menu Overview
2	Display default mode is active
3	Display of various functions (marked green if active) Display of various information about the station and its parameters
4	Display of RFID statecodeST1 (Branch) and ST2 (Application)

### 8.5.2 Operation mode Reset


In the operation mode Reset, the station is moved to its home position.

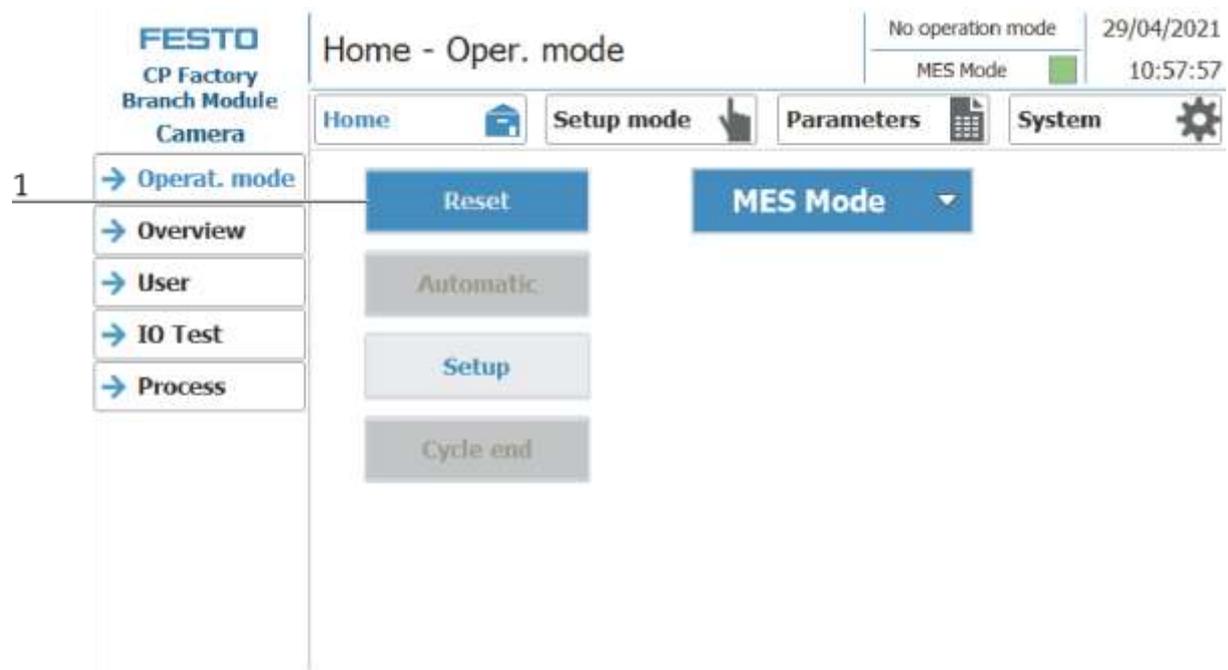

1. After switching on the station, the Reset button flashes, press this to move the station into its home position.
2. The operating mode Reset is displayed here during the process.

### 8.5.3 Operation mode Setup

In operation mode Setup, all sensors can be displayed and actuators can be controlled from the HMI. This is used for troubleshooting or during commissioning.

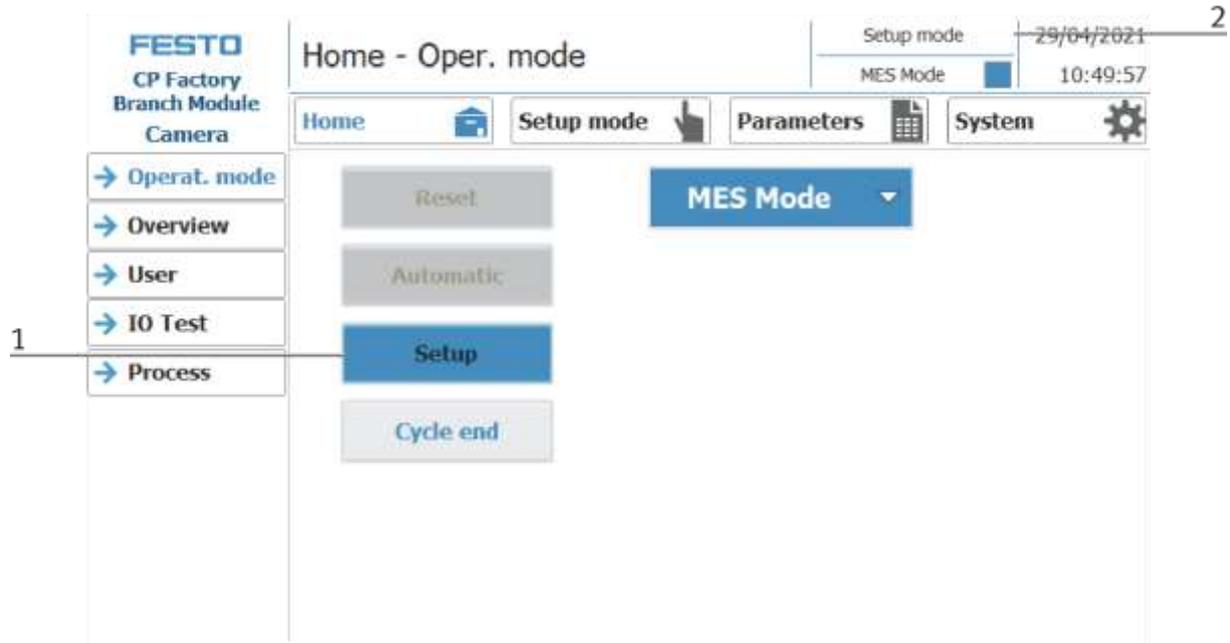

1. Automatic mode is not active and the Setup button is not greyed out - press the Setup button to activate the Setup mode.
2. The current operation mode is displayed here

### Set up application

1. Click the Setup mode button
2. Select application - the currently installed application is always displayed here. In the example, this would be the application module magazine. The content of this page changes depending on the installed application module. The description of the functions is described in the operating instructions for the application modules. Here the magazine is used as an example.

The screenshot shows the 'Setup - Application' interface for the FESTO CP Factory Branch Module Camera. The interface is divided into a left navigation menu and a main content area. The navigation menu includes 'Camera' (selected) and sub-items: 'Application', 'Belt 1-2', 'Belt 3-4', 'Stopper 1', 'Stopper 2', 'Stopper 3', and 'Shunt'. The main content area displays the following information:

- Camera logon string:** 20 SBOX-Q-ZEWAS; no authentication required.
- start program:** Start button
- Camera program:** 4
- actual step:** 10
- No. good parts:** 0
- No. bad parts:** 0
- Inspection result:** fail (indicated by a red button)
- Send string 1:** [Empty field]
- Receive string 1:** [Empty field]
- Send string 2:** [Empty field]
- Receive string 2:** [Empty field]
- Send string 3:** [Empty field]
- Receive string 3:** [Empty field]
- Sent count:** 0
- Received count:** 0
- No. errors:** 0

At the top right, the status shows 'Setup mode' and 'MES Mode' (checked), along with the date '29/04/2021' and time '10:54:04'. The navigation bar includes 'Home', 'Setup mode' (selected), 'Parameters', and 'System'.

**FESTO**  
CP Factory  
Branch Module  
Camera

Setup - Application

Setup mode 29/04/2021  
MES Mode 10:54:04

Home Setup mode Parameters System

Application  
Belt 1-2  
Belt 3-4  
Stopper 1  
Stopper 2  
Stopper 3  
Shunt

Camera logon string: 20.SBOX-Q-ZEWAS: no authentication required.

start program: Start

Camera program: 4

actual step: 10

No. good parts: 0

No. bad parts: 0

Inspection result: fail

Send string 1:  
Receive string 1:  
Send string 2:  
Receive string 2:  
Send string 3:  
Receive string 3:  
Sent count: 0  
Received count: 0  
No. errors: 0

7  
8  
9  
10  
11  
12  
13  
14  
15  
16

The functions can be activated in the Setup menu under Application by clicking the buttons.

Position number	Description
1	Start the program: here the active camera program can be started.
2	Camera program: the camera's measuring program is selected here 1: Test: No fuse mounted 2: Test: Front fuse mounted (seen in direction of transport) 3: Test: Rear fuse mounted (as viewed in transport direction) 4: Test: Both fuses mounted 5: Test: workpiece orientation (rotation about Z axis)
3	Current step: the active step is displayed here
4	Number of good parts: the number of all good parts since switching on is displayed here
5	Number of bad parts: the number of all bad parts since switching on is displayed here
6	Test result: the result of the last measurement is displayed here
7	Camera LogonString: the registration data of the camera are displayed on the PLC
8	Send string 1: the string shows what the PLC sends to the camera (detailed description of the TelNet interface is in the manual of the camera)
9	Receive string 1: the string shows what the PLC receives from the camera (detailed description of the TelNet interface is in the manual of the camera)
10	Send string 2: the string shows what the PLC sends to the camera (detailed description of the TelNet interface is in the manual of the camera)
11	Receive string 3: the string shows what the PLC receives from the camera (detailed description of the TelNet interface is in the manual of the camera)
12	Send string 3: the string shows what the PLC sends to the camera (detailed description of the TelNet interface is in the manual of the camera)
13	Receive string 3: the string shows what the PLC receives from the camera (detailed description of the TelNet interface is in the manual of the camera)
14	No Send: This shows how much was send to the camera (can be used to locate the error between the camera and the PLC)
15	No received: Shows how much of the camera was received (can be used to locate the error between the camera and the PLC)
16	Number of errors: the number of errors is displayed here


### Setup Belt 1+2

1. Click the Setup mode button
2. Select belt - the functions of the conveyor belt are displayed and / or controlled here.

The screenshot displays the 'Setup - Conveyor 1+2' interface. At the top, it shows 'Setup mode' and the date '29/04/2021'. Below this is a navigation bar with 'Home', 'Setup mode' (highlighted with a hand cursor), 'Parameters', and 'System'. The left sidebar contains a menu with 'Application', 'Belt 1-2' (selected), 'Belt 3-4', 'Stopper 1', 'Stopper 2', 'Stopper 3', and 'Shunt'. The main area features a control table for Drive1 and Drive2, and a 3D schematic of the conveyor system with various components labeled.

	Left	Drive1	Right
Belt 1	backward (W1_QA1)	Presel. slow	creep feed (W1_QA1)
			forward (W1_QA1_)
	Left	Drive2	Right
Belt 2	backward (W1_QA2)	Presel. slow	creep feed (W1_QA2)
			forward (W1_QA2_)

3D Schematic Labels: Belt 1, Belt 2, Belt 3, Belt 4, ST1, ST2, ST3, ST4, BG26, BG27, BG56, BG57.

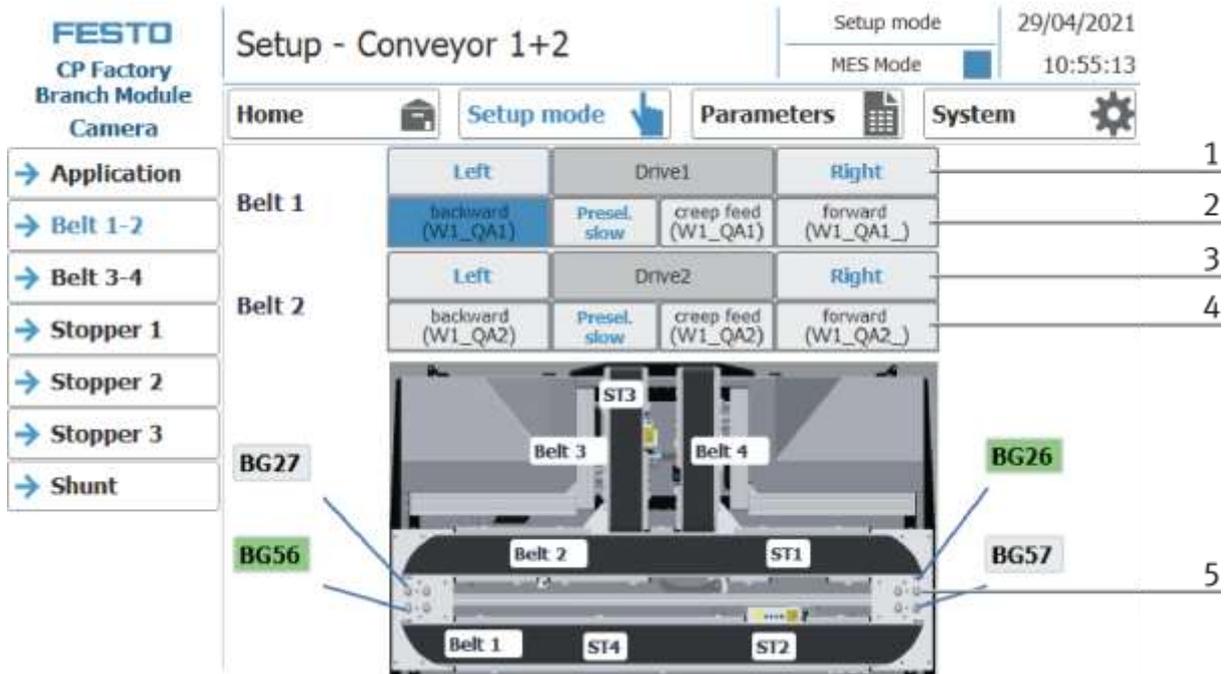

Position number	description
1	Drive conveyor 1 right / left Left: Conveyor moves counterclockwise to the left Drive 1: Display conveyor belt 1 Right: conveyor moves clockwise to the right
2	To left: move conveyor to the left (actuator W1_QA1 is activated, lights up blue when active) Slow pre selection: set the conveyor speed slowly Slow: move the conveyor slowly (actuator W1_QA1 is activated, lights up blue when active) To right: move conveyor to the right (actuator W1_QA1 is activated, lights up blue when active)
3	Drive conveyor 2 right / left Left: Conveyor moves counterclockwise to the left Drive 2: Display conveyor belt 2 Right: conveyor moves clockwise to the right
4	To left: move conveyor to the left (actuator W1_QA2 is activated, lights up blue when active) Slow pre selection: set the conveyor speed slowly Slow: move the conveyor slowly (actuator W1_QA2 is activated, lights up blue when active) To right: move conveyor to the right (actuator W1_QA2 is activated, lights up blue when active)
5	Display conveyors and stoppers (light up green when active)

### Setup Belt 3+4

1. Click the Setup mode button
2. Select belt - the functions of the conveyor belt are displayed and / or controlled here.

The screenshot shows the 'Setup - Conveyor 3+4' interface. At the top, it indicates 'Setup mode' and 'MES Mode' (checked) with a timestamp of 29/04/2021 10:55:24. The navigation bar includes 'Home', 'Setup mode' (highlighted), 'Parameters', and 'System'. The left sidebar lists menu items: 'Application', 'Belt 1-2', 'Belt 3-4' (selected), 'Stopper 1', 'Stopper 2', 'Stopper 3', and 'Shunt'. The main control area features buttons for 'Belt 3' and 'Belt 4', each with 'Left' and 'Right' directional controls and a 'Prevel. slow' button. Below the controls is a schematic diagram of the conveyor system with components labeled: Belt 1, Belt 2, Belt 3, Belt 4, ST1, ST2, ST3, ST4, BG26, BG27, BG56, and BG57.

**FESTO**  
CP Factory  
Branch Module  
Camera

## Setup - Conveyor 3+4

Setup mode 29/04/2021  
MES Mode 10:55:38

Home

**Setup mode**

Parameters

System

	Left	Drive3	Right		
Belt 3	backward (W1_QA3)	Presele. slow	creep feed (W1_QA3)	forward (W1_QA3_)	1
					2
					3
Belt 4	backward (W1_QA4)	Presele. slow	creep feed (W1_QA4)	forward (W1_QA4_)	4

- Application
- Belt 1-2
- Belt 3-4
- Stopper 1
- Stopper 2
- Stopper 3
- Shunt


Position number	description
1	Drive conveyor 1 right / left Left: Conveyor moves counterclockwise to the left Drive 1: Display conveyor belt 1 Right: conveyor moves clockwise to the right
2	To left: move conveyor to the left (actuator W1_QA3 is activated, lights up blue when active) Slow pre selection: set the conveyor speed slowly Slow: move the conveyor slowly (actuator W1_QA3 is activated, lights up blue when active) To right: move conveyor to the right (actuator W1_QA3 is activated, lights up blue when active)
3	Drive conveyor 2 right / left Left: Conveyor moves counterclockwise to the left Drive 2: Display conveyor belt 2 Right: conveyor moves clockwise to the right
4	To left: move conveyor to the left (actuator W1_QA4 is activated, lights up blue when active) Slow pre selection: set the conveyor speed slowly Slow: move the conveyor slowly (actuator W1_QA4 is activated, lights up blue when active) To right: move conveyor to the right (actuator W1_QA4 is activated, lights up blue when active)
5	Display conveyors and stoppers (light up green when active)

### Setup Stopper 1

1. Click the Setup mode button
2. Select stopper - the functions of the stopper position are displayed and / or controlled here.

The screenshot shows the 'Setup - Stopper 1' configuration interface. On the left, a navigation menu lists options: Application, Belt 1-2, Belt 3-4, Stopper 1 (highlighted), Stopper 2, Stopper 3, and Shunt. The main area features a 3D model of the stopper assembly with components labeled BG42, BG21, BG22, BG23, BG24, MB20, and TF80. Below the model is an 'RFID Data' table with fields for Carrier ID, PNo, ONo, Resource, OPos, Operation, State Code, and Default Mode parameters (Par. 1-4). The 'MES Mode' section shows 'tag present' and 'ready' status.

MES Mode		Carrier ID:	9	PNo:	+0	tag present
read	ONo:	+0		Resource	+0	ready
write	OPos:	+0		Operation:	+0	busy
Default Mode		State Code	0			
Delete data		Par. 1:	+0	Par. 2:	+0	error
		Par. 3:	+0	Par. 4:	+0	timeout

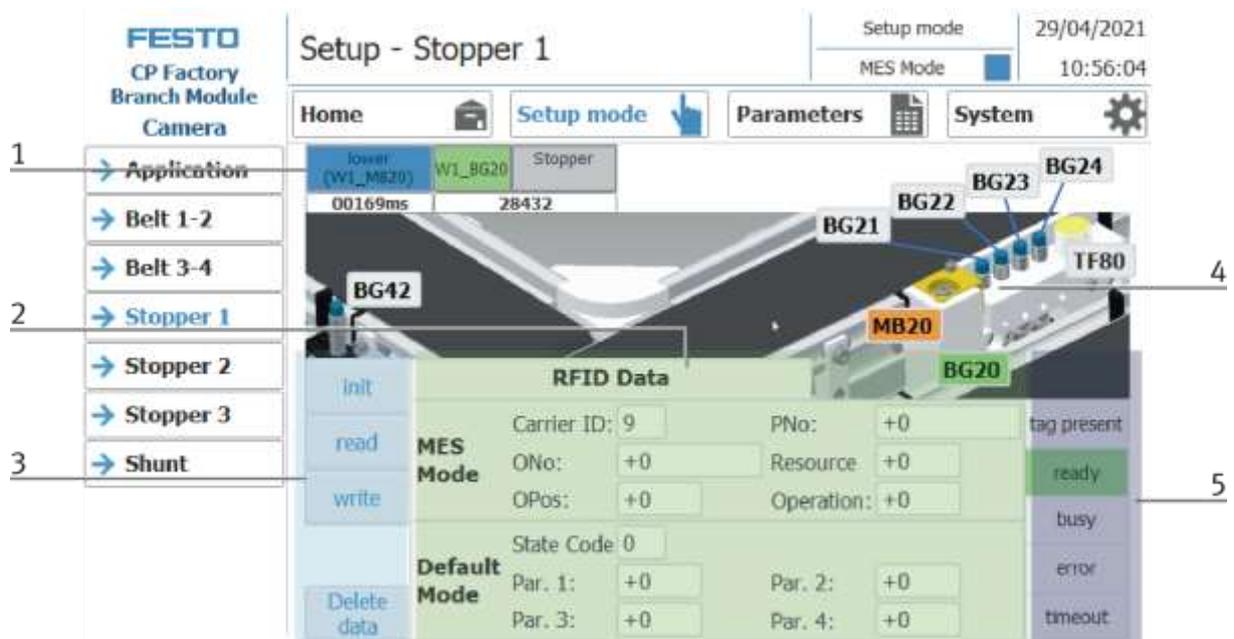

Position number	description
1	Move down the stopper Lower: Move stopper down (actuator W1_MB20 is activated, lights up blue when active) W1_BG20: Sensor W1_BG20 Stopper lowered (lit green when active) Stopper: Indicator stopper
2	RFID area MES Mode: Displays the job data Default Mode: Displays the RFID status
3	Write and read RFID area Initialize: Set RFID data to zero read: Read RFID data write: Write current data on RFID Delete data: all data in the input mask are deleted - not directly on the RFID (for easier entry)
4	Range Display of the active sensors (lit green when active) and actuators (lit orange when active) at the stopper
5	Display of RFID reading status

### Setup Stopper 2

1. Click the Setup mode button
2. Select stopper - the functions of the stopper position are displayed and / or controlled here.

The screenshot shows the 'Setup - Stopper 2' interface. On the left, a navigation menu lists: Application, Belt 1-2, Belt 3-4, Stopper 1, Stopper 2 (highlighted with a '2'), Stopper 3, and Shunt. The main area features a 3D model of the stopper assembly with components labeled BG51, BG52, BG53, BG54, MB50, and TF81. Below the model is an 'RFID Data' table with 'MES Mode' and 'Default Mode' sections. The 'MES Mode' section shows 'tag present' as 'ready'. The 'Default Mode' section shows parameters for Par. 1, 2, 3, and 4, all set to '+0'.

RFID Data	
init	Carrier ID: 9
read	Carrier ID: 9
	ONo: +1396
	OPos: +8
write	State Code 0
	Default Mode
Delete data	Par. 1: +0
	Par. 2: +0
	Par. 3: +0

Setup – Stopper 2



Position number	description
1	Shut down stopper down: Move stopper downwards (actuator W_MB50 is activated, lights up blue when active) W1_BG50: Sensor G1_BG50 stopper down (lit green when active) Stopper: display stopper
2	Area RFID MES Mode: Display of order data Default Mode: Display of the RFID state
3	Describe and read the RFID area initialize: set RFID data to zero read: Read out RFID data write: write current data on RFID Delete data: all data in the input mask is deleted - not directly on the RFID (for easier entry)
4	Area Display of the active sensors (lit green when active) and actuators (lit orange if active) on the stopper
5	Display of the RFID read status

### Setup - Stopper 3

1. Click the Setup mode button
2. Select stopper - the functions of the stopper position are displayed and / or controlled here.

The screenshot shows the 'Setup - Stopper 3' configuration interface. On the left, a navigation menu lists various components: Application, Belt 1-2, Belt 3-4, Stopper 1, Stopper 2, Stopper 3 (highlighted with a '2'), and Shunt. The main area displays the following information:

lower (W1_MB40)	W1_BG40	Stopper
00000ms	291	

Handshake Signale Robotino: Sender **GF35** Receiver **KG35**

Below the table is a 3D model of the stopper assembly with labels: BG45, MB40, BG41, and BG40. The 'Stopper 3' menu item is highlighted with a '2'.

**FESTO**  
CP Factory  
Branch Module  
Camera

## Setup - Stopper 3

Setup mode 29/04/2021  
MES Mode 10:56:39

Home Setup mode

Parameters System

lower (W1_MB40)	W1_BG40	Stopper
00175ms	292	

Handshake Signale Robotino:

Sender	Receiver
GF35	KG35

1 → Application

2 → Belt 1-2

2 → Belt 3-4

→ Stopper 1

→ Stopper 2

→ Stopper 3

3 → Shunt

Position number	description
1	Shut down stopper down: Move stopper downwards (actuator W1_MB40 is activated, lights up blue when active) W1_BG40: Sensor W1_BG40 stopper down (lit green when active) Stopper: display stopper
2	Handshake to robotino Sender: lights up green if active Receiver: lights up green if active
3	Area Display of the active sensors (lit green when active) and actuators (lit orange if active) on the stopper

### Setup - Shunt

1. Click the Setup mode button
2. Select stopper - the functions of the stopper position are displayed and / or controlled here.

**FESTO**  
CP Factory  
Branch Module  
Camera

## Setup - Shunt

Setup mode 29/04/2021  
MES Mode ■ 10:56:49

1

Home 
Setup mode 
Parameters 
System

straight <small>(W1_MB30)</small>	W1_BG30	Branch
00000ms	1067	00000ms

2

- Application
- Belt 1-2
- Belt 3-4
- Stopper 1
- Stopper 2
- Stopper 3
- Shunt

**FESTO**  
CP Factory  
Branch Module  
Camera

## Setup - Shunt

Setup mode 29/04/2021  
MES Mode ■ 10:57:03

Home

Setup mode

Parameters

System

straight <small>(W1_MB30)</small>	W1_BG30	Branch	W1_BG31
00916ms		1068	00000ms

1 → Application

→ Belt 1-2

→ Belt 3-4

→ Stopper 1

→ Stopper 2

2 → Stopper 3

→ Shunt

Position number	description
1	operate branch  straight: set the branch to straight position (Actuator W1_MB30 is activated, lights blue when active) W1_BG30: Sensor W1_BG30 branch is in straight position (lights up green when active) Branch: Display branch W1_BG31: Sensor W1_BG31 set bypass to open position (lit green when active)
2	Area Display of the active sensors (lit green when active) and actuators (lit orange if active) on the stopper

### Set up application parameters

1. Click on the Parameter button
2. Select application - the parameters of the application can now be set up here.

**FESTO**  
CP Factory  
Branch Module  
Camera

Parameters - Application

Automatic 29/04/2021  
MES Mode 11:00:02

Home Setup mode Parameters System

2 → Application  
→ Transitions 1  
→ Transitions 2  
→ Conveyor 1  
→ Conveyor 2

1

Activation  
Activate application


Working position  
Without application

Mode Simulate application ▾


Acknowledge end of process

Return value of application 10

Time for application processing (s): 5.000

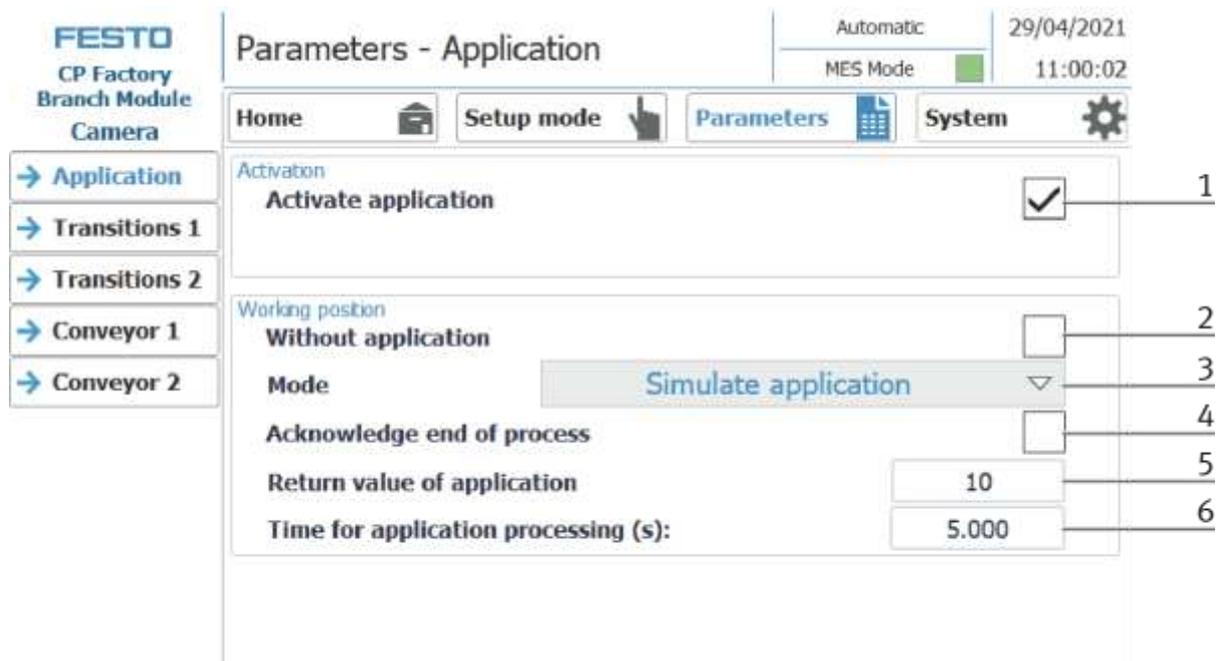

Position number	description
1	Here the application module can be activated (tick set). If no application module is activated, the carrier is stopped at the stopper and released again without processing.
2	Here you can specify whether the station should be operated without an application module. If a check is placed here, the application module is not used. In this case there are two options, operator guidance or a simulation of the application.  This function is helpful if the application module is not available, but the function is to be integrated into a process. See chapter operator assistance and process simulation on a free AP
3	Here it can be determined in simulation mode whether a operator assistance or the application module should be simulated. See chapter operator assistance and simulate application on free AP
4	If the processing end is to be confirmed, a check mark must be set here. The process is only continued if this has been confirmed at the HMI, otherwise the process is automatically continued after the end of processing.
5	The desired return value can be entered here
6	Here you can enter the time required for the simulation.

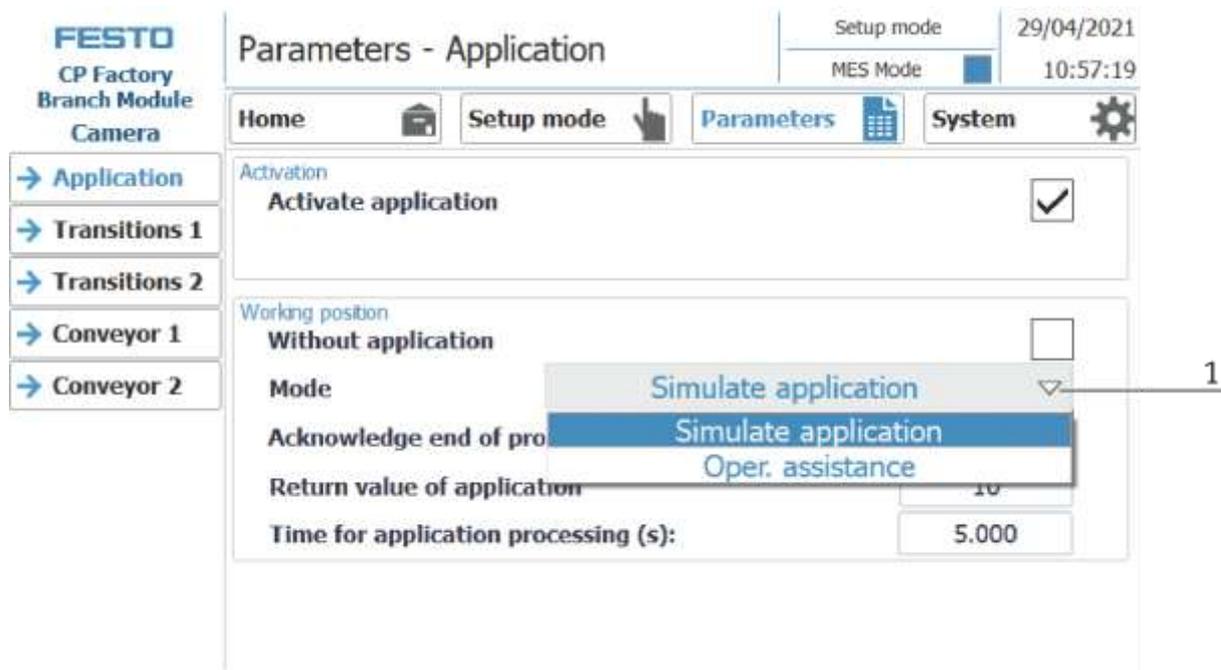

3. Choice between  
 Simulate application - no application is activated, an automatic process is simulated. The processing time for the simulation can be specified in this window.

and worker guidance. (See chapter worker guidance)

### I/O Test

Home - IO test

Setup mode 29/04/2021  
MES Mode 10:53:23

Home Setup mode Parameters System

Camera

Operat. mode  
Overview  
User  
IO Test  
Process

Eingänge						Ausgänge					
0	1	2	3	4	5	0	1	2	3	4	5
0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
0.1	0.1	0.1	0.1	0.1	0.1	0.1	0.1	0.1	0.1	0.1	0.1
0.2	0.2	0.2	0.2	0.2	0.2	0.2	0.2	0.2	0.2	0.2	0.2
0.3	0.3	0.3	0.3	0.3	0.3	0.3	0.3	0.3	0.3	0.3	0.3
0.4	0.4	0.4	0.4	0.4	0.4	0.4	0.4	0.4	0.4	0.4	0.4
0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5
0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6
0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7

IW6 1 IW10 32767  
IW8 2 IW12 32767

Enable Outputs  
CAUTION  
Program return of OB1  
No cyclic program call

Position number	Description
1	Setup mode must be active
2	Choose Home
3	Choose I/O Test
4	By clicking in this area, the outputs are enabled and can be activated. A login as "Administrator" is required.

**FESTO**  
CP Factory  
Branch Module  
Camera

Home - IO test

Setup mode 29/04/2021  
MES Mode 10:53:42

Home Setup mode Parameters System

→ Operat. mode  
→ Overview  
→ User  
→ IO Test  
→ Process

Eingänge						Ausgänge					
			Byte						Byte		
0	1	2	3	4	5	0	1	2	3	4	5
0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
0.1	0.1	0.1	0.1	0.1	0.1	0.1	0.1	0.1	0.1	0.1	0.1
0.2	0.2	0.2	0.2	0.2	0.2	0.2	0.2	0.2	0.2	0.2	0.2
0.3	0.3	0.3	0.3	0.3	0.3	0.3	0.3	0.3	0.3	0.3	0.3
0.4	0.4	0.4	0.4	0.4	0.4	0.4	0.4	0.4	0.4	0.4	0.4
0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5
0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6
0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7

IW6 1 IW10 32767  
IW8 2 IW12 32767


QWc 13589 IW8

Enable Outputs  
CAUTION  
Program return of OB1  
No cyclic program call

1  
2  
3

Position number	Description
1	By clicking in a field, this digital output is activated (orange if active)
2	By clicking again in this field, the outputs are blocked again
3	These controllers can be used to set values for the analog outputs (blue when active, the value is displayed above the controller).

### Exit operation mode setup

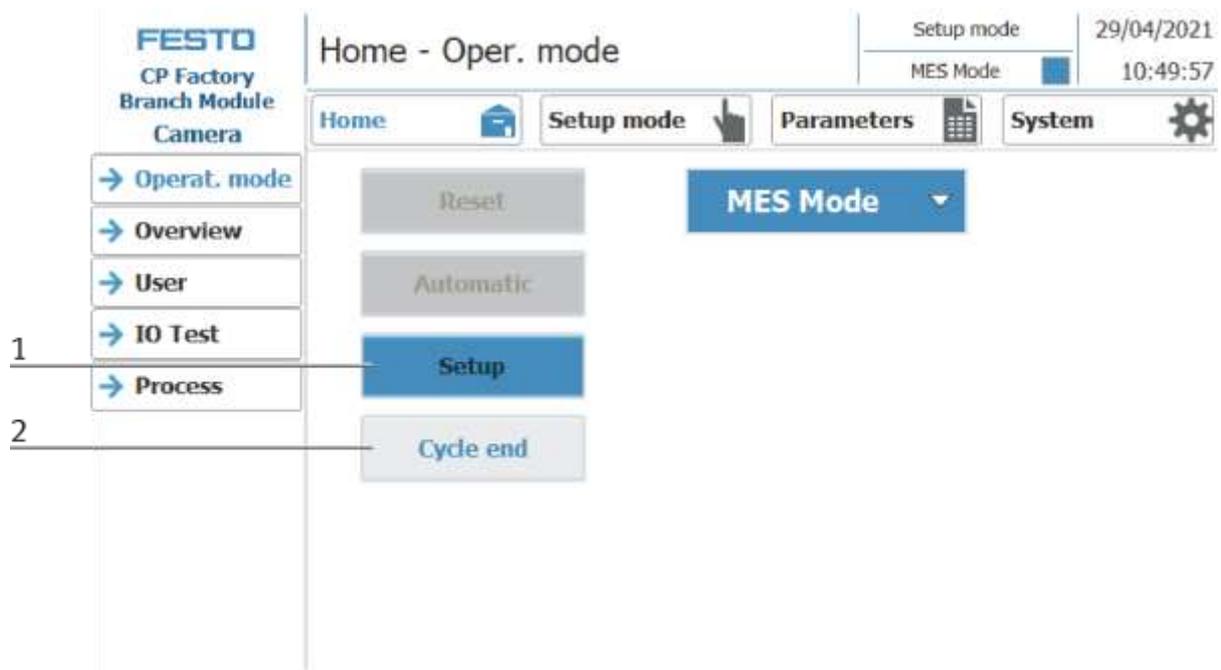

1. Setup mode is active, button lights up blue
2. Press the cycle end button to end the operation mode setup.

### 8.5.4 Operation mode automatic

In automatic mode, the chosen automatic processes can be processed at the station. Depending on the selection of the mode, the processes are controlled via the transition tables (default) or via MES.




2. Automatic button flashing blue – Press Button to activate operation mode automatic



3. Operation mode automatic is active, button lights up blue

4. Announcement of active operation mode automatic

### 8.5.5 Main menu - Home Sub menu operation mode

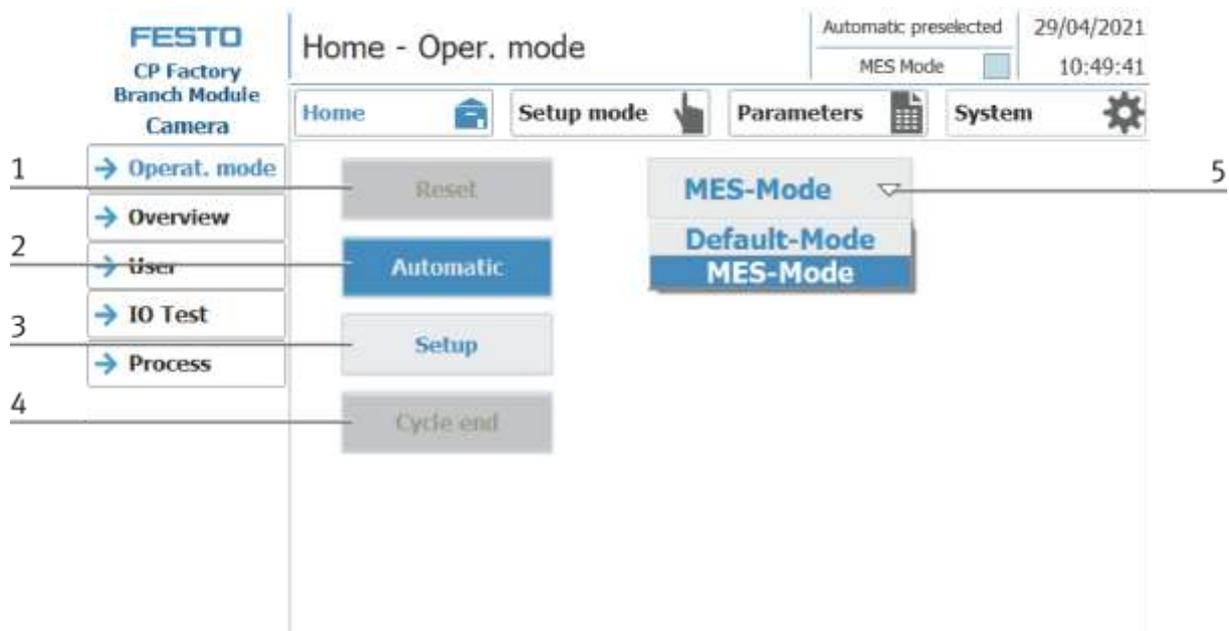


In the operation mode Home, the operating mode and the mode (MES or default) can be selected and started.

Position	Description
1	Reset button: Start reset sequence
2	Automatic button: the automatic sequence in dependent from the mode (Default/MES) is started here
3	Setup button: Here the application module can be controlled manually and sensors can be displayed. Suitable for commissioning an application module or for troubleshooting. There is no difference in mode - setup mode is independent of default or MES mode.
4	Cycle end button: The currently active operating mode is stopped here.
5	Selection of the mode: Default - automatic sequence is processed with the stored transitions MES - automatic process is completely controlled by MES software

**Submenu overview**

Various states are displayed in the operation mode home on the Overview page.  
 (changing content depending on the selected operating mode)

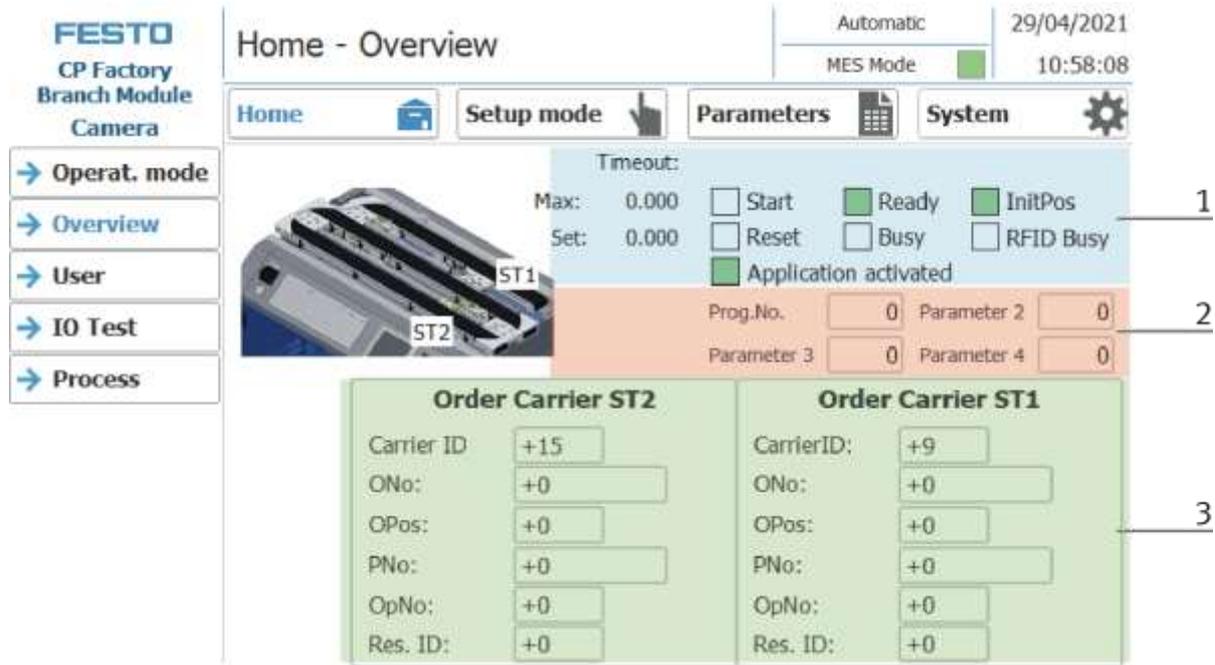

Position	Description
1	Display of various information about the station (marked green if active)
2	Display of parameters
3	Display of the order data of the current carrier

**FESTO**  
CP Factory  
Branch Module  
Camera

Conveyor Stop by Sensor / Energy-Mode: conveyor belt instance Drive1 is stopped!

Automatic 29/04/2021  
MES Mode ■ 11:00:49

Home Setup mode Parameters System

Time	Date	Status	Text
09:29:13	22/02/2021	K	Conveyor Stop by Sensor / Energy-Mode: conveyor belt instance Drive1 is stopped!

→ Application  
→ Transitions 1  
→ Transitions 2  
→ Conveyor 1  
→ Conveyor 2

Error messages are also displayed in the overview window.

**Sub menu user**

Different users can be created here. The function is independent of the selected mode (MES - or default)

The screenshot shows the 'User dialog' screen in the FESTO CP Factory Branch Module Camera interface. The top navigation bar includes 'Home', 'Setup mode', 'Parameters', and 'System' buttons. The sidebar on the left contains menu items: 'Operat. mode', 'Overview', 'User', 'IO Test', and 'Process'. The main content area displays a table of users with columns for 'User', 'Password', 'Group', and 'Logoff time'.

User	Password	Group	Logoff time
Administrator	*****	Bedienen	5
festo	*****	Bedienen	5
PLC User	*****		5

Display / editing of all users, a login as "Administrator" is required.

**Sub menu I/O Test**

The inputs / outputs are displayed here. The outputs can also be activated in setup mode.

**Home - IO test**      Automatic mode      29/04/2021  
MES Mode ■      10:53:42

Home    Setup mode    Parameters    System

→ Operat. mode  
→ Overview  
→ User  
→ IO Test  
→ Process

Eingänge						Ausgänge					
Byte						Byte					
0	1	2	3	4	5	0	1	2	3	4	5
0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
0.1	0.1	0.1	0.1	0.1	0.1	0.1	0.1	0.1	0.1	0.1	0.1
0.2	0.2	0.2	0.2	0.2	0.2	0.2	0.2	0.2	0.2	0.2	0.2
0.3	0.3	0.3	0.3	0.3	0.3	0.3	0.3	0.3	0.3	0.3	0.3
0.4	0.4	0.4	0.4	0.4	0.4	0.4	0.4	0.4	0.4	0.4	0.4
0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5
0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6
0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7
IW6	1	IW10	32767								
IW8	2	IW12	32767								

**Enable Outputs  
CAUTION  
Program return  
of OB1  
No cyclic  
program  
call**

**Sub menu process**

Here the process from the application module (if available) is announced.

**Home - Process**      Automatic mode      29/04/2021  
MES Mode ■      09:23:02

Home    Setup mode    Parameters    System

→ Operat. mode  
→ Overview  
→ User  
→ IO Test  
→ Process

SBO...Q WebViewer

Type/Orient.:	I/I	
Serialnr.:	202.0 (part)	
Acq. Tolerance:	0	
Part Number:	I	
Program:	41-4_Bahn Flans	
FrontFace:	2775	100%
BackFace:	2693	100%
TopPressure:	608	100%

**8.5.6 Main menu - Setup**

See chapter operation mode setup.

**8.5.7 Main menu – Parameter**

**Submenu application**

See chapter operation mode setup.

**Sub menu transitions 1**

**FESTO**  
CP Factory  
Branch Module  
Camera

Parameters - Transitions Appl.

Automatic 29/04/2021  
Default Mode ■ 10:58:45

Home

Setup mode

Parameters

System

→ Application

→ Transitions 1

→ Transitions 2

→ Conveyor 1

→ Conveyor 2

No.	Start condition	Application execute	Parameter				End condition	
			Prog.No.	Parameter 2	Parameter 3	Parameter 4	OK	NOK
Init	none	<input type="checkbox"/>	0	0	0	0	1	0
1	1	<input checked="" type="checkbox"/>	1	1	0	0	2	0
2	2	<input checked="" type="checkbox"/>	2	2	0	0	3	0
3	3	<input checked="" type="checkbox"/>	3	3	0	0	1	0
4	0	<input type="checkbox"/>	0	0	0	0	0	0
5	0	<input type="checkbox"/>	0	0	0	0	0	0
6	0	<input type="checkbox"/>	0	0	0	0	0	0
7	0	<input type="checkbox"/>	0	0	0	0	0	0
8	0	<input type="checkbox"/>	0	0	0	0	0	0
9	0	<input type="checkbox"/>	0	0	0	0	0	0
10	0	<input type="checkbox"/>	0	0	0	0	0	0

If the sub menu transitions is selected, the transitions of the installed application module are displayed. The transitions of all other application modules can be found in the associated manuals for the application modules.

Sub menu transitions 2

**FESTO**  
CP Factory  
Branch Module  
Camera

Parameters - Transitions branch

Automatic | 29/04/2021  
Default Mode ■ | 10:59:35

Home 

Setup mode 

Parameters 

System 

→ Application

→ Transitions 1

→ Transitions 2

→ Conveyor 1

→ Conveyor 2

No.	Condition for switching from condition number to condition number		End condition
Init	none		0
1	10	20	
2	0	0	
3	0	0	
4	0	0	
5	0	0	
6	0	0	
7	0	0	
8	0	0	
9	0	0	
10	0	0	

Here the transitions for the branch are announced.

Sub menu conveyor 1

Position number	description
1	Stop belt before start application: the belt is stopped before the application begins to start
2	Belt Start / Stop by sensors: Hook set when the belt should be switched automatically with the sensors. Switch on when Sensor at belt beginning signals a carrier, switch off when the sensor at the end of the belt signals the carrier passing by
3	Belt energy saving mode with sensors: If no workpiece is detected on the belt via the sensors, the belt is switched off
4	Reduce belt speed: Here the belt speed is reduced to save energy
5	Stopper: Check the jam at the belt outlet: The carrier is only released from the stopper if the belt is not occupied at the belt outlet.
6	Stopper 1: Switch stopper without MES connection Function active MES in – workpiece carriers run through / MES out - workpiece carriers run through constantly Function not active MES in - workpiece carriers run continuously / MES out - workpiece carriers stop

**FESTO**  
CP Factory  
Branch Module  
Camera

Conveyor Stop by Sensor / Energy-Mode: conveyor belt instance Drive1 is stopped!

Automatic 29/04/2021  
MES Mode ■ 11:00:49

Home

Setup mode

Parameters

System

→ Application

→ Transitions 1

→ Transitions 2

→ Conveyor 1

→ Conveyor 2

Transport, Energy

**Stop belt 1 before start application**

**Belt 1 start/stop by sensors**

**Belt 1 energy saving by sensors**

**Reduce belt speed**

Stopper

**Stopper 1: check traffic jam after stopper**

**Stopper 1&2: Switch stopper without MES connection**

If the belt energy saving by sensors function is activated and the belts stop when there are no workpiece carriers on the belt, this is displayed in the upper message window.

Sub menu conveyor 2

Position number	description
1	Belt 2 Start / Stop by sensors: Hook set when the belt should be switched automatically with the sensors. Switch on when Sensor at belt beginning signals a carrier, switch off when the sensor at the end of the belt signals the carrier passing by
2	Belt 2 energy saving mode with sensors: If no workpiece is detected on the belt via the sensors, the belt is switched off
3	Reduce belt speed: Here the belt speed is reduced to save energy
4	Stopper 2: Check the jam at the belt outlet: The carrier is only released from the stopper if the belt is not occupied at the belt outlet.
5	Choose where a carrier without order has to flow. (See next screen)
6	Option docking with robotino activated: If a robotino is to pick up / deliver the carrier at the branch, this option must be activated with a hock.

Sub menu conveyor 2

**FESTO**  
CP Factory  
Branch Module  
Camera

Parameters - Conveyor 2

Automatic 29/04/2021  
MES Mode 11:01:58

Home Setup mode Parameters System

→ Application  
→ Transitions 1  
→ Transitions 2  
→ Conveyor 1  
→ Conveyor 2

Transport, Energy

Belt 2 start/stop by sensors

Belt 2 energy saving by sensors

Reduce belt speed

Stopper

Stopper 2: check traffic jam after stopper


Behavior of shunt for carrier without order: 0% branch off ▾

Option docking with robotino activated: 0% branch off (highlighted)  
50% branch off  
100% branch off


This setting can be used to ensure that "empty" carriers pass behind the branch. For example, if there is a AS/RS from where products are released

- At 0% branch off, all carriers without order automatically go straight over the branch.
- at 50%, every second carrier without an order bends at the branch
- at 100%, each carrier bends without an order

**8.5.8 Main menu – System**  
**Sub menu - Settings**

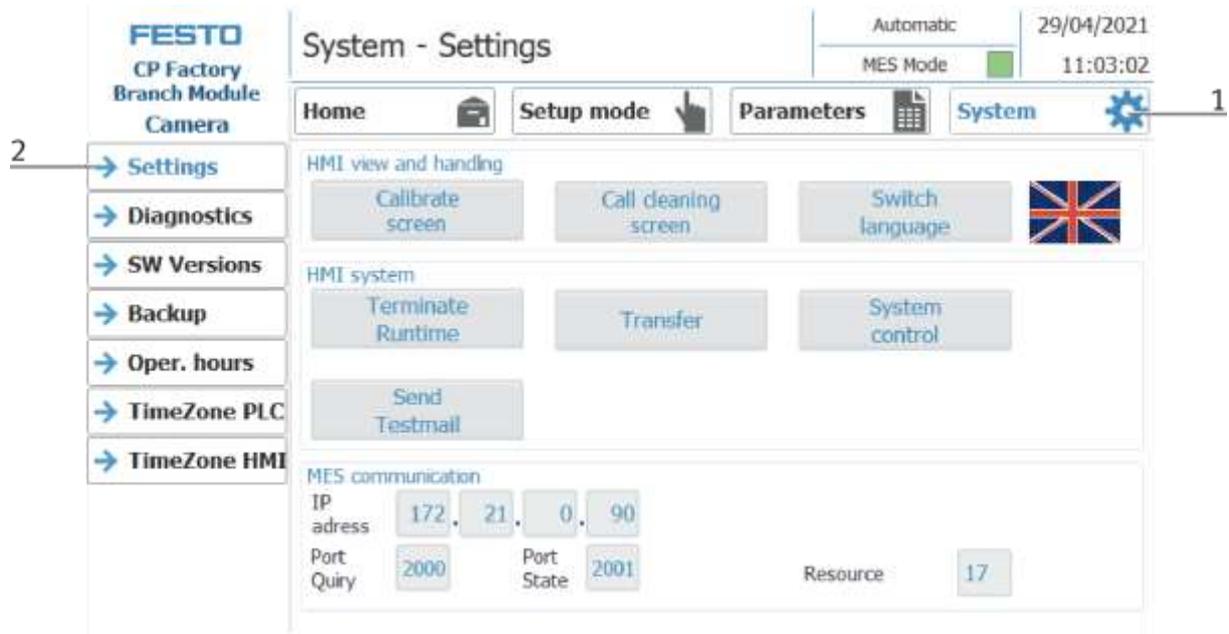


1. To get to the system settings, the System button must be selected
2. Click on Settings

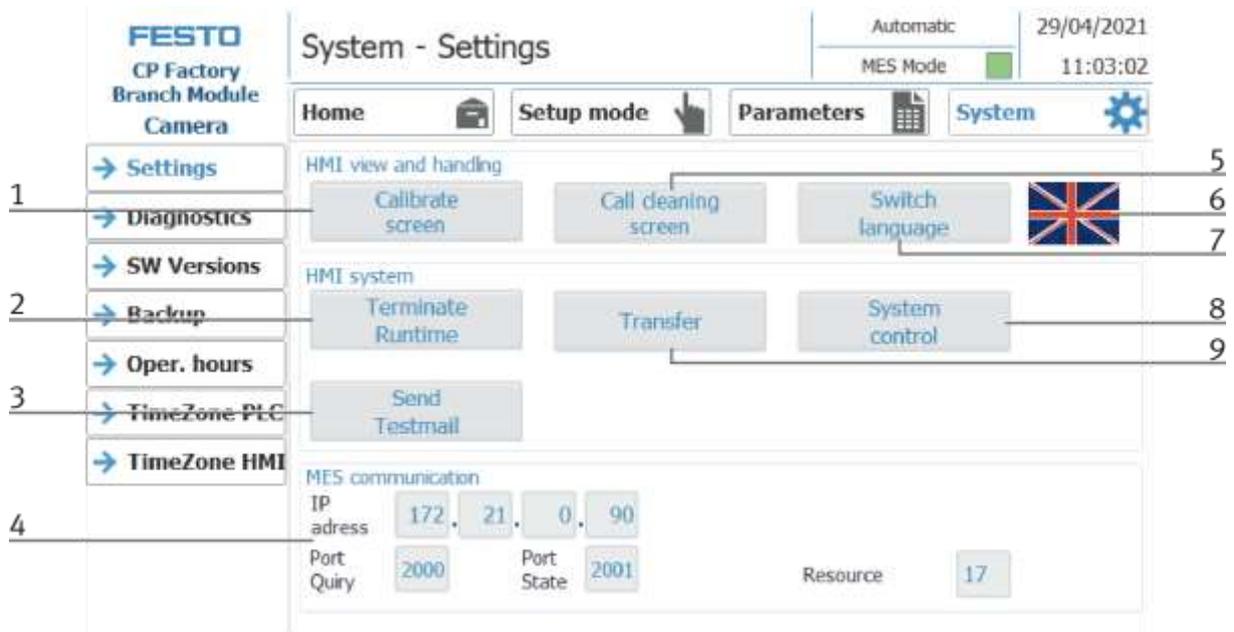

The system can be set in this operating mode.

Position number	Description
1	Button Calibrate Screen - If buttons react inaccurately, calibration of the touch screen can be restored
2	Button Terminate Runtime: The runtime is terminated and returned to Windows.
3	Button send test mail – send test mail to eMailserver (all error messages are sent from the hmi to a eMailserver on the MES4 PC – this function is to test if the configuration is ok.)
4	Display of the MES IP address additionally the IP of the MES can be set here. (Password protected) User: festo, PW: festo) Input fields for your own resource number, query port and status port of the MES connection
5	Button call cleaning screen - the screen can be cleaned here. The touch function is interrupted and unintentional operation is excluded
6	Flag displays only current language. By clicking on button next to the flag language can be switched
7	Button switch language: here the language can be changed
8	Button system control: Windows system control is opened
9	Button Transfer: Runtime is closed and the transfer mode of the HMI is called

Sub menu diagnostics

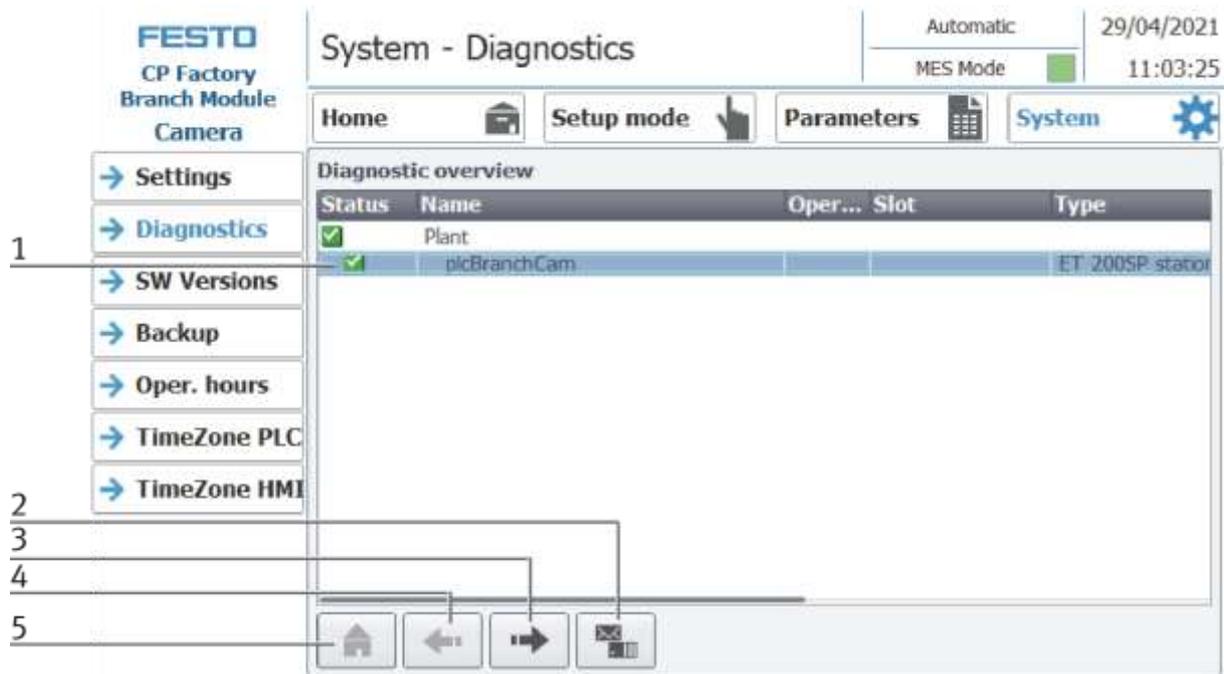

Position number	Description
1	Announcement overview plant
2	Send diagnostic message via mail
3	Next diagnostic message
4	Previous diagnostic message
5	Home Button

### Sub menu software versions

**FESTO**  
CP Factory  
Branch Module  
Camera

System - Version

Automatic 29/04/2021  
MES Mode ■ 11:03:44

Home Setup mode Parameters System

→ Settings  
→ Diagnostics  
→ SW Versions  
→ Backup  
→ Oper. hours  
→ TimeZone PLC  
→ TimeZone HMI

**actual library version:**  
V4.00


Display of the current library version.

Sub menu Backup



Position number	Description
1	Save parameters button: all parameters are saved, for this it is necessary to press the button for at least 2 seconds. The display shows the date of the last storage.
2	Restore parameters button: all parameters are loaded, for this it is necessary to press the button for at least 2 seconds The display shows the date on which the parameters were last loaded.

### Submenu operating hours counter

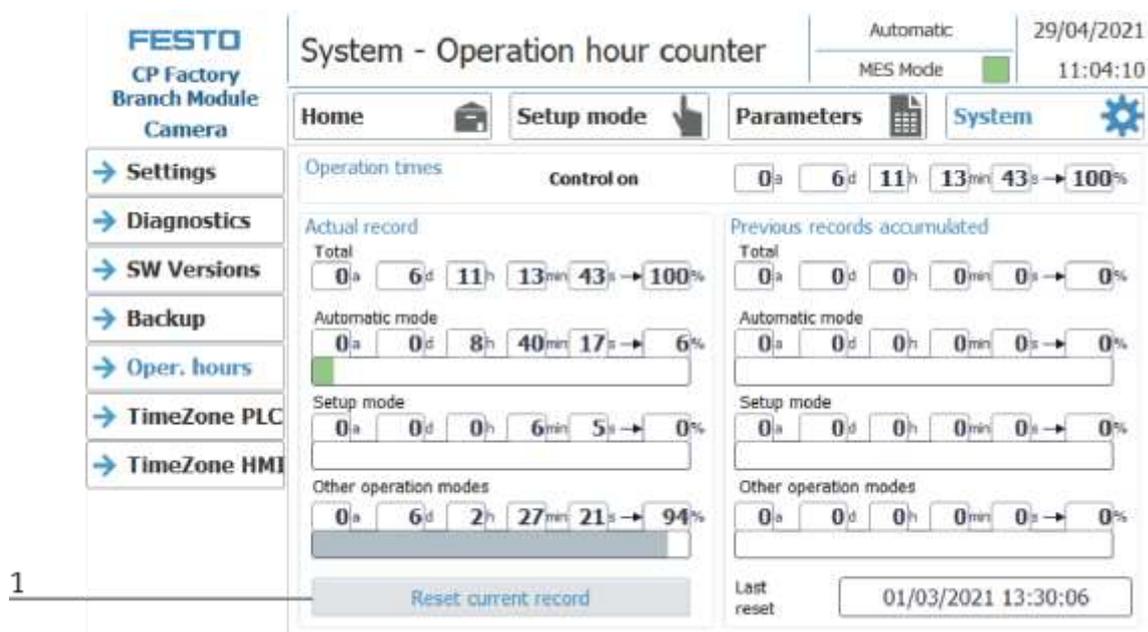

Display of the operating times with allocation to the respective operating mode.


In the "Operation times" area, the time since the control was switched on is counted.

In the "Actual record" area, the time until the next time the "Reset current record" button is pressed is counted. The times are divided into the categories "Total", "Automatic mode", Setup mode and "Other operating modes". The times are counted under the heading "Other operating modes" while the station is in the operating mode "Automatic preselection", "Setup" and "No operating mode". The value in the "Total" line represents the total of the operating times differentiated according to the operating mode. The percentage refers to the proportion of the operating mode in the total time.

With the button (1) "Reset current record", the current recording is set to 0 and the operating times contained therein are added to the "Previous recordings accumulated" area. The current recording can thus be used, for example, for daily recordings.

All counter values are saved in a retentive data block. These are lost when the controller is booted. If they are to be retained, the values must be saved beforehand.


Time zone submenu in the PLC

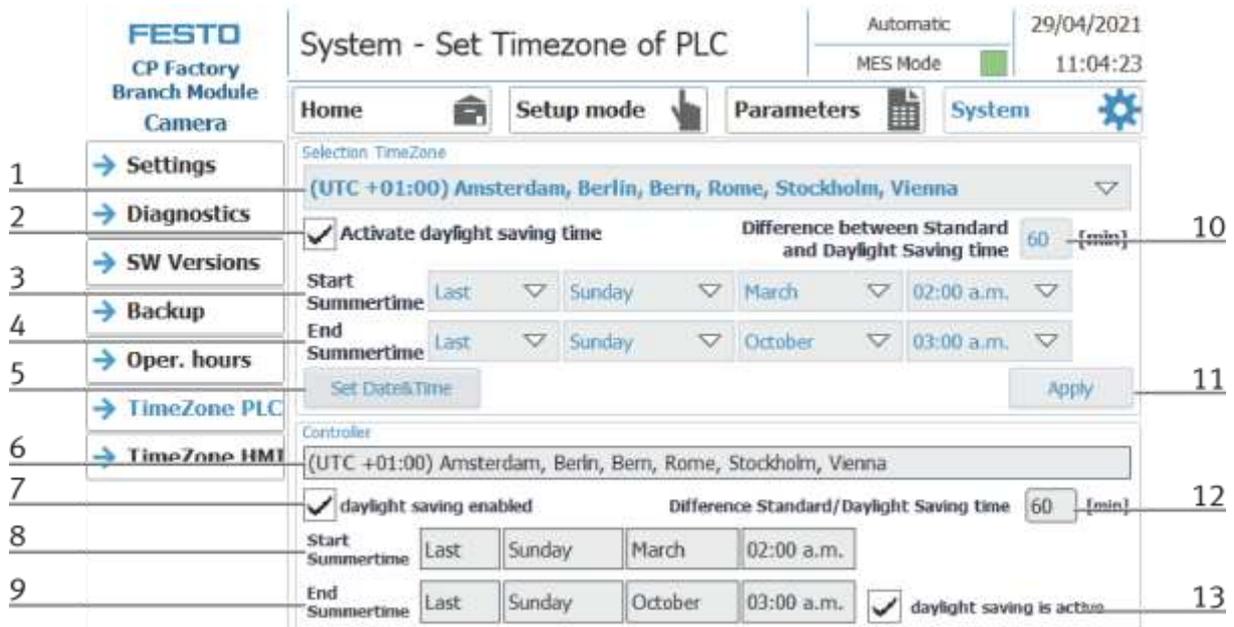

The time and time zone of the PLC can be set in this menu. The default settings of the PLC are overwritten when you click the "Apply" button.

Position number	Description
1	Select TimeZone
2	Checkmark set - the daylight saving time changeover is automatically changed at the times "Beginning of daylight saving time" and "End of daylight saving time" Checkmark not set - there is no daylight saving time changeover
3	Setting the start of daylight saving time
4	Setting the end of summer time
5	Set time & date: When this button is pressed, a pop-up window opens for setting the time of the PLC
6	Display of the current time zone of the controller <i>(Only valid if the time zone of the PLC has been set once using the "Apply" button)</i>
7	Display of whether daylight saving time changeover is active in the PLC. <i>(Only valid if the time zone of the PLC has been set once using the "Apply" button)</i>
8	Display of the current start of daylight saving time in the control <i>(Only valid if the time zone of the PLC has been set once using the "Apply" button)</i>
9	Display of the current end of daylight saving time in the control <i>(Only valid if the time zone of the PLC has been set once using the "Apply" button)</i>
10	Enter the time difference between summer and winter time in minutes.
11	Accept the selected settings for the time zone and time change by pressing the button.
12	Display of the time difference between summer and winter time in minutes. <i>(Only valid if the time zone of the PLC has been set once using the "Apply" button)</i>
13	Display of whether daylight saving time is currently active. <i>(Only valid if the time zone of the PLC has been set once using the "Apply" button)</i>

**Time zone submenu in the HMI**

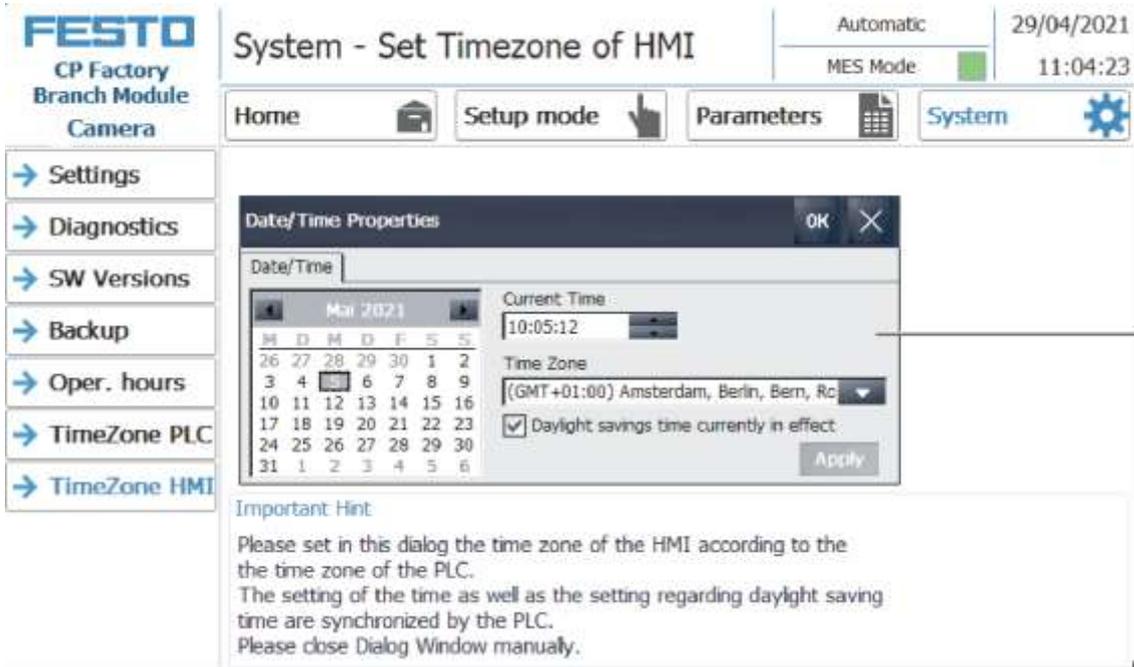

The time and time zone of the HMI can be set in this menu. The default settings of the HMI are overwritten. It is important to set the time zone in the HMI the same as it is set in the PLC, otherwise certain functions will get a different time stamp. (e.g. sending emails)

Position number	Description
1	System pop-up window of the HMI for selecting the time zone. The selected time zone in the Time Zone drop-down field is transferred to the HMI by pressing the "Apply" button. Before exiting the menu item, close the system pop-up window by pressing the X at the top right.

## 8.6 Switching on the station



Illustration similar

1. The station is supplied with voltage.
2. The station is supplied with 6 bar air pressure.
3. All EMERGENCY STOP signal transmitters (pushbuttons, door contacts, light barriers, etc.) are not actuated and unlocked.
4. Turn on the main switch
5. Press the RESET button, the RESET button lights up blue, the HMI starts and starts up.
6. Wait till HMI is ready


### 8.6.1 Start automatic

	 <b>WARNING</b>
	<ul style="list-style-type: none"> <li>• <b>Danger of being pulled in at the conveyors</b> <ul style="list-style-type: none"> <li>– When the automatic mode starts, the belts of the conveyor belts start to move, creating a risk of being pulled in.</li> <li>– When starting, do not stand directly at the ends of the belt or hold on to them, keep enough distance.</li> <li>– Failure to heed the information given can lead to injuries.</li> </ul> </li> </ul>


	 <b>WARNING</b>
	<ul style="list-style-type: none"> <li>• <b>Danger of being squeezed at the branch when switching direction</b> <ul style="list-style-type: none"> <li>– When the branch is switched from one to the other direction, it is possible to squeeze hands.</li> <li>– When starting, do not grip into the branch, keep enough distance.</li> <li>– Failure to heed the information given can lead to injuries.</li> </ul> </li> </ul>

1. Pull out the emergency stop button
2. Press the blue reset button
3. Remove any existing workpieces
4. Acknowledge errors on the HMI by clicking on the error message.


4

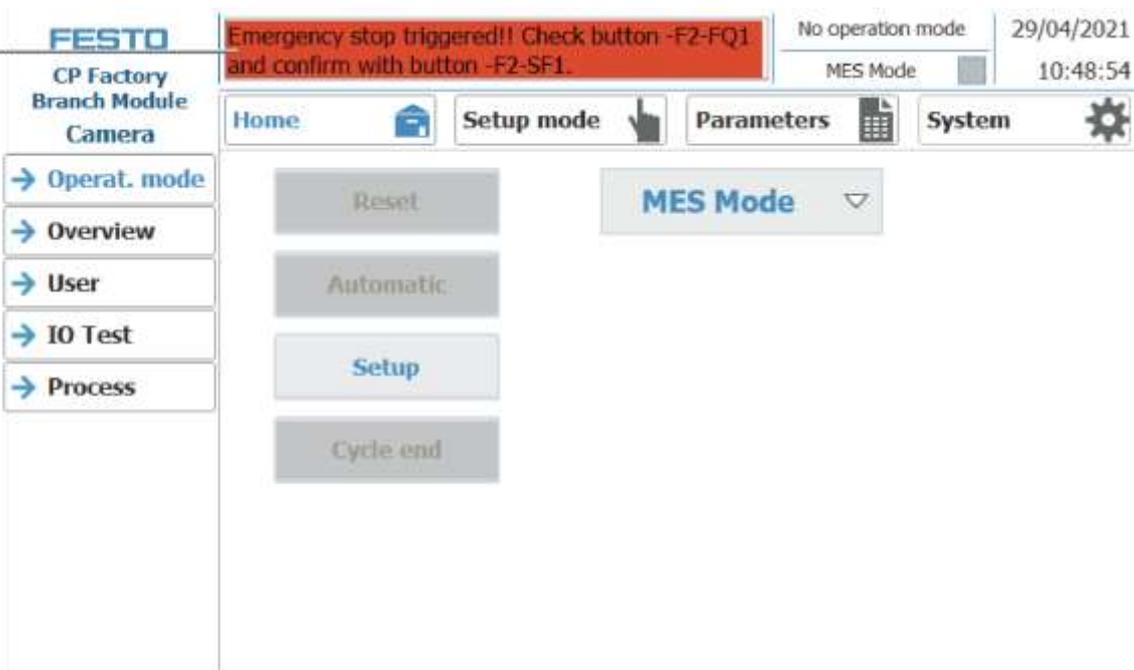

- The error message is displayed in the main window. After the error situation has been remedied, it can be acknowledged by pressing the RESET button.

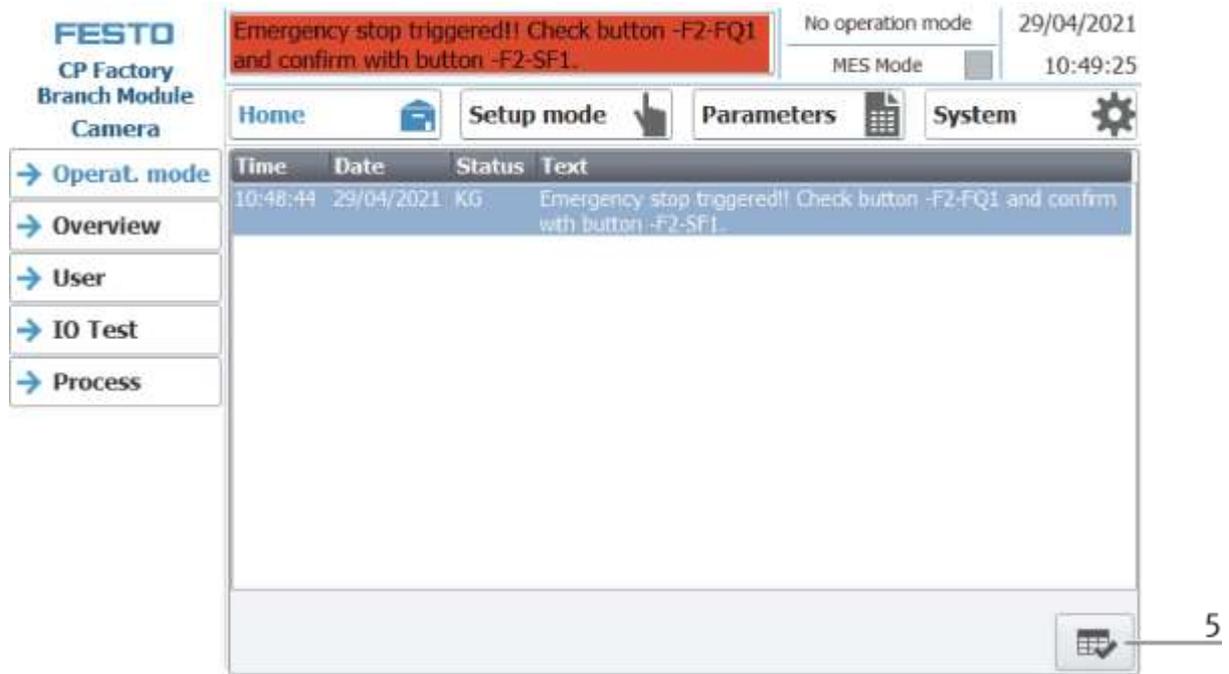

- Press Home Button

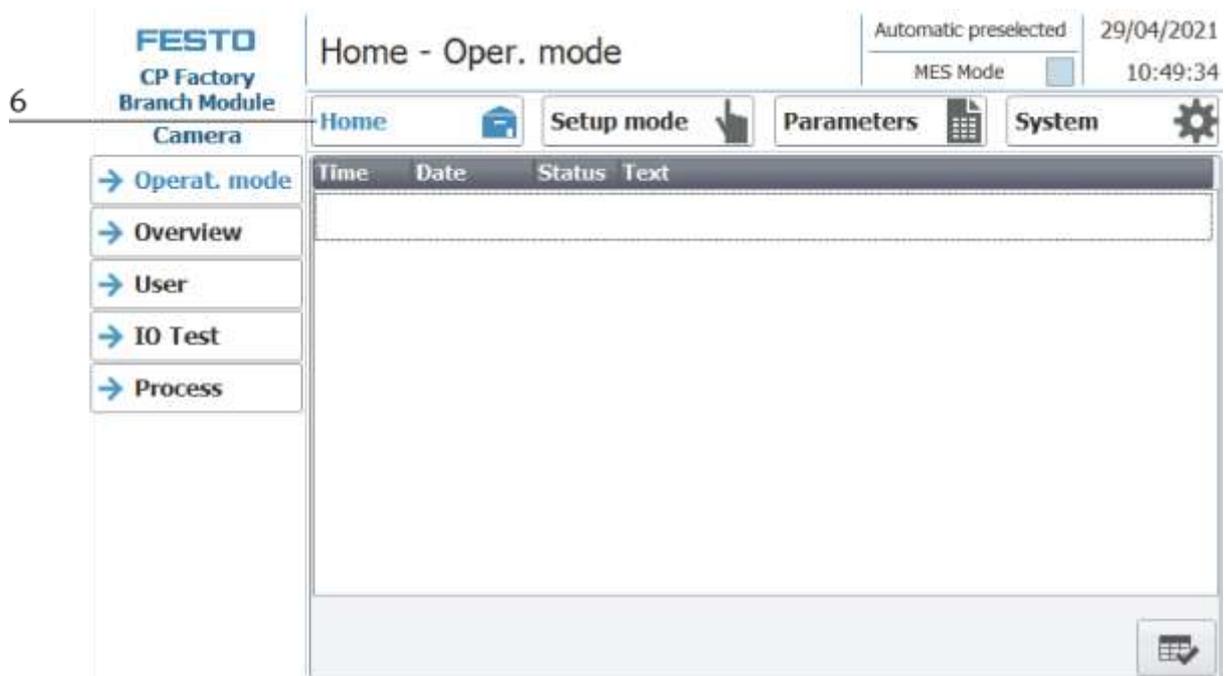


- Press the flashing RESET Button. Station/application moves in home position.



- Press the flashing AUTOMATIC Button



9. AUTOMATIC Button lights up
10. Automatic mode is active

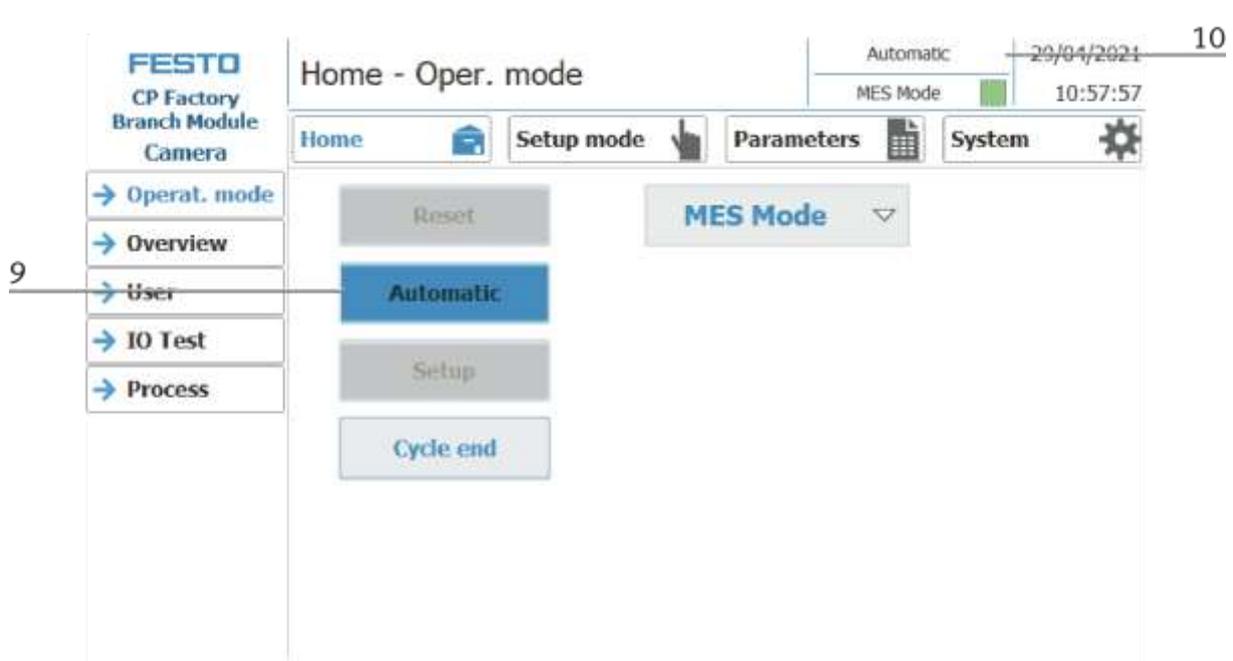


### 8.6.2 Sequence Description Automatic

If the automatic sequence was started,

1. The automatic button lights up blue
2. Stoppers are retracted
3. The workpiece is transported in circulation mode
4. If a carrier moves into the module / application module, this will execute your automatic process. The operation of the module / application module is, however, only started if the operation in MES is intended for this resource and the resource can also carry out this operation.
5. The busy displays become active.
6. During this time, the automatic sequence is executed in the application.
7. The next resource and operation are written to the RFID chip
8. When the module / application module is ready, the display changes back to the original state and the stopper is retracted
9. The carrier moves out of the working position and is available to further modules / application modules.

### 8.6.3 Process description Cycle End


1. An automatic cycle is active.
2. Press the button Cycle End.

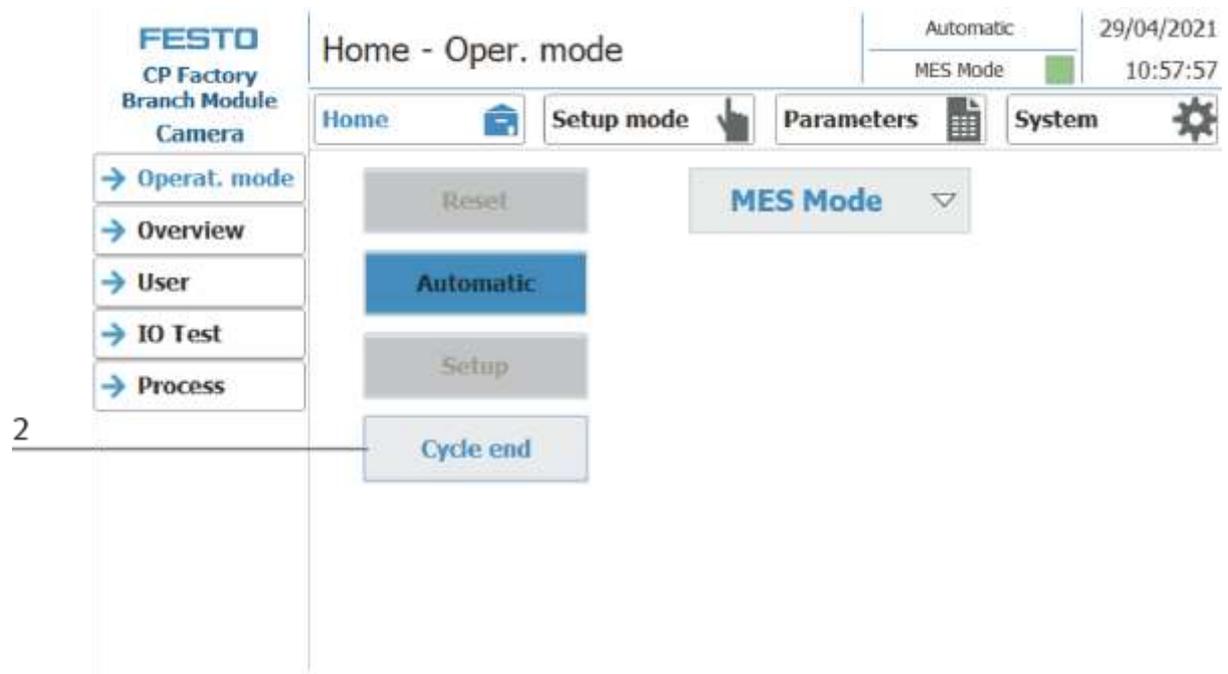

3. The module/application module will execute the run until cycle end. During this time, the button Cycle End has got a red background.
4. The stoppers are extended.
5. The conveyors are stopped.

### 8.7 Operator assistance and simulate application on free AP

The following chapter is valid for all basic modules (Bypass, Linear, branch). It is explained by way of example on the basic module Linear.

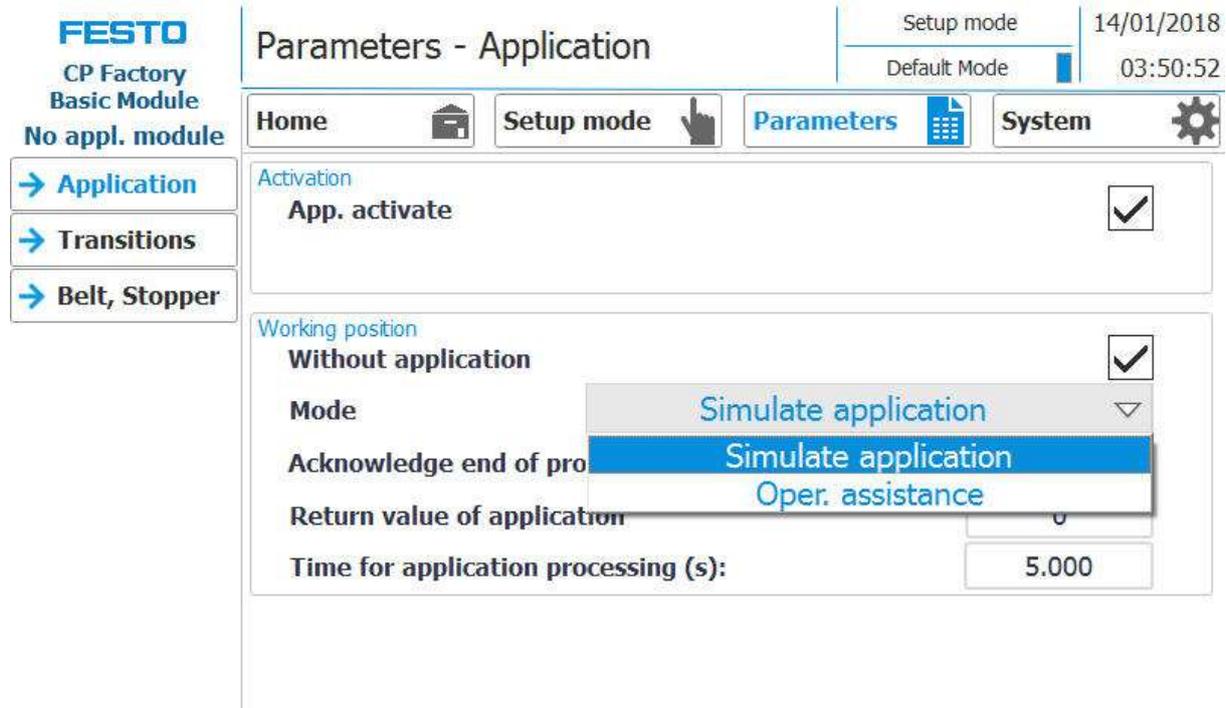

Selection of the mode via the touch panel

Each free application position, which is not equipped with an application module, can provide a simple operator assistance and a simulate application.


Thus every free AP provides the following functions in default mode as well as in MES mode:

1. Generic sequence simulation
2. Operator assistance


The application function is added with a fitted application module

3. Process simulation of the application
4. Operator assistance
5. Application Function

8.7.1 Generic sequence simulation

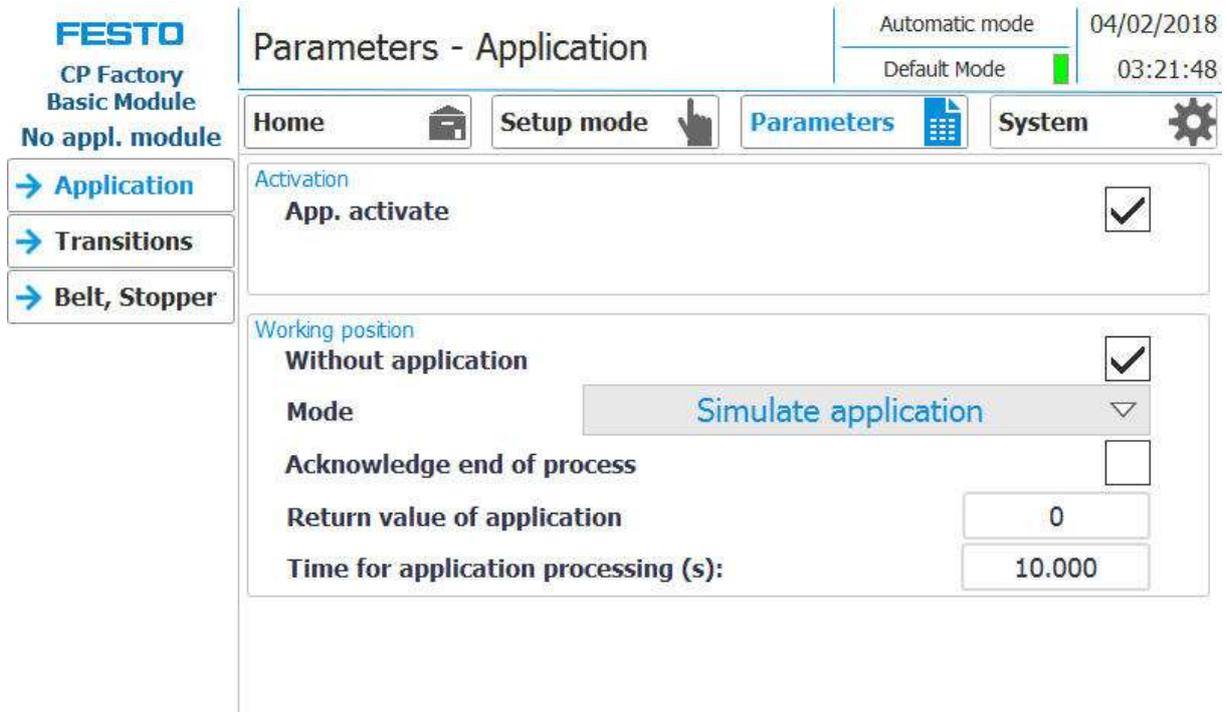


1. If the mode is simulate application and a carrier moves into the application, it is stopped. The application procedure is simulated, this is indicated by the following screen.

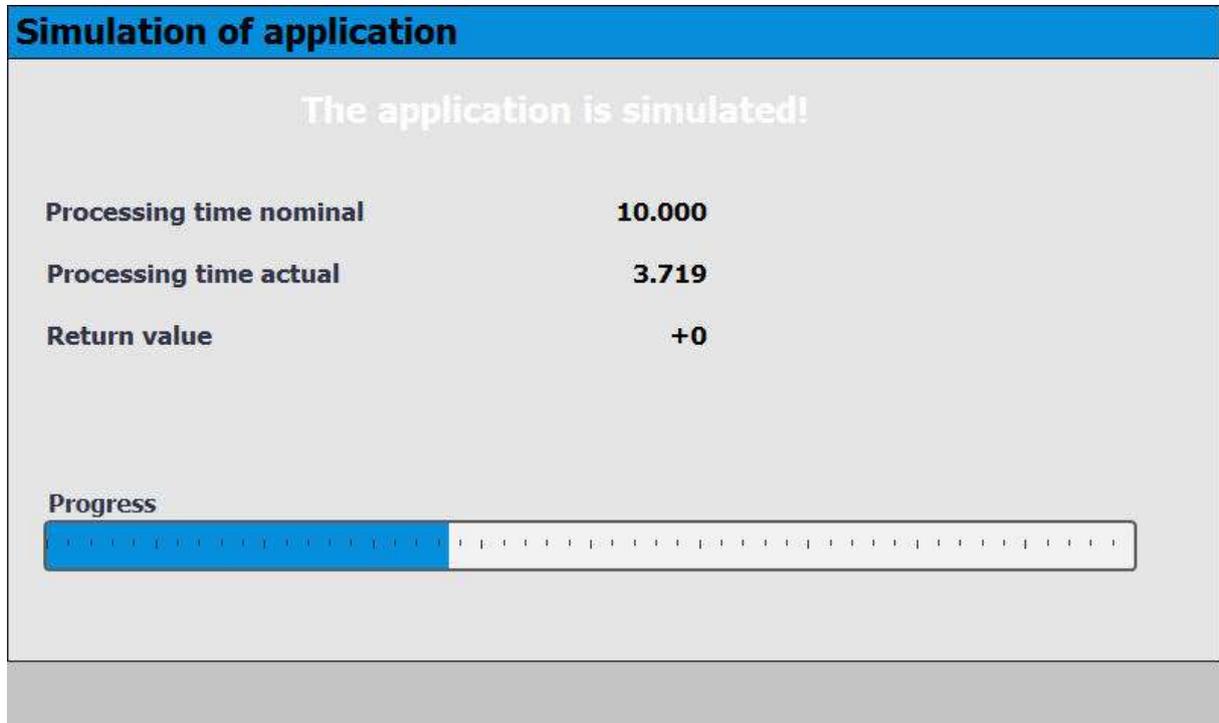

2. The processing time in this case is 10 sec. This can be set in the parameters. The current time is indicated by the bar in progress. At the end of the simulation, the return value is transferred to MES.
3. The carrier is released from the application position.

8.7.2 Operator assistance with display of pictures

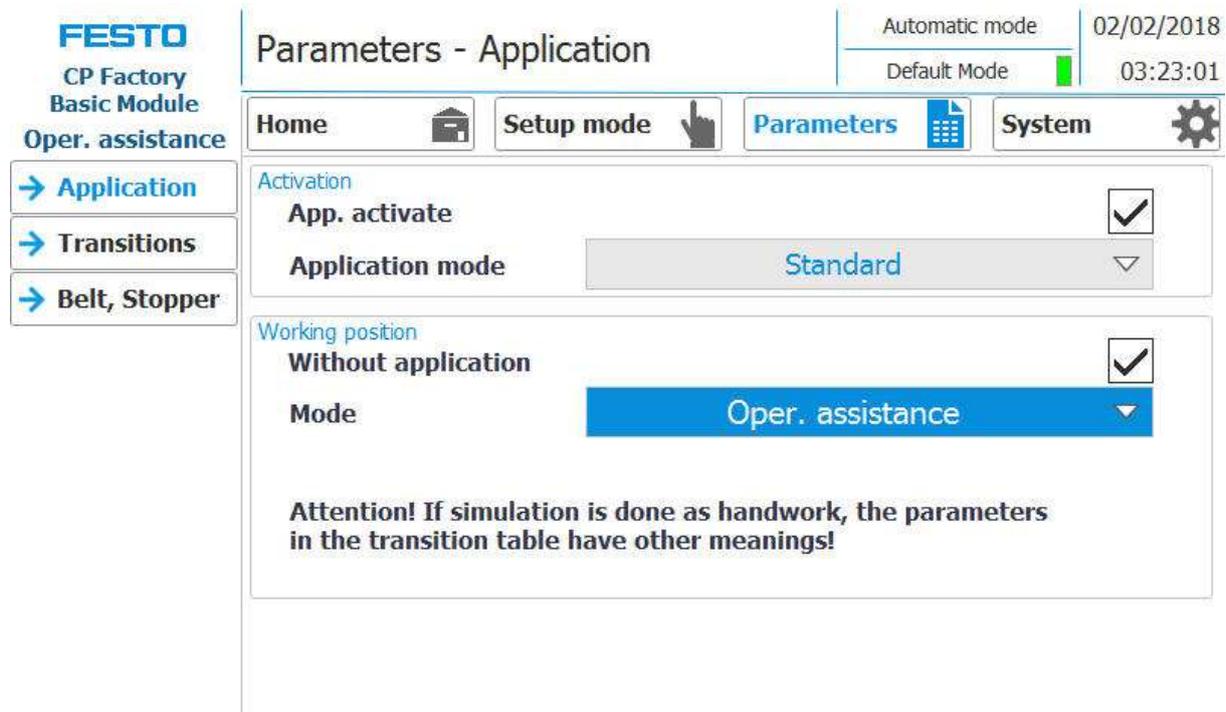

1. If the mode is set to operator assistance (application mode must be set to Standard) and a carrier moves into the application, it will be stopped.
2. The worker now has to complete the specified work task. This is specified in the transition table and consists of the element (parameter 1) and the action (parameter 2).

Parameter 1 / Element		Parameter 2 / Aktion	
0	No element	0	No action
1	Front cover	1	Check
2	Back cover	2	Extract
3	Printed circuit board	3	Assemble
4	Front fuse (in direction of transport)	4	Insert
5	Rear fuse (in direction of transport)	5	Apply
6	Both fuses	6	Rework
7	Workpiece	7	Reserve_7
8	Reserve_8	8	Reserve_8
9	Reserve_9	9	Reserve_9
10	Reserve_10	10	Reserve_10



**Operator assistance**

**Handwork place:**

Parameter 1 : Element  Parameter 2 : Action

**Back cover**

**Insert**

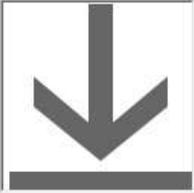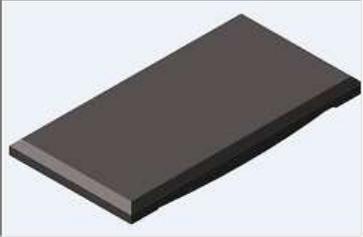

Time required: 2.569

Order / operation step:

3. In this case, element 2 and action 4 are specified in the transitions. The worker must insert a backcover.
4. If the worker has completed the task, he must press the Confirm button to complete the task. The data is transmitted to MES
5. The carrier is released from the application position.

### 8.7.3 Operator assistance with call of htm-page

1. If the mode of the application is set to "operator assistance" (application mode must be set to call of HTML page / only possible in MES mode) and a carrier moves into the application, it will be stopped.
2. The worker now has to complete the specified work task. This is described on a html page, which must be created by the customer. The URL of this page, which must be present on the MES PC, can be specified in the work plan of the MES. This worker guide (depending on the html page content) is started if the OpNo 510 is selected for the AP in the work plan and the URL points to this URL link in the work step



3. In this case, the html page was designed so that a work instruction for mounting the front fuse appears in the worker's guidance.
4. If the worker has completed the task, he must press the Confirm button to complete the task. The data is transmitted to MES
5. The carrier is released from the working position.


## 8.8 Writing on the RFID tag manually

### 8.8.1 Pallet carriers

In order to describe a pallet carrier with a specific ID, or to get information on which data is stored on the pallet carrier, it is possible to read this data or to describe the tag.

For this, it is necessary that a pallet carrier with a functioning tag is at one of the stopper positions and the station is switched on.

The following example is guilty for all read out positions where pallet carriers can be read out.

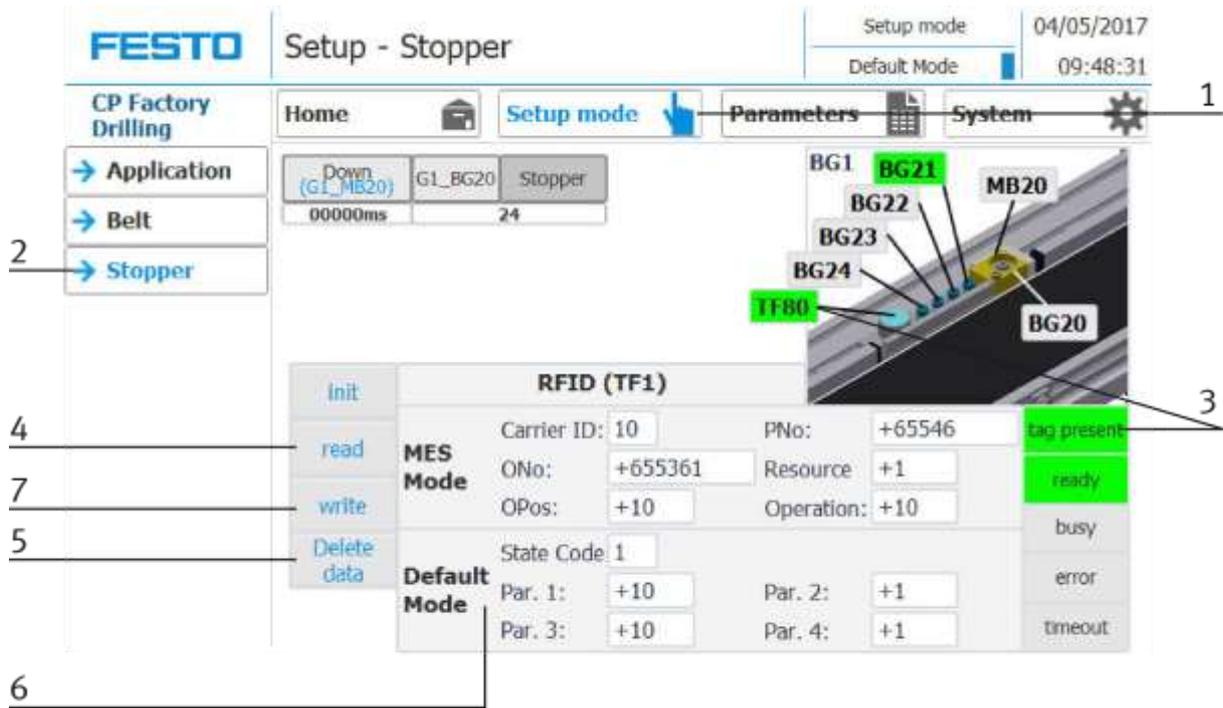

1. Select the Setup mode
2. Select the stopper from the setup menu on the left
3. If an RFID is detected, this is indicated by "tag present". (TF80 and button "tag present" are green)
4. The data of the RFID tag can be read out and displayed by pressing the "read" button.
5. Press the Delete Data button

For easier input, all data is only deleted in the input mask, the data remains on the tag itself.

6. Enter the desired data in the field (all fields which are white in background can be edited)

**MES Mode**

Carrier ID - displays or enter the carrier number

ONo - the order number is displayed or entered here

OPos - the order position is displayed or entered here

PNo - the part number is displayed or entered here

Resource - here the resource is displayed or entered

Operation - the number of the operation is displayed or entered here

**DefaultMode**

State code - here the state code for the start condition is entered, if these match the transition tables, the parameters are read out and the automatic sequence of the application is started.

Parameter 1 = Input of parameter value (e.g., 1 / left side drilling)

Input of parameter value (e.g., 2 / right side drilling)

Input of parameter value (e.g., 3 / both sides drilling)

Parameters 2 - 4 - not used in this example

7. Press the "Write" button to write the changes made to the tag.

### 8.8.2 Parameter (BRANCH)



Illustration similar

Default:

Parameter-Number	Description
1	Condition for branch: minimum value Limitation: The value must be smaller than the value of parameter 2. No limitation of the value in the transition table
2	Condition for branch: maximum value Limitation: The value must be greater than the value of parameter 1. No limitation of the value in the transition table
3	Not used
4	Not used

	NOTE
	<ul style="list-style-type: none"> <li>First enter parameter 2!</li> <li>Parameter 1 and parameter 2 indicate a value range. If the condition code (input condition) read by the RFID is within the defined range, the workpiece carrier is led into the branch. If the condition code is outside the defined range, the workpiece carrier is allowed to pass.</li> </ul>

MES:

Operation		Parameter-Number	Description
No.	Name	Number	No.
			WT will automatically turn off if the topology so dictates

## 9 Components

### 9.1 Electrical components

#### 9.1.1 2 Quadrant Controller



Illustration similar

#### Description

Electronics for DC motors excited by magnet up to about 200 W

The module M-MZ-4-30 is a two-quadrant motor control for DC motors with anti-clockwise and clockwise rotation. It guarantees a safe starting and stopping as well as the control of the rotational direction of motors. In off-state, the load is short-circuited which results in a dynamic braking. By the inlet SLOW, you can switch over from slow speed (adjustment at Tr1) to high speed. At the inlet STOP a limit switch can be installed.

#### Use:

Motor controls for brushed motors

Electronic load relay for solenoid valves and various loads

#### Characteristics

- Anti-clockwise and clockwise rotation
- Switch-over from high speed to the speed adjusted at the TR.1
- Port for limit switch for stop
- Short-circuit proof and temperature protected
- Limitation for starting circuit

**Technical Data**

Type: M-MZS-4-30

Item No. 06.05.020

Technical Data					
Control circuit	Input A1/A2 A1=Start clockwise A2=Start anticlockwise	Start wave	8	(V)	
		Stop wave	5	(V)	
		Allowed range	0-35	(V)	
	Input A3/A4 A3=slow drive A4=Stop	Shift wave	8	(V)	
		Allowed range	0-35	(V)	
	Adjustment range for turning speed with trimmer at front plate (typical)		0 to max. turning speed		
	Start delay at A1 and A2 to 24V		< 2	(ms)	
Load circle	Nominal voltage (power supply) $U_b$ /range		24 (19-30)	(VDC)	
	Load current/constant load		3/5 depends on switching frequency	(A)	
	Input current at $U_n$ /without load circle		T 10 mA	(mA)	
	Loading current $I_{max}$ . T=1 sec.		20	(A)	
	Current detection at short		95 Typ. (45-140)	A	
	De-energize time at short		80-400	$\mu s$	
Other data	Current entry at stop		<20	(mA)	
	Allowed surrounding temperature		-20 to +40	(C°)	
	DIN VDE-regulations		0110, 0160 in parts		
	Any assembly position / DIN-rail assembly		No / Yes		
	Housing		Plastic housing light grey		
	Dimensions		59x77x50	mm	
	Weight		Approx. 100	G	
	Temperature / short guard		Yes / Yes		
	Connection type screw connection		4mm <sup>2</sup> , 2,5mm <sup>2</sup> Yes		

**Connection diagram**

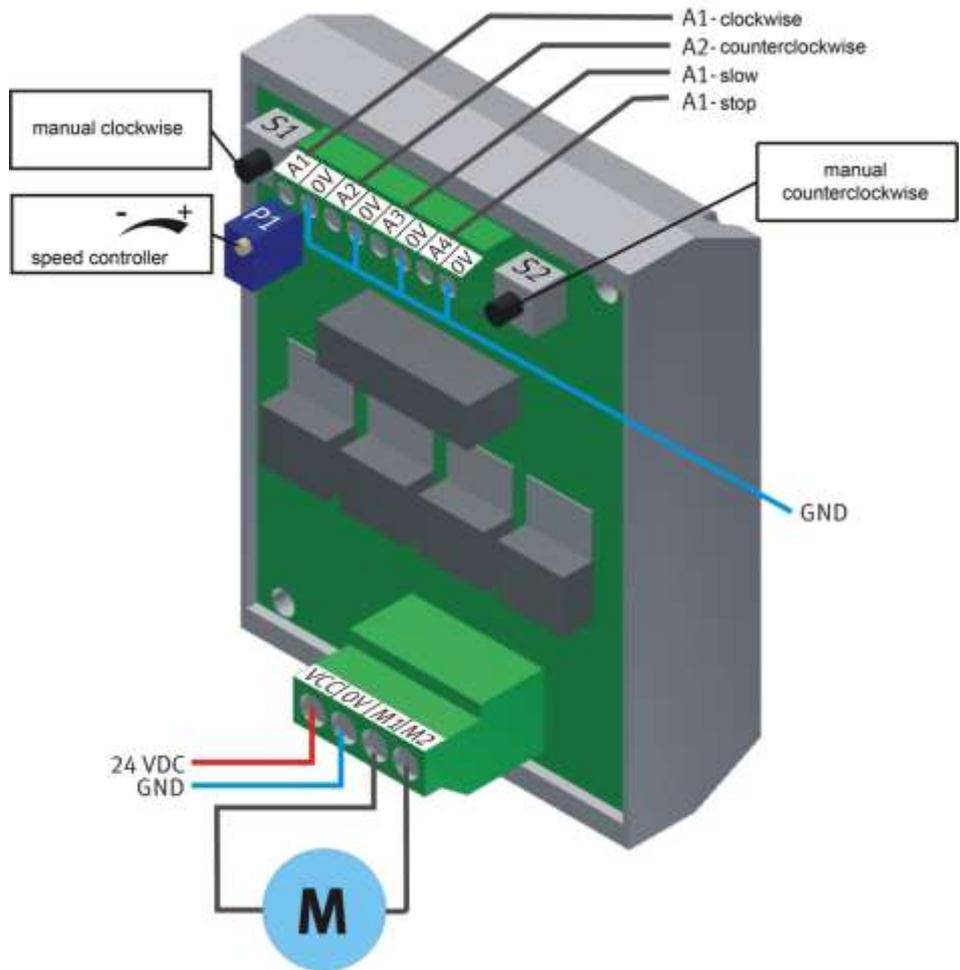


Illustration similar

**Motor MA1**

Input / Output	Starting Current Limiter	Description
Control – K5-KF10 / Q0.0 / 0x:1	QA1 / X1:re	Transport 1: direction to the right
Control – K5-KF10 / Q0.1 / 0x:2	QA1 / X1:li	Transport 1: direction to the left
Control – K5-KF10 / Q0.2 / 0x:3	QA1 / X1:sl	Transport 1: slow speed
Conveyor motor DC / -XJM1:4	QA1 / X2:M1	Conveyor motor connection
Conveyor motor DC / -XJM1:3	QA1 / X2:M2	Conveyor motor connection

**Motor MA2**

Input / Output	Starting Current Limiter	Description
Control – K5-KF10 / Q0.3 / 0x:4	QA2 / X1:re	Transport 2: direction to the right
Control – K5-KF10 / Q0.4 / 0x:5	QA2 / X1:li	Transport 2: direction to the left
Control – K5-KF10 / Q0.5 / 0x:6	QA2 / X1:sl	Transport 2: slow speed
Conveyor motor DC / -XJM2:4	QA2 / X2:M1	Conveyor motor connection
Conveyor motor DC / -XJM2:3	QA2 / X2:M2	Conveyor motor connection


**Motor MA3**

Input / Output	Starting Current Limiter	Description
Control – K5-KF10 / Q0.6 / 0x:7	QA3 / X1:re	Transport 3: direction to the right
Control – K5-KF10 / Q0.7 / 0x:8	QA3 / X1:li	Transport 3: direction to the left
Control – K5-KF10 / Q1.7 / 0x:8	QA3 / X1:sl	Transport 3: slow speed
Conveyor motor DC / -XJM3:4	QA3 / X2:M1	Conveyor motor connection
Conveyor motor DC / -XJM3:3	QA3 / X2:M2	Conveyor motor connection

**Motor MA4**

Input / Output	Starting Current Limiter	Description
Control – K5-KF10 / Q0.6 / 0x:7	QA4 / X1:re	Transport 4: direction to the right
Control – K5-KF10 / Q0.7 / 0x:8	QA4 / X1:li	Transport 4: direction to the left
Control – K5-KF10 / Q1.7 / 0x:8	QA4 / X1:sl	Transport 4: slow speed
Conveyor motor DC / -XJM3:4	QA4 / X2:M1	Conveyor motor connection
Conveyor motor DC / -XJM3:3	QA4 / X2:M2	Conveyor motor connection

## 9.2 PLC Siemens

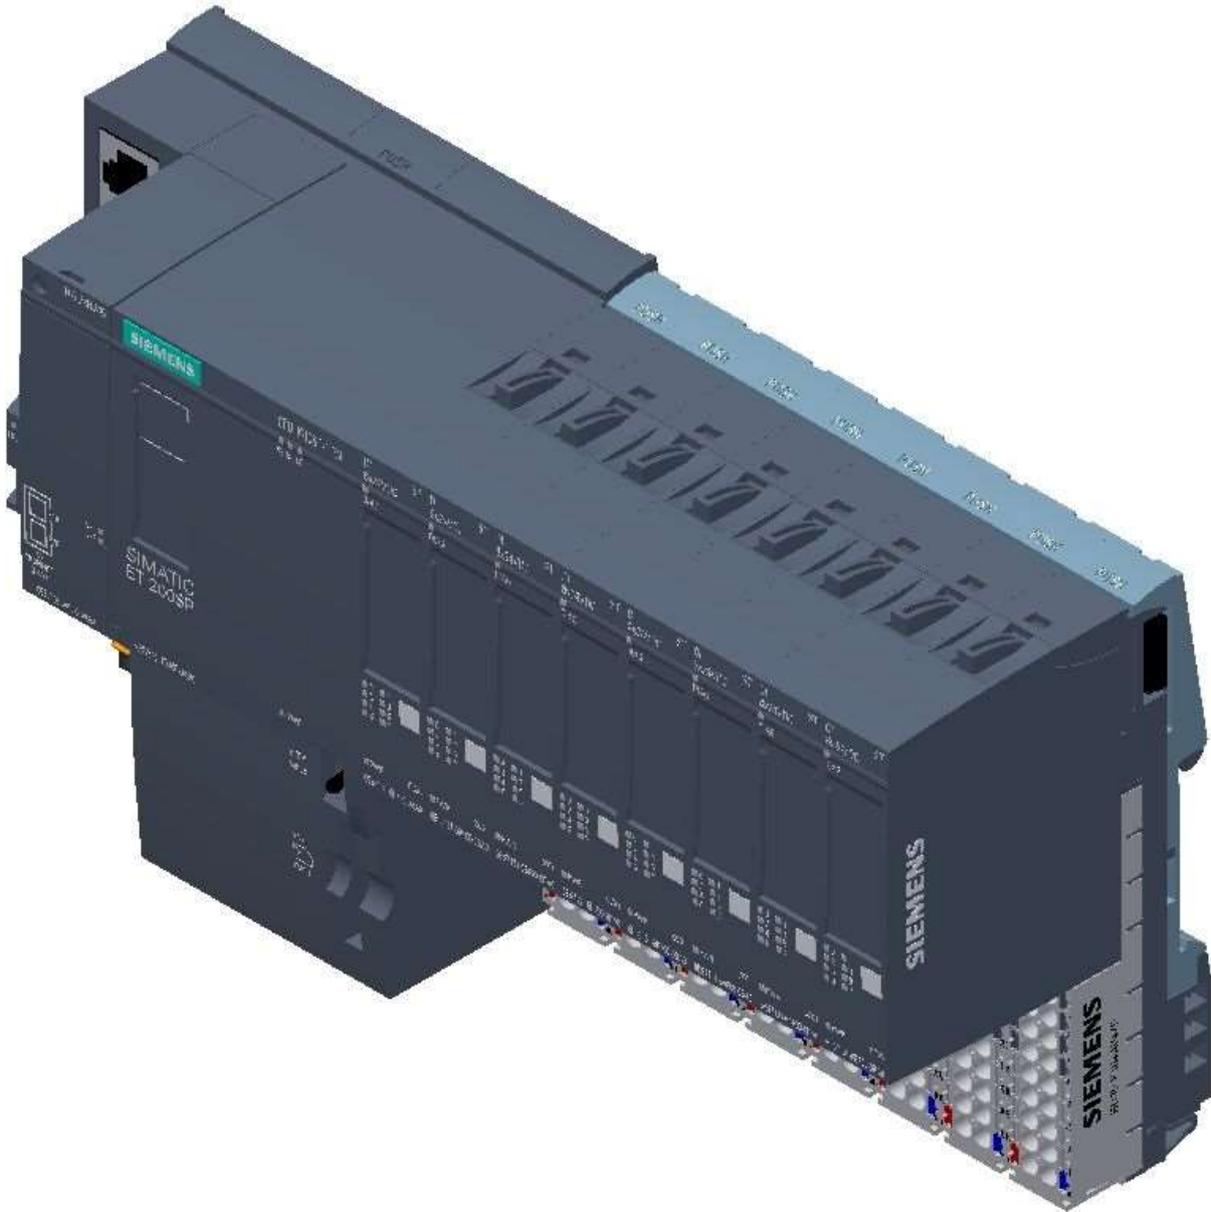


Siemens ET 200 SP / CPU 1512SP F-1PN / illustration similar

For detailed information see electrical circuit diagram.

### 9.3 PLC Festo CECC


The Festo controller is just one part (order number; 574418-CECC-LK)

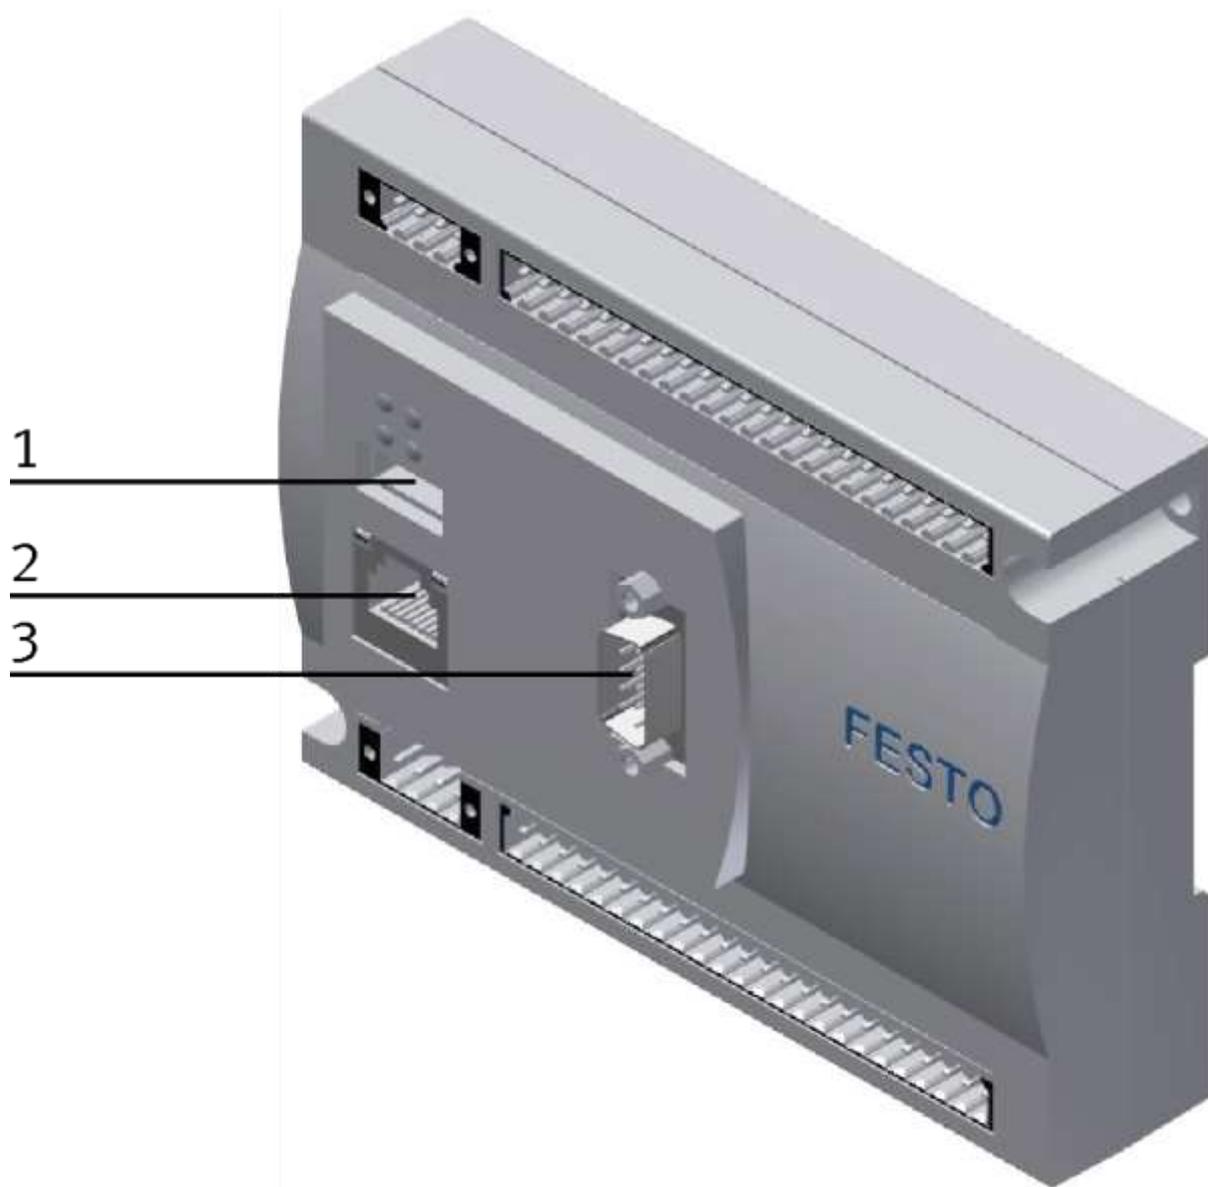

Festo CECC / illustration similar

Position	Description	Comment
1	USB interface	For external memory
2	Ethernet interface RJ 45	For external PC (for programming with CodeSys) or for external operation panel CDPX
3	CanOpen interface	To connect CanOpen slaves


## 9.4 Turck Interface

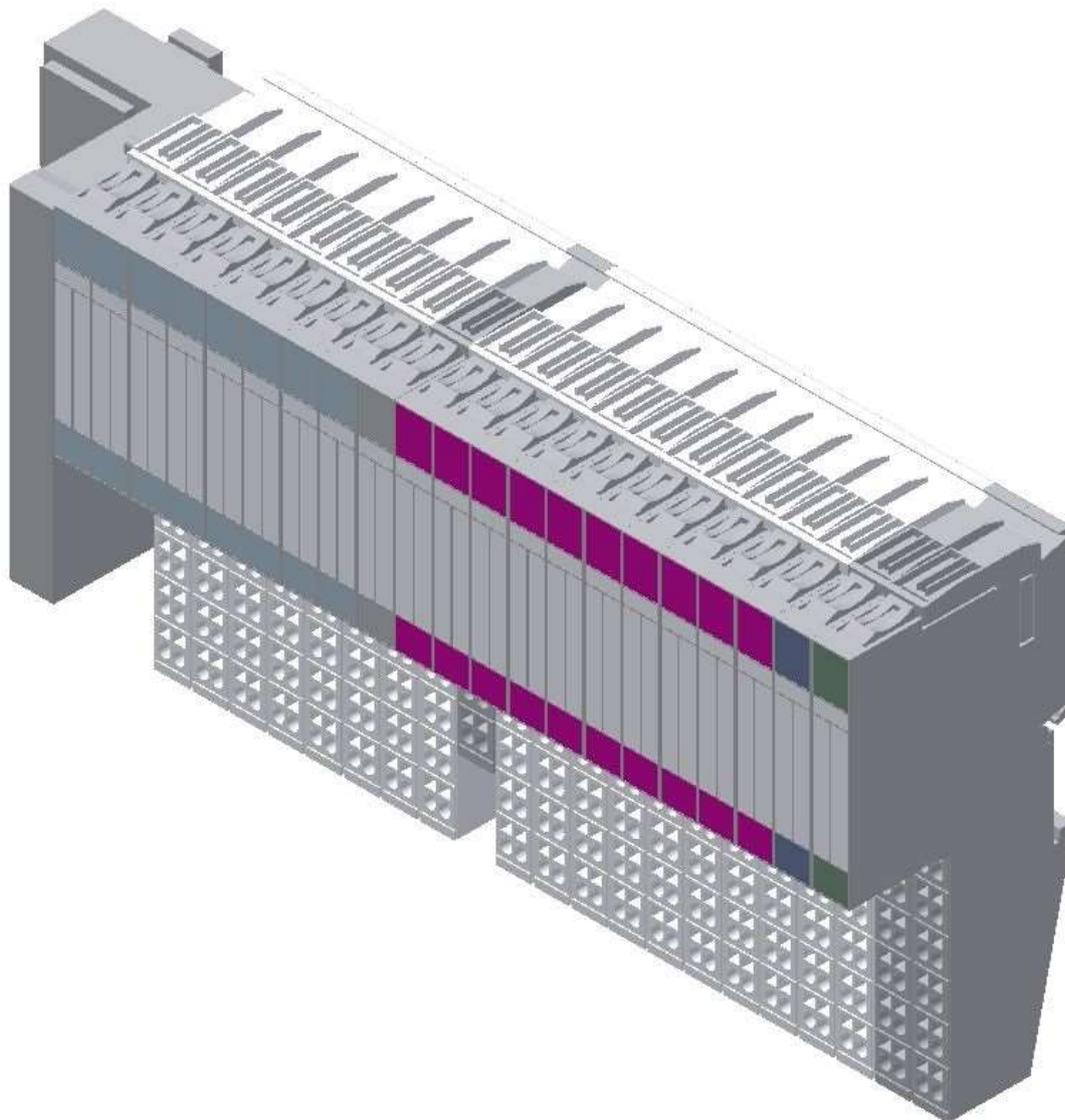

Turck interface / illustration similar

For detailed information see electrical circuit diagram.

## 9.5 PLC FESTO CPX-E

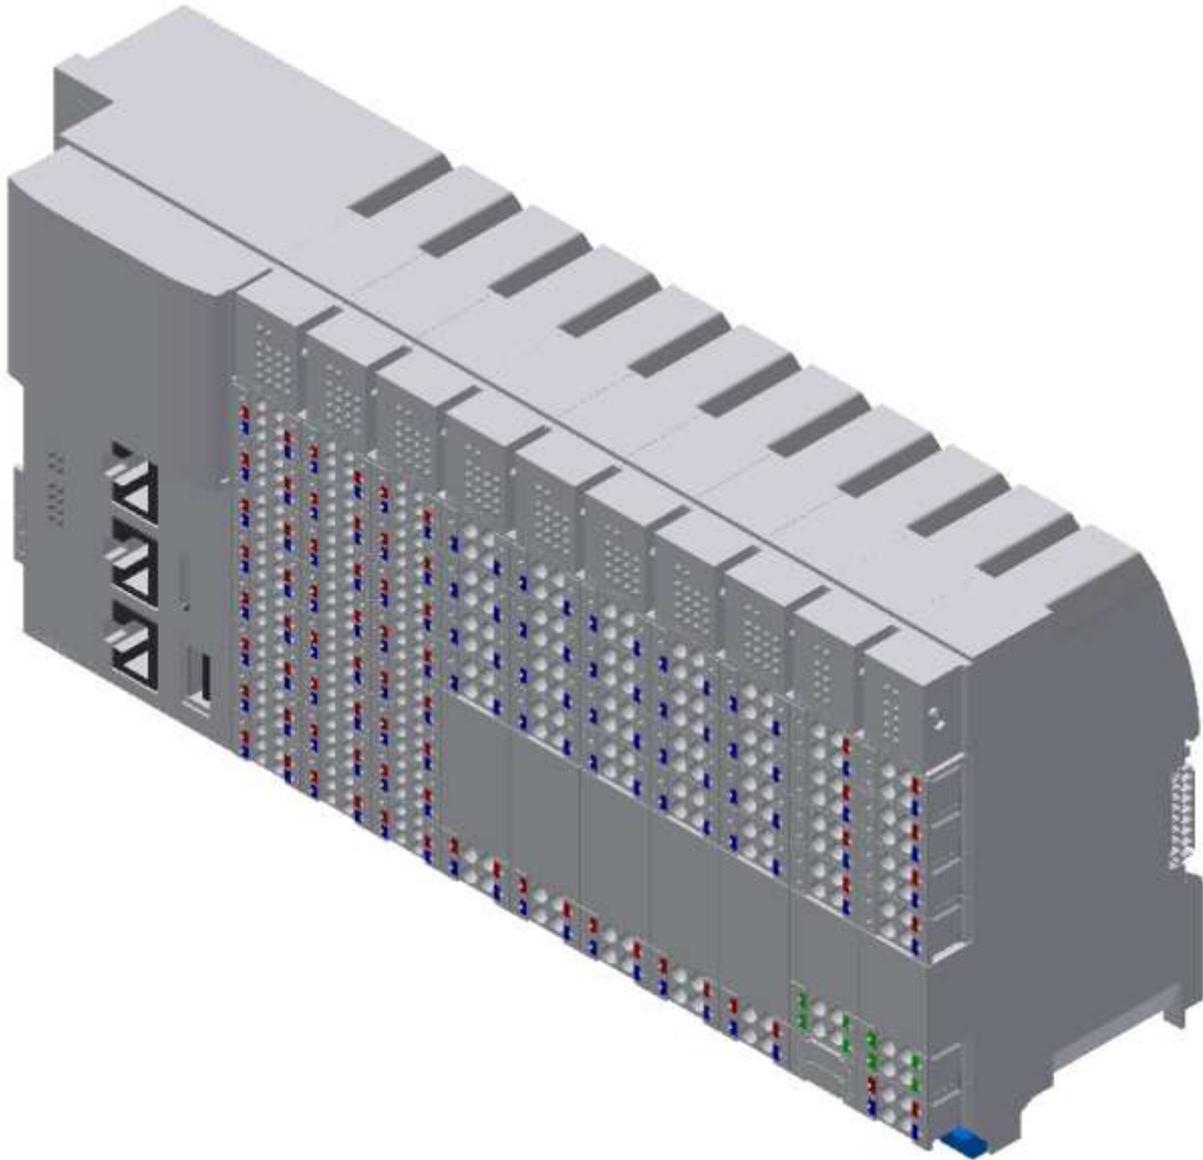

Festo CPX-E / illustration similar

For detailed information see electrical circuit diagram.

### 9.5.1 Touch Panel



Siemens TP 700 Comfort / illustration similar

#### Supply voltage

Type of supply voltage	DC
Rated value (DC)	24 V
permissible range, lower limit (DC)	19.2 V
permissible range, upper limit (DC)	28.8 V

#### Input current

Current consumption (rated value)	0.5 A
Starting current inrush $I^2t$	0.5 A <sup>2</sup> ·s

#### Power


Power consumption, typ.	12 W
-------------------------	------

#### Processor

Processor type	X86
----------------	-----

#### Memory

Flash	Yes
RAM	Yes
Memory available for user data	12 Mbyte

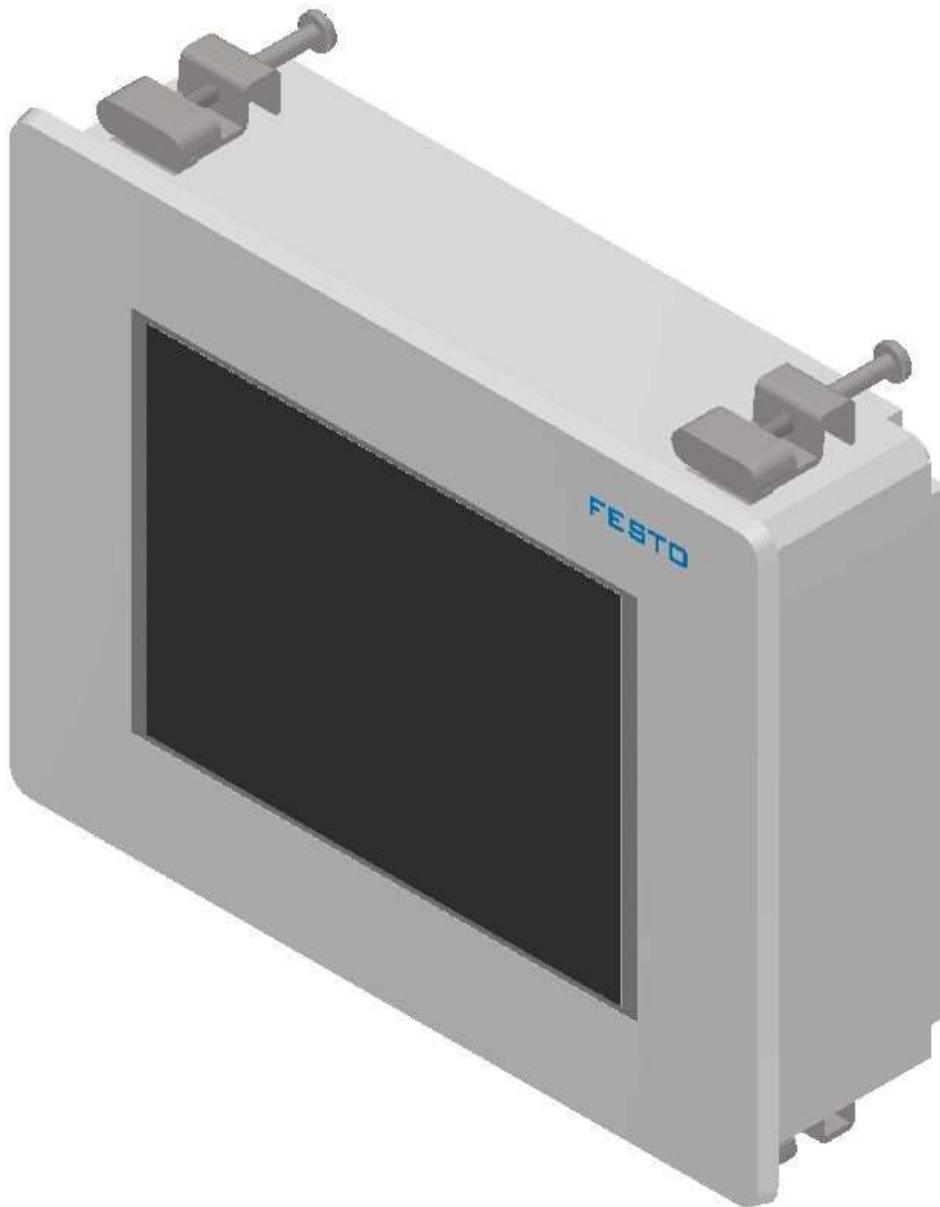

Festo CDPX Panel / illustration similar

Feature	values
Recipe memory	32 Kilobyte
Events per event buffer	2,048
Alarms	2,000
Java script file size per page	8 Kilobyte
Supported PLC protocol	CODESYS 2.3 CODESYS 3.X ModbusRTU Client ModbusRTU Server ModbusTCP Client ModbusTCP Server
Real-time clock deviation	130 s / month
Number of colours	64 k
Number of system LEDs	1
Display	TFT colour
Display property	Touchscreen
Display size	7"
Backup battery	Li battery, rechargeable
Operating voltage range DC	18 ... 30 V
Display resolution	WVGA, 800x480 Pixel
Nominal operating voltage DC	24 V
Current consumption at nominal operating voltage	0,7 A
CE mark (see declaration of conformity)	to EU directive for EMC
Storage temperature	-20 ... 70 °C
Relative air humidity	5 - 85 % non-condensing
Protection class	IP65 front, IP20 back
Ambient temperature	0 ... 50 °C
Authorization	C-Tick c UL us - Listed (OL)
PLC interface	Ethernet RS485
USB interface	Yes
Ethernet interface	RJ45 10/100 MBd
Mounting type	Front panel installation
Materials note	Conforms to RoHS
Programming software	Designer Studio

## 9.6 Scalance Ethernet Switch



Siemens Scalance X208 Ethernet switch / illustration similar

The SCALANCE X208 has eight RJ-45 jacks for the connection of end devices or other network segments.

**Product properties**

SCALANCE X-208

Operating Instructions, 12/2011, A5E00349864-19

TP ports / Connector pinout

On the SCALANCE X208, the TP ports are implemented as RJ-45 jacks with MDI-X assignment (Medium Dependent Interface–Autocrossover) of a network component.

RJ-45 jack

Pin number

Assignment

Pin 8 n. c.

Pin 7 n. c.

Pin 6 TD-

Pin 5 n. c.

Pin 4 n. c.

Pin 3 TD+

Pin 2 RD-

Pin 1 RD+

**NOTICE**

TP cords or TP-XP cords with a maximum length of 10 m can be connected to the RJ-45

TP port. With the IE FC cables and IE FC RJ-45 plug 180, an overall cable length of up to 100 m is permitted between two devices depending on the cable type.

**Autonegotiation**

Autonegotiation means the automatic detection of the functionality of the port at the opposite end. Using autonegotiation, repeaters or end devices can detect the functionality available at the port of a partner device allowing automatic configuration of different types of device. With autonegotiation, two components connected to a link segment can exchange parameters and set themselves to match the supported communication functionality.

**Note**

If an IE switch port operating in autonegotiation mode is connected to a partner device that is not operating in autonegotiation mode, the partner device must be set permanently to half duplex mode. If an IE switch port is set permanently to full duplex, the connected partner device must also be set to full duplex. If the autonegotiation function is disabled, the MDI/MDI-X auto crossover function is also inactive. This means it may be necessary to use a crossover cable.

**Note**

The SCALANCE X208 is a plug-and-play device that does not require settings to be made for commissioning.

**MDI / MDIX autocrossover function**

The advantage of the MDI /MDIX autocrossover function is that straight-through cables can be used throughout and crossover Ethernet cables are unnecessary. This prevents malfunctions resulting from mismatching send and receive wires. This makes installation much easier for the user. IE Switches X-200 support the MDI / MDIX autocrossover function.

**NOTICE**

Please note that the direct connection of two ports on the switch or accidental connection over several switches causes an illegal loop. Such a loop can lead to network overload and network failures.

**Auto polarity exchange**

If the pair of receiving cables are incorrectly connected (RD+ and RD- swapped over), the polarity is reversed automatically.

### 9.7 RFID with Ethernet




Turck – TBEN-S2-2RFID-4DXP / 6814029 / illustration similar

#### I/O data mapping

The BLident RFID-a interface modules cannot be controlled by the process data only. In any case, there is a software functional module required in the control. The functional module has been standardized for the RFID systems and is called Proxy Ident Block (PIB).

Input	Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Chanel 0	0	Status word channel 0- low byte							
	1	Status word channel 0- high byte							
Chanel 1	2	Status word channel 1- low byte							
	3	Status word channel 1- high byte							

Output	Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Chanel 0	0	Control word channel 0- low byte							
	1	Control word channel 0- high byte							
Chanel 1	2	Control word channel 1- low byte							
	3	Control word channel 1- high byte							

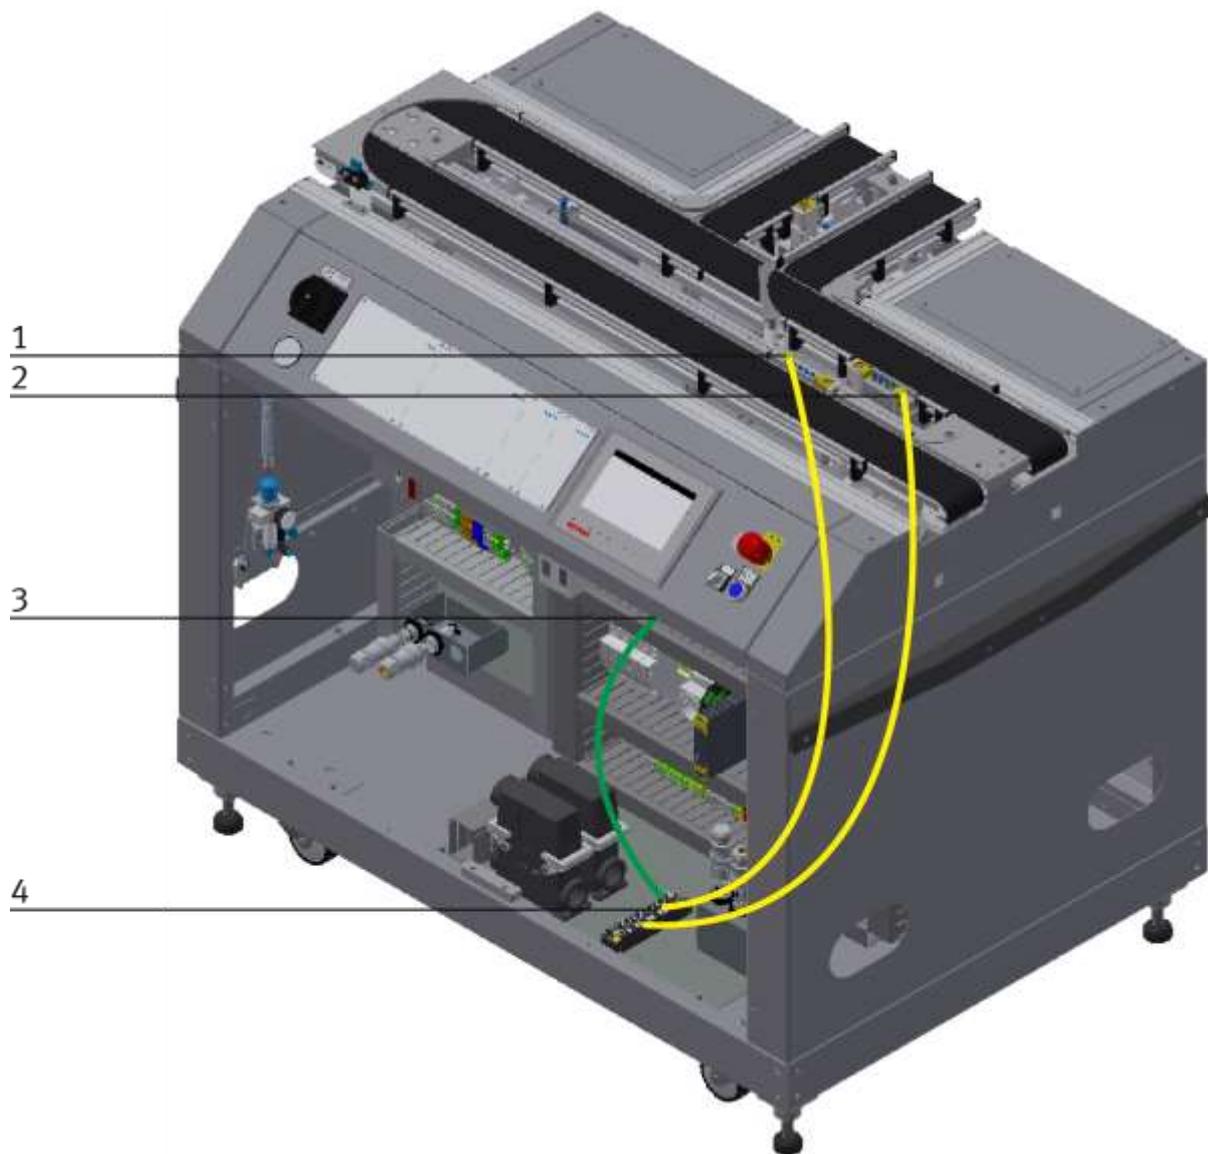

Wiring of the RFid module to the RFID interface / illustration similar

Pos.	Name
1	Turck read-write head TB-M18-H1147 (equipment identifier G-TF80)
2	Turck read-write head TB-M18-H1147 (equipment identifier G-TF81)
3	Profinet cable from RFID module KF80 to Profinet switch
4	Turck Ethernet module with RFID interface (equipment identifier K2-KF80)



RFID read-write head / illustration similar

The Turck RFID read-write head is mounted on the stopper unit on the conveyor.  
Its designation is TB-M18-H1147.

Name	
Operating voltage	10...30 VDC
DC rated operating current	0-80 mA
Operating voltage	DC
Data transfer	Inductive coupling
Working frequency	13,56 MHz
Read-write distance	max. 30 mm


### 9.7.1 Electronic circuit protection



Murr Mico electronic circuit protection 2-channels / illustration similar

Description	
<b>Input</b>	
Operating voltage	24 V DC (18...30 V DC)
<b>Control inputs</b>	
Input voltage (ON)	10...30 V DC
Impulse length (ON)	min. 20 ms
<b>Control outputs</b>	
Group alarm output	Potential free 30 V AC/DC, 100 mA
<b>General data</b>	
Connection	Spring clamp terminals
Input terminals	1 × 16 mm <sup>2</sup>
Output terminals	Per output 1 × 4 mm <sup>2</sup>
Alarm terminals	2.5 mm <sup>2</sup>
Bridging concept	Two sides, with spring clamp terminals or bridge set (max. 40 A)
Mounting method	DIN-rail mountable TH35 (EN 60715)
Dimensions H×B×T	90×36×80 mm
Temperature range	0...+55 °C (storage temperature -40...+80 °C)
<b>Output</b>	
Current adjustment	1 A, 2 A, 4 A, 6 A, by counters inked rotary switch, sealed
Inrush capacity	max. 20 mF (per channel)

### 9.7.2 Power supply unit

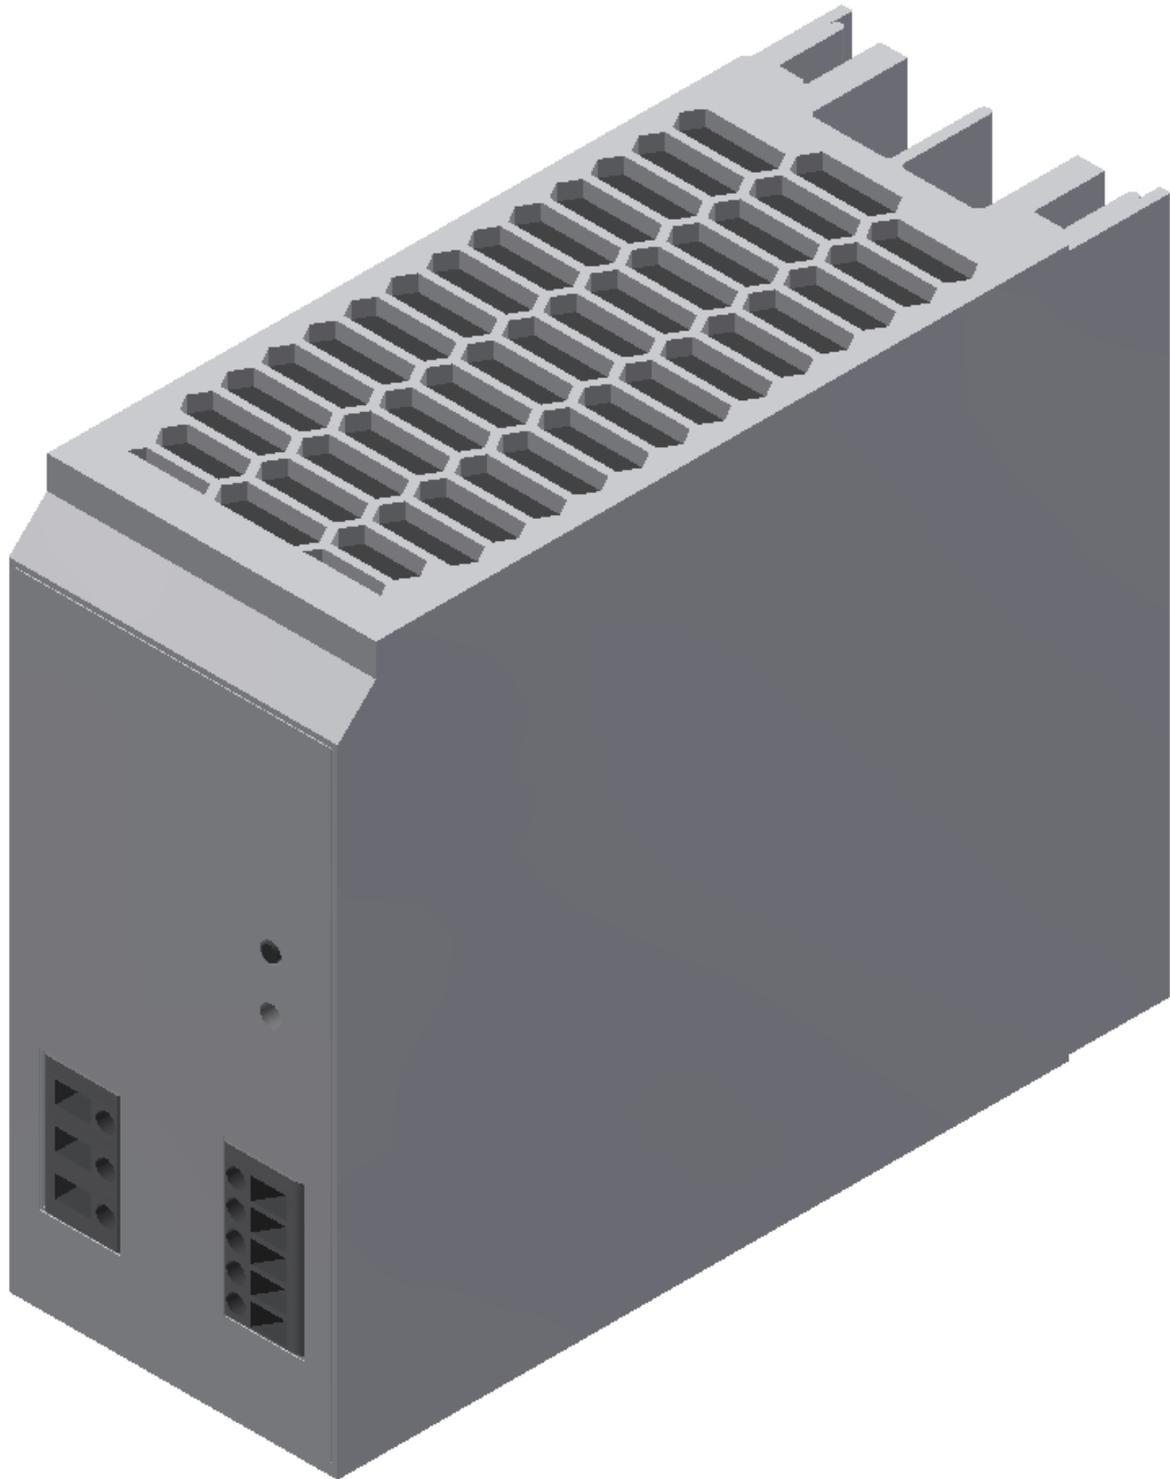

Power supply unit Festo CACN-3A-1-10 / illustration similar

Description	Value
Width	60 mm
Height	130 mm
Length	152,5 mm
Assembly position	Free convection
Primary supply	Single-phase
Input current	1,5 - 3,0 A
Nominal output voltage DC	24 V
Nominal output current	10 A
Input voltage range AC	100 ... 240 V
Power failure buffering	24 ms
Line frequency	45 ... 65 Hz
Authorisation	C-Tick /c UL us - Listed (OL)
CE mark (see declaration of conformity)	to EU directive for EMC to EU directive low-voltage devices
Storage temperature	-40 ... 85 °C
Relative air humidity	95 %
Protection class	IP20
Ambient temperature	-25 ... 70 °C
Product weight	1.554 g
Mounting type	with top-hat rail
Materials note	PWIS substances/Conforms to RoHS

### 9.7.3 SAFETY RELAY



Siemens Sirius safety relay / illustration similar

Description	24 V DC/AC
Mounting type	Span on mounting
Part number	3SK1111-2AB30
Type	SIRIUS 3SK11
Depth	121.6 mm
Height	100 mm
Width	22.5 mm
Current	5 A
Power supply	24 V/DC; 24 V/AC
Max. temperature	60 °C
Min. temperature	-25 °C
Product-type	Safety relay

### 9.7.4 Mini Terminal



Multi-pin plug distributor / illustration similar

The multi-pin plug distributor is designed for the inputs and outputs of the station. You can connect PNP sensors and two-pole actuators there. The connection is effected by three-pole M8x1 plugs, and the bus terminal by a 15pole sub-D plug connector. The operating status is displayed on yellow LEDs.

#### **Pin allocation on the multi pin plug distributor**

##### Pin allocation 15pole sub-D plug connector

- Signal lines      Pin 1 to Pin 12
- DC 24V            Pin 13
- 0V                 Pin 14 and Pin 15

##### Pin allocation M8 socket corresponding to IEC 947-5-2

- slots 0 to 11
- Signal line      socket 4
- DC 24V            socket 1
- 0V                 socket 3

## XD20 – Multi pin distributor MPV1

15-pole D-Sub Pin	Bit	Name
1	Bit 0	Stopper before outward transfer / -BG20
2	Bit 1	Stopper before outward transfer / -MB20
3	Bit 2	Pallet available identity sensor 1 / -BG21
4	Bit 3	Reserve
5	Bit 4	Identity sensor 2 / -BG22
6	Bit 5	Reserve
7	Bit 6	Identity sensor 3 / -BG23
8	Bit 7	Reserve
9	Bit 8	Identity sensor 4 / -BG24
10	Bit 9	Reserve
11	Bit 10	Option / downstream station free 1
12	Bit 11	Reserve / Option station occupied 1
13	+24 V	
14 and 15	0V	

## XD30 – Multi pin distributor MPV2


15-pole D-Sub Pin	Bit	Name
1	Bit 0	Outward transfer straight line / -BG30
2	Bit 1	Outward transfer / -MB30
3	Bit 2	Outward transfer bend off / -BG31
4	Bit 3	Reserve
5	Bit 4	Reserve
6	Bit 5	Reserve
7	Bit 6	Reserve
8	Bit 7	Reserve
9	Bit 8	Downstream station free 2 - option
10	Bit 9	Station occupied 2 - option
11	Bit 10	Downstream station free 3 - option
12	Bit 11	Station occupied 3 - option
13	+24 V	
14 and 15	0V	

## XD40 – Multi pin distributor MPV3

15-pole D-Sub Pin	Bit	Name
1	Bit 0	Stopper before infiltration / -BG40
2	Bit 1	Stopper before infiltration / -MB40
3	Bit 2	WT with stopper before infiltration / -BG41
4	Bit 3	Reserve
5	Bit 4	Gate area free (deflection) / -BG42
6	Bit 5	Reserve
7	Bit 6	Reserve
8	Bit 7	Reserve
9	Bit 8	Reserve
10	Bit 9	Reserve
11	Bit 10	Gate area free (straight) / -B45
12	Bit 11	Reserve
13	+24 V	
14 and 15	0V	


## XD50 – Multi pin distributor MPV4

15-pole D-Sub Pin	Bit	Name
1	Bit 0	Stopper 2/ -BG50
2	Bit 1	Stopper 2 / -MB50
3	Bit 2	Pallet available identity sensor 1 / -BG51
4	Bit 3	Reserve
5	Bit 4	Identity sensor 2 / -BG52
6	Bit 5	Reserve
7	Bit 6	Identity sensor 3 / -BG53
8	Bit 7	Reserve
9	Bit 8	Identity sensor 4 / -BG54
10	Bit 9	Conveyor infeed / BG56
11	Bit 10	Reserve
12	Bit 11	Conveyor outlet / BG57
13	+24 V	
14 and 15	0V	

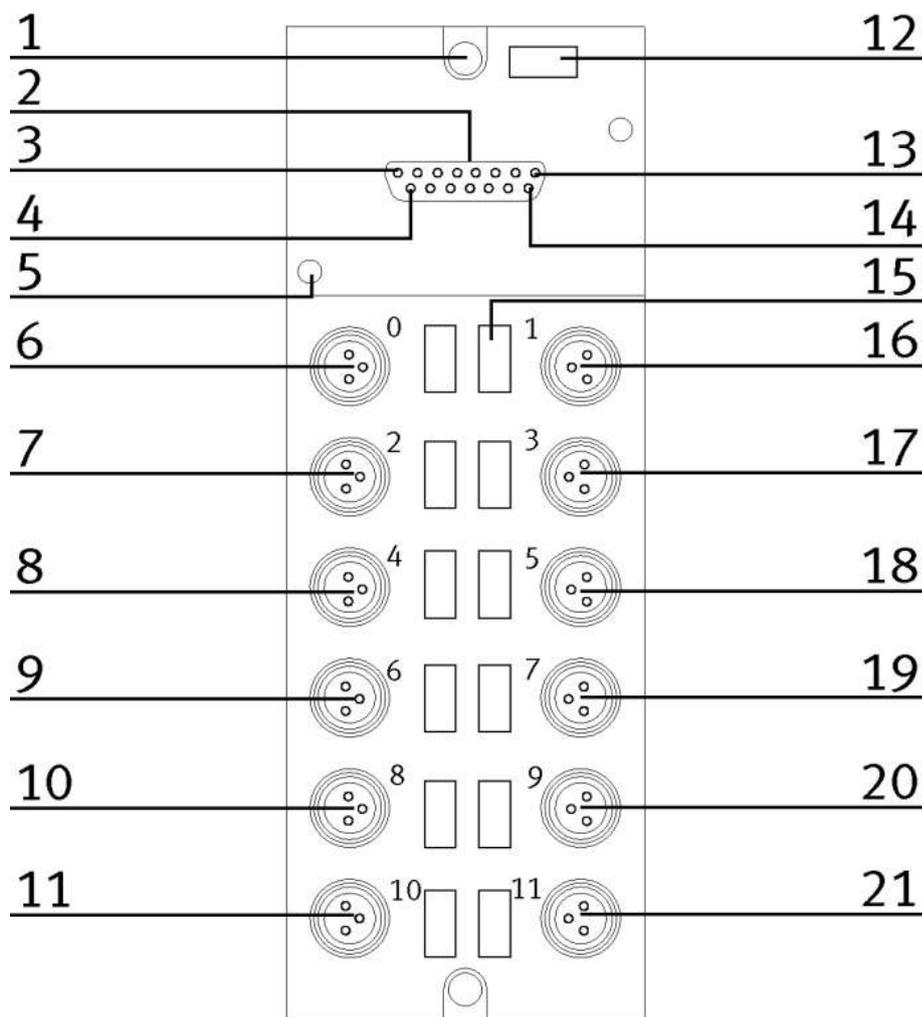

Pos	Designation	Pos	Designation
1	Mounting hole	12	Inscription label
2	15 pole sub-D plug	13	PIN 8
3	PIN 1	14	PIN 15
4	PIN 9	15	Inscription label
5	Mounting hole M3	16	OUT 0
6	IN 0	17	OUT 1
7	IN 1	18	OUT 2
8	IN 2	19	OUT 3
9	IN 3	20	OUT 4
10	IN 4	21	OUT 5
11	IN 5		

9.7.5 SYS link interface

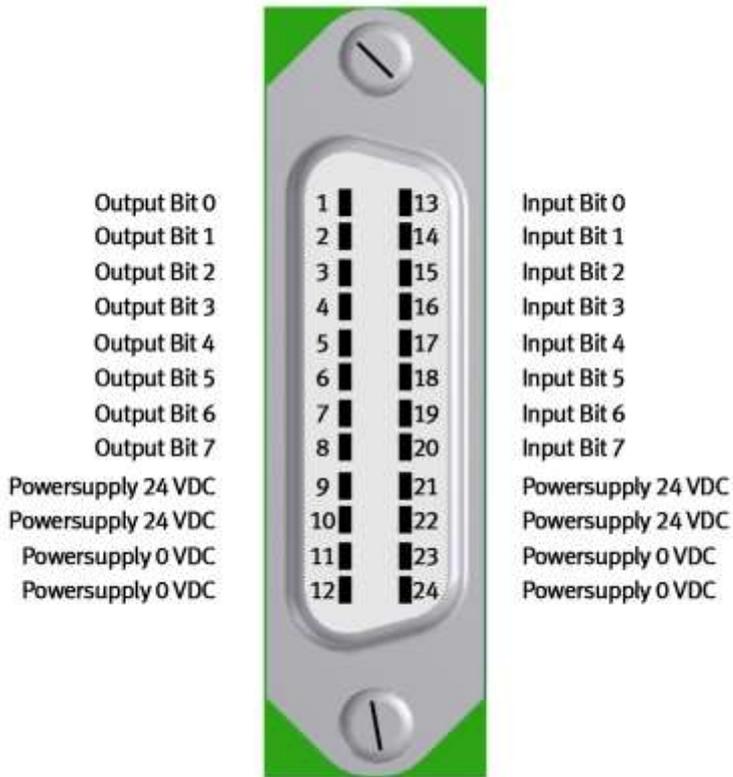

Syslink allocation

SYSlink PIN	Bit	Description	Syslink PIN	Bit	Function
01	0	Output AX.0	13	0	Input EX.0
02	1	Output AX.1	14	1	Input EX.1
03	2	Output AX.2	15	2	Input EX.2
04	3	Output AX.3	16	3	Input EX.3
05	4	Output AX.4	17	4	InputEX.4
06	5	Output AX.5	18	5	Input EX.5
07	6	Output AX.6	19	6	InputEX.6
08	7	Output AX.7	20	7	Input EX.7
09	24V	Power Supply	21	24V	Power Supply
10	24V	Power Supply	22	24V	Power Supply
11	0V	Power Supply	23	0V	Power Supply
12	0V	Power Supply	24	0V	Power Supply

## 9.8 Mechanic components

### 9.8.1 Motor of Conveyor




Motor type 403438 / illustration similar

The motor has got the equipment identifier / 3M1

Name	
Nominal voltage UN /Volt	36
Idling speed n <sub>0</sub> [min <sup>-1</sup> ]	120
Rated torque M <sub>N</sub> [Nm]	2
Starting torque M <sub>A</sub> [Nm]	16
Gear ratio i	53/2
Connection resistance 2 vanes R [m ]	3400
Connection resistance 4 vanes R [m ]	3000
Protection class IP 30	30
Weight [kg]	1

### 9.8.2 The stopper unit

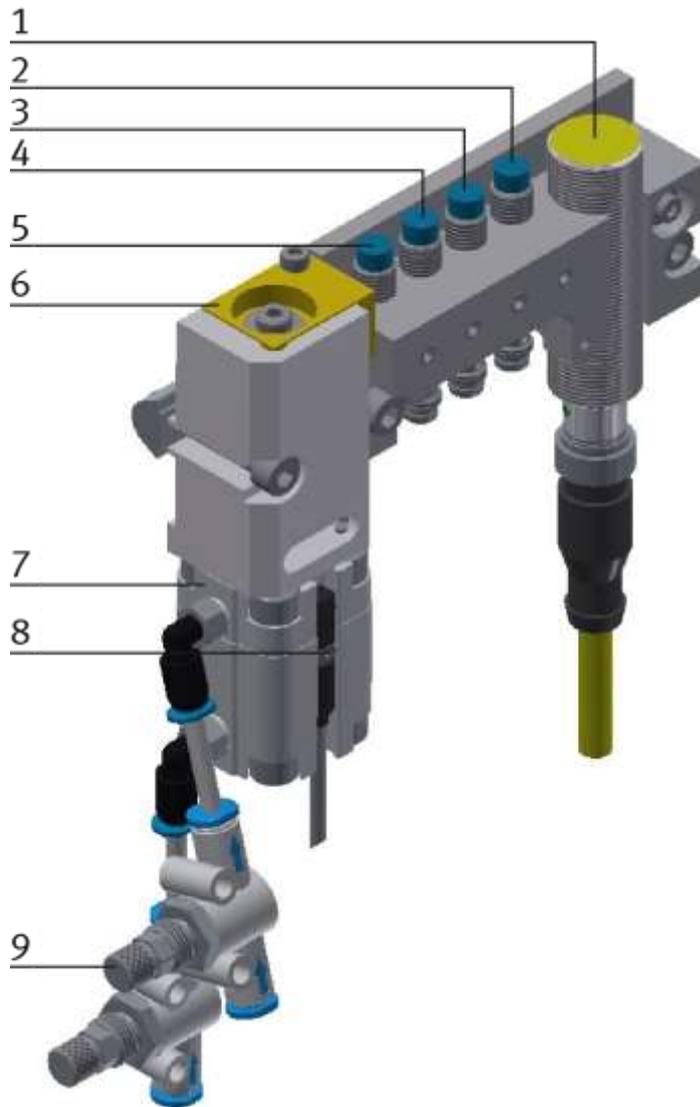

CP Factory Stopper Unit / illustration similar

Position	Description
1	Turck TB-M18-H1147 RFID read-write head / IFM DTM424 RFID read write head
2	Pallet available Ident sensor 1 / Order number 150395 / SIEN-M8NB-PS-S-L
3	Pallet available Ident sensor 2 / Order number 150395 / SIEN-M8NB-PS-S-L
4	Pallet available Ident sensor 3 / Order number 150395 / SIEN-M8NB-PS-S-L
5	Pallet available Ident sensor 4 / Order number 150395 / SIEN-M8NB-PS-S-
6	Stopping unit
7	Stopper cylinder / Order number 157211 / AEVUZ-16-5-P-A
8	Sensor Stopper lowered / Order number 574334 / SMT-8M-A-PS-24V-E-0,3-M8D
9	one-way flow control valve / Order number. 193967 / GR-QS-4

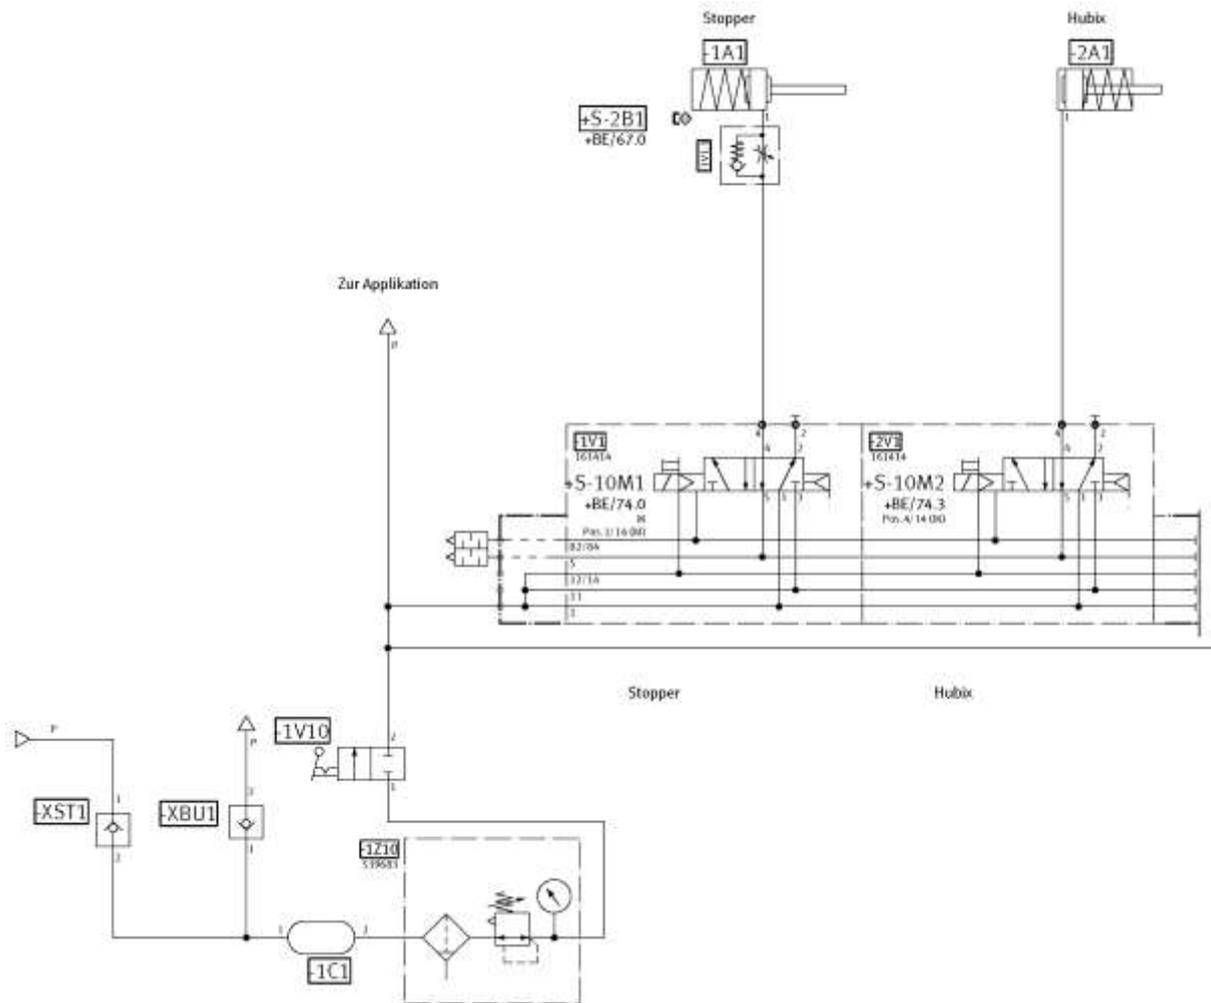


Diagram of pneumatics, Stopper Unit

### 9.8.3 The branch


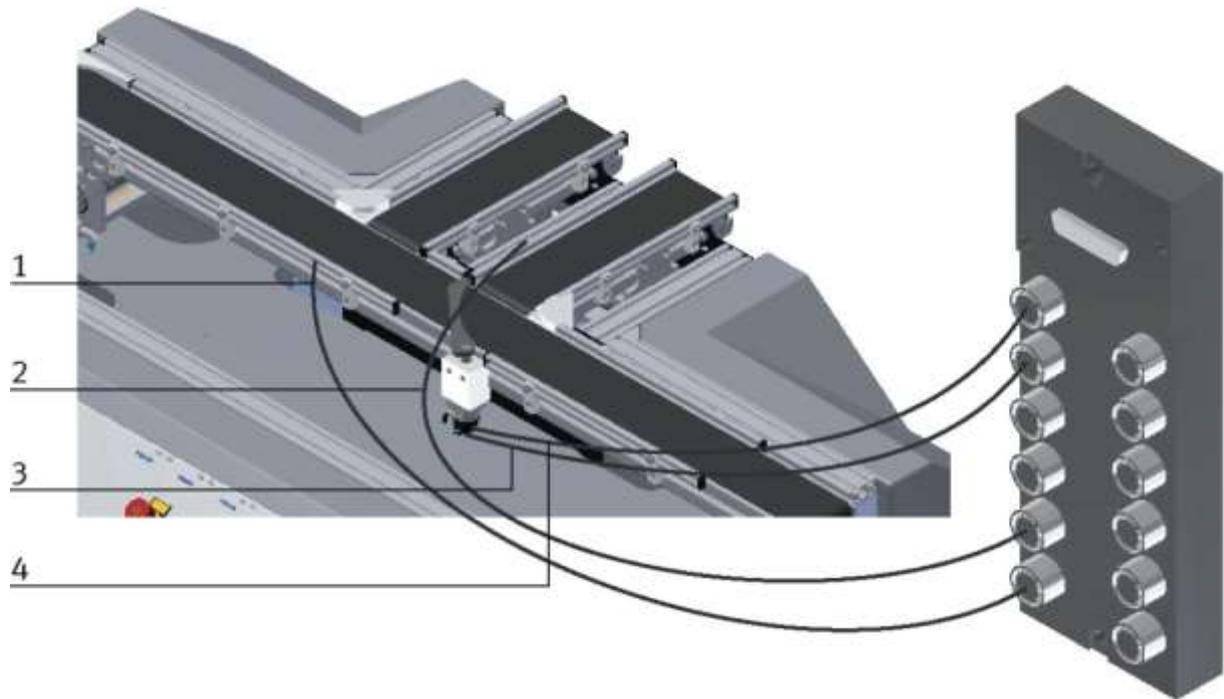


Illustration similar

Position	Description
1	BG45 – gate area free (straight)
2	BG42 – gate area free (deflection)
3	BG30 – outward transfer straight line
4	BG31 – outward transfer bend off

### 9.8.4 Transportation of the station

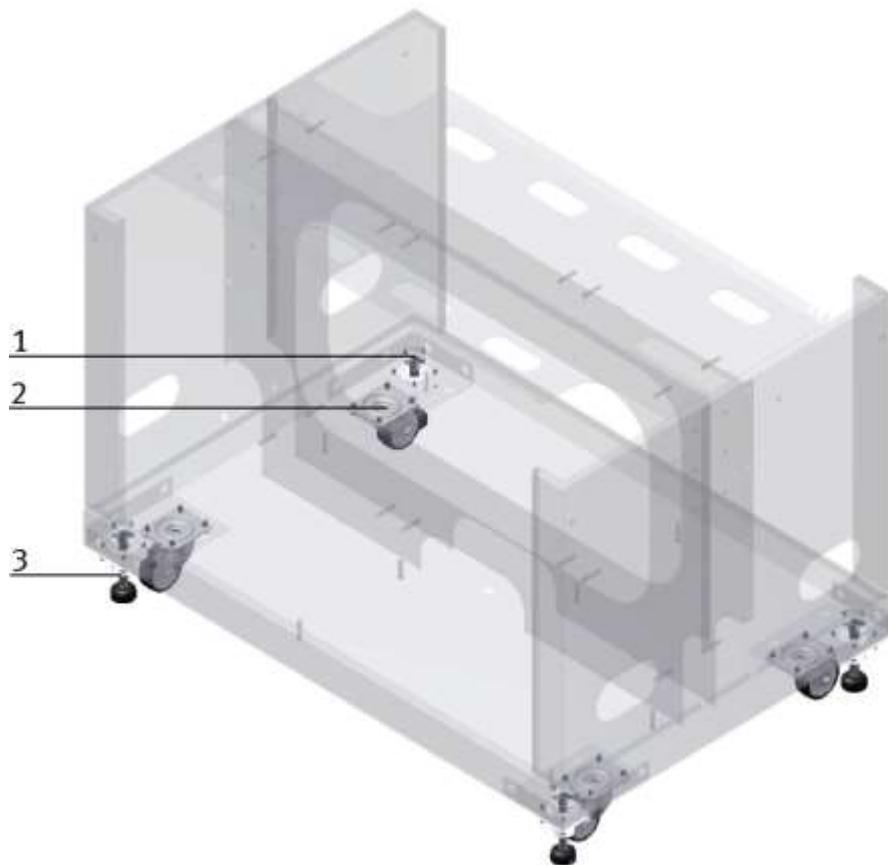

CP Factory Transportation method / illustration similar

With the help of mechanically adjustable feet, you can lower the basic module and then put it on the rollers. In this way, an easy transport is possible. If you wind up the machine mounts, you can move the basic module easily to another place.

Position	Description
1	Star knob for adjusting the height of the machine mount
2	Roller
3	Lock nut for locking the machine mount in the position required

	 <b>WARNING</b>
	<ul style="list-style-type: none"> <li>• Danger of crushing for hands/feet                             <ul style="list-style-type: none"> <li>– It is not permitted to grip onto or under the feet when handling the machine, as there is an increased risk of hands or feet getting crushed or trapped in these areas.</li> <li>– When setting down the station, make sure no persons have their feet under the machine's feet.</li> </ul> </li> </ul>

### 9.8.5 Operation panel working position

So that the components in the base frame of the module are more easily accessible, the entire control panel can be folded up.

The panel is gripped at the bottom and folded up. When the panel is completely raised, the springs stand vertically and support the panel against folding down.

	 <b>WARNING</b>
	<ul style="list-style-type: none"> <li>• Risk of crushing           <ul style="list-style-type: none"> <li>- - Make sure that the springs are vertical and that the panel is secured against folding down.</li> <li>- - It is also important to ensure that no third person can fold the panel down.</li> <li>- - Failure to heed the information given can lead to injuries.</li> </ul> </li> </ul>

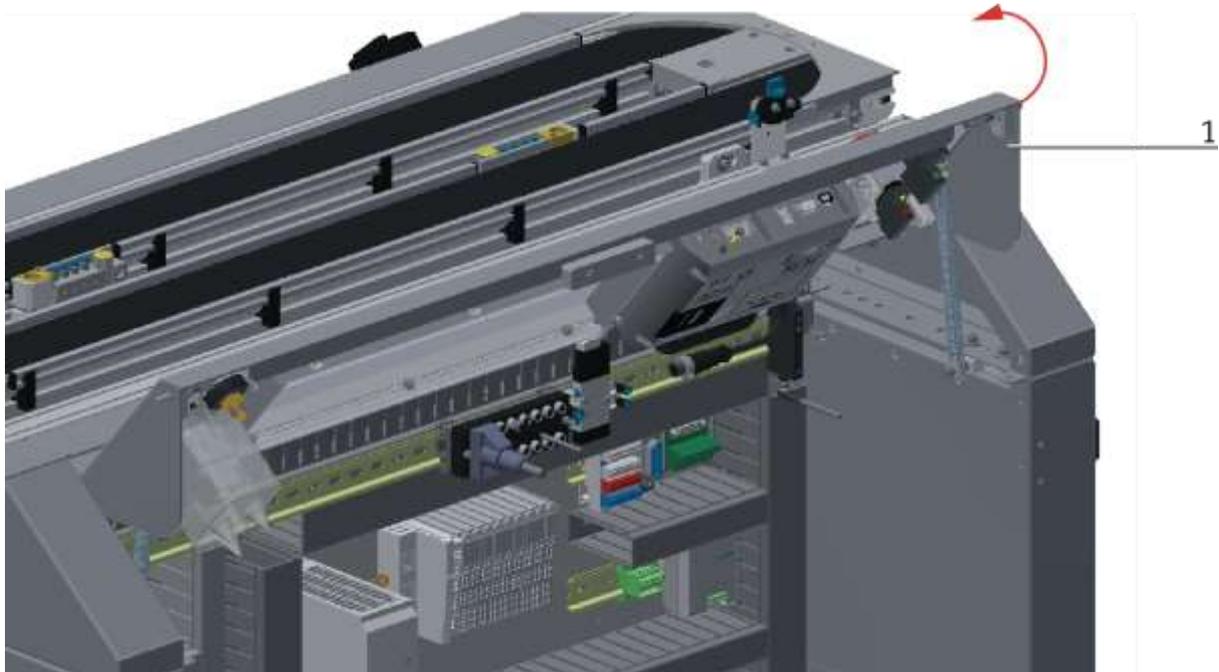


Illustration similar

1. Grip the panel at the bottom and fold it up

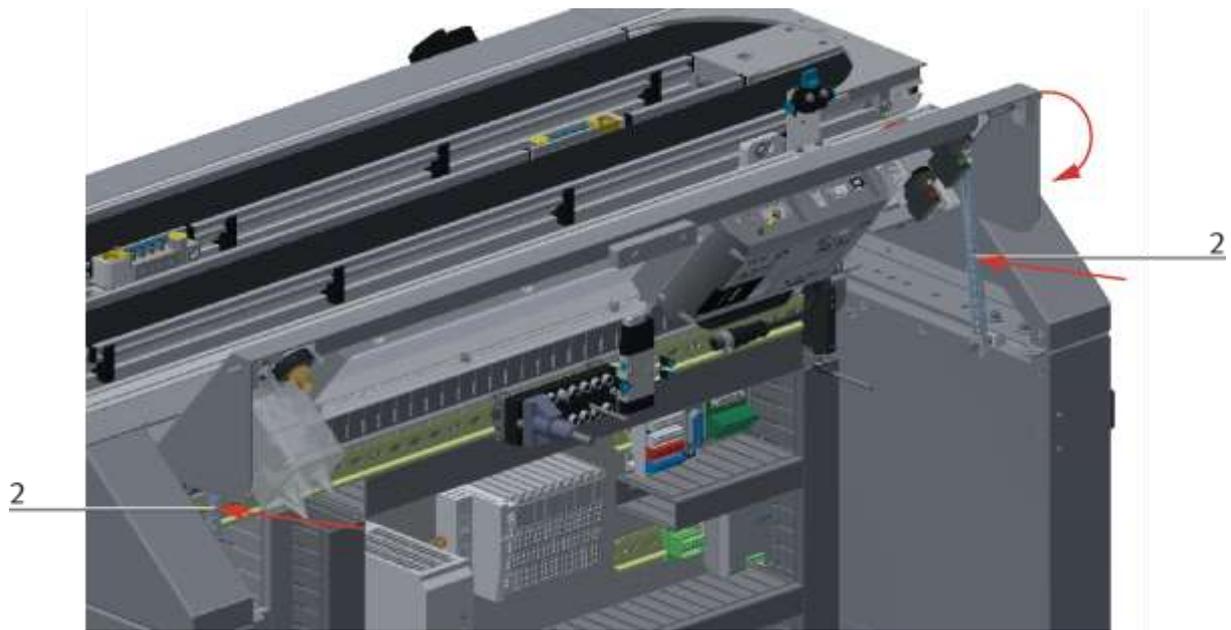


Illustration similar

2. Push the springs back in the middle and fold down the control panel

## 10 Message texts and interactive error messages at the HMI

In general, there are three different reporting classes. These are designed as follows

- Message class 0 (displayed red in the message line)
  - the program is immediately stopped and the automatic mode is terminated
  - the cause of the error has to be fixed
  - Then acknowledge the fault and restart the station
- Message class 1 (displayed red in the message line)
  - the program and the automatic mode are stopped at the end of the cycle
  - the cause of the error has to be fixed
  - Then acknowledge the fault and restart the station
- Message class 2 (displayed yellow in the message line)
  - the program and the automatic mode are executed further
  - If the cause of the fault is fixed, the error is automatically acknowledged
- Note
  - Displayed on the HMI but not processed in MES

### 10.1 Message texts


Actual there are no message texts available.

## 10.2 Interactive error messages

### 10.2.1 Default operation

Interactive messages are displayed via a pop-up window at HMI

The Pop Up has three buttons.

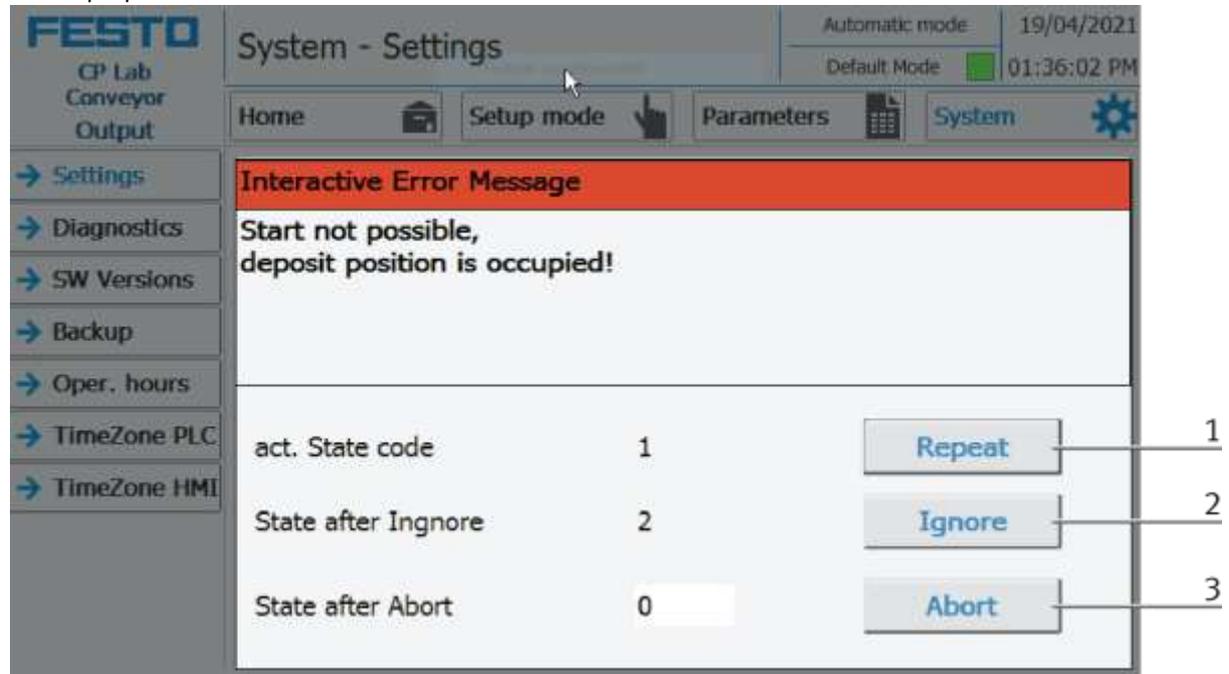


Example application module output - interactive error message in default mode

Position	Note
1	Repeat - An attempt is made to run the application again.
2	Ignore – The error status is ignored; the workpiece carrier receives the status code as indicated in the transition table in the "Initial status" column. The application is no longer executed.
3	Abort – The error status is ignored; the workpiece carrier receives the status code as shown in the input / output field next to the value displayed. This can be changed in this interactive error message window.

### 10.2.2 MES Operation

Interactive messages are displayed via a pop-up window at HMI

The Pop Up has four buttons.

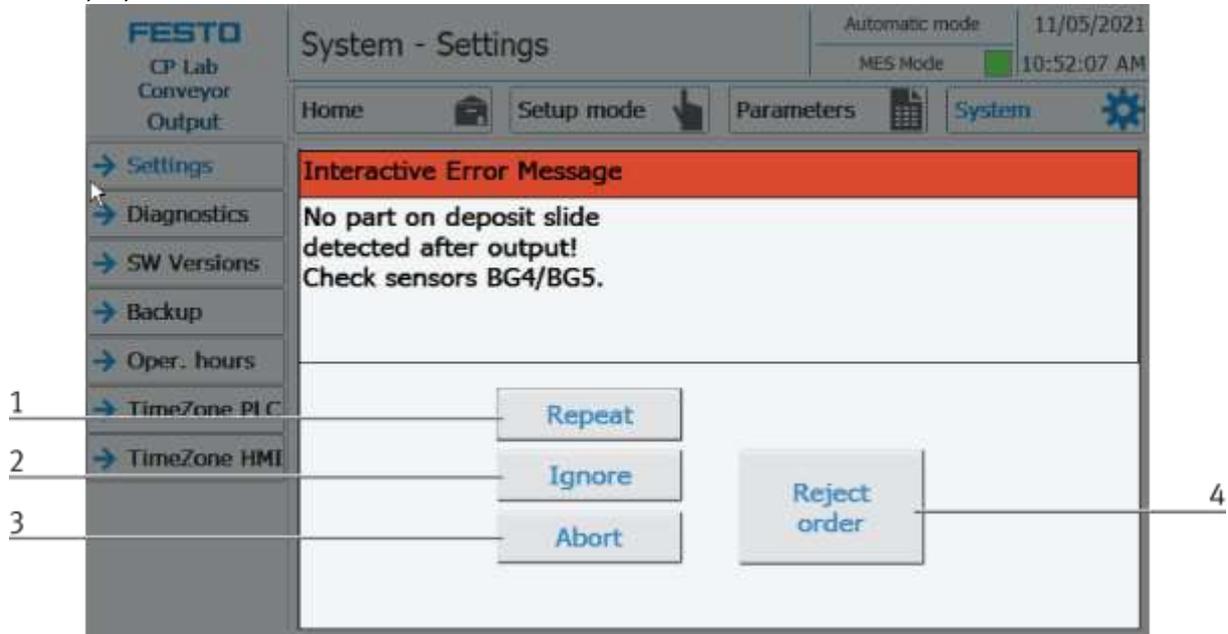

Example application module output - interactive error message in default mode

Position	Note
1	Repeat - An attempt is made to run the application again with the same parameters.
2	Ignore – The application is not executed, but is treated in the MES as if the order step had been executed without errors.
3	Abort – The application is no longer executed. In the MES, this order position is terminated with an error and canceled, depending on whether an error step has been defined or not.
4	Reject order - the application will not be executed. In the MES, the step of this order position is reset and restarted the next time the workpiece carrier arrives.

### 10.2.3 General

Value	Text	Fix error
100	Order aborted with errors!	Start order again

## 11 Service and cleaning

The components and systems from Festo Didactic are maintenance-free.

At regular intervals you should have checked:

- the lenses of the optical sensors, fibre optics and reflectors
- the active surface of the proximity switch
- the entire station

can be cleaned with a soft, lint-free cloth or brush.

	<p style="text-align: right;"><b><i>NOTE</i></b></p> <p>Do not use aggressive or abrasive cleaners.</p>
---	---

Protective covers must not be cleaned with alcoholic cleaning agents, there is a risk of embrittlement.

## 12 Further information and updating

Further information and updates on the technical documentation of Festo Didactic components and systems can be found on the Internet at:

[www.ip.festo-didactic.com](http://www.ip.festo-didactic.com)



## 13 Disposal

	<p style="text-align: center;"><b><i>NOTE</i></b></p> <p>Electronic waste contains recyclable materials and must not be disposed of with the domestic waste. Bring electronic waste to a designated municipal collection point.</p>
---	---

**Festo Didactic SE**

Rechbergstraße 3  
73770 Denkendorf  
Germany



+49 711 3467-0



+49 711 34754-88500



[www.festo-didactic.com](http://www.festo-didactic.com)



[did@festo.com](mailto:did@festo.com)